
NOTES: USE FIGURED DIMENSIONS ONLY DO NOT SCALE FROM THE DRAWING ALL DIMENSIONS TO BE CHECK ON SITE AND ANY INCONSISTENCIES MUST BE REPORTED BACK TO THE ARCHITECT ALL WINDOW OPENING DIMENSIONS TO BE CHECK ON SITE AND CONFIRMED IN WRITING BEFORE BEGIN OF PRODUCTION ALL STRUCTURAL INFORMATION TO BE TAKEN FROM STRUCTURAL ENGINEER'S DRAWINGS

0

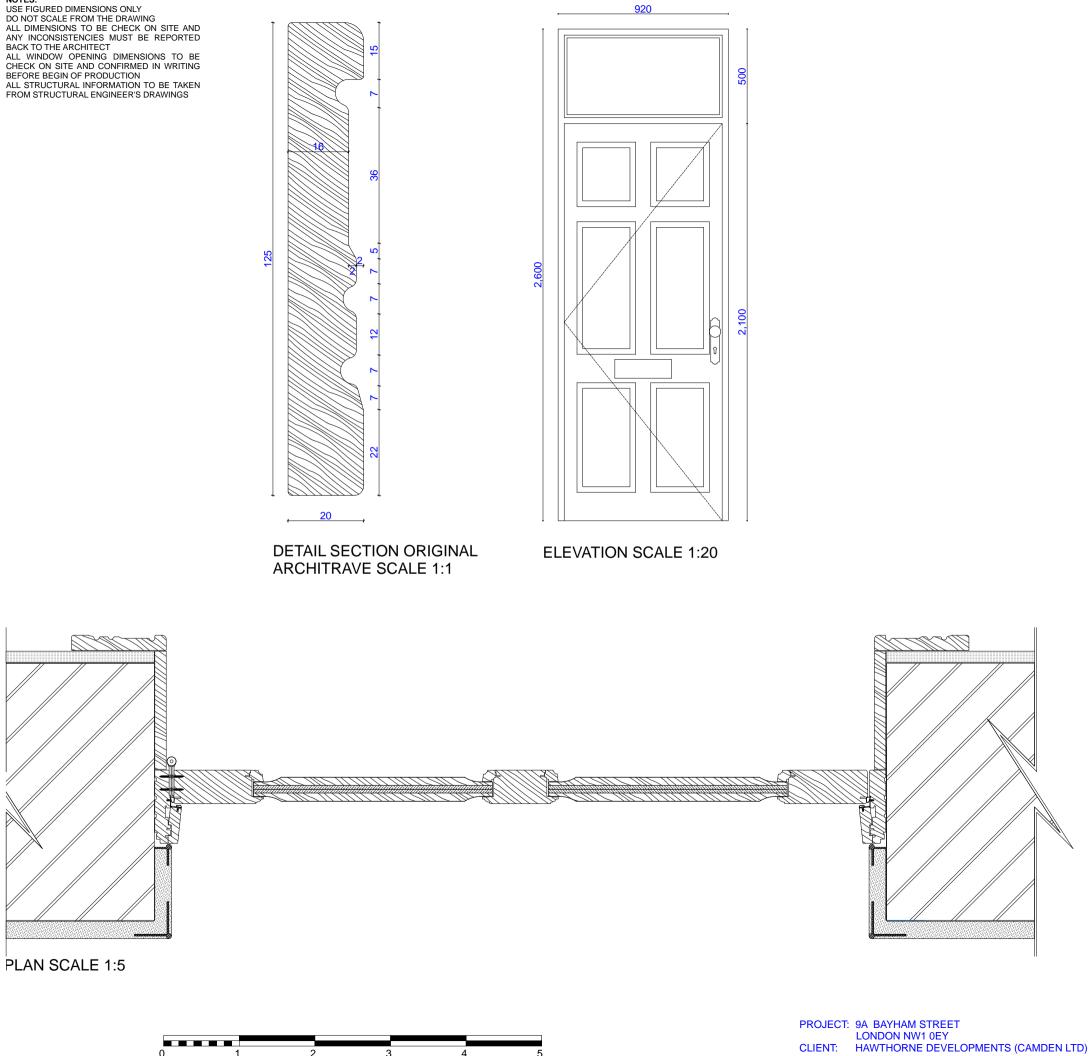

Scale: Drawn:

