


NOTE: THIS DETAIL IS TO BE READ IN CONJUNCTION WITH DETAILS D-J-WT-108 AND D-J-WT-109 FOR INTERFERENCE WITH EXTERNAL WALL TYPE WT1/WT2 AND D-J-WT-301 FOR WINDOW JAMB

ACCREDITED DETAIL	NEAREST TFW-WD-01&02
ROBUST DETAIL	-

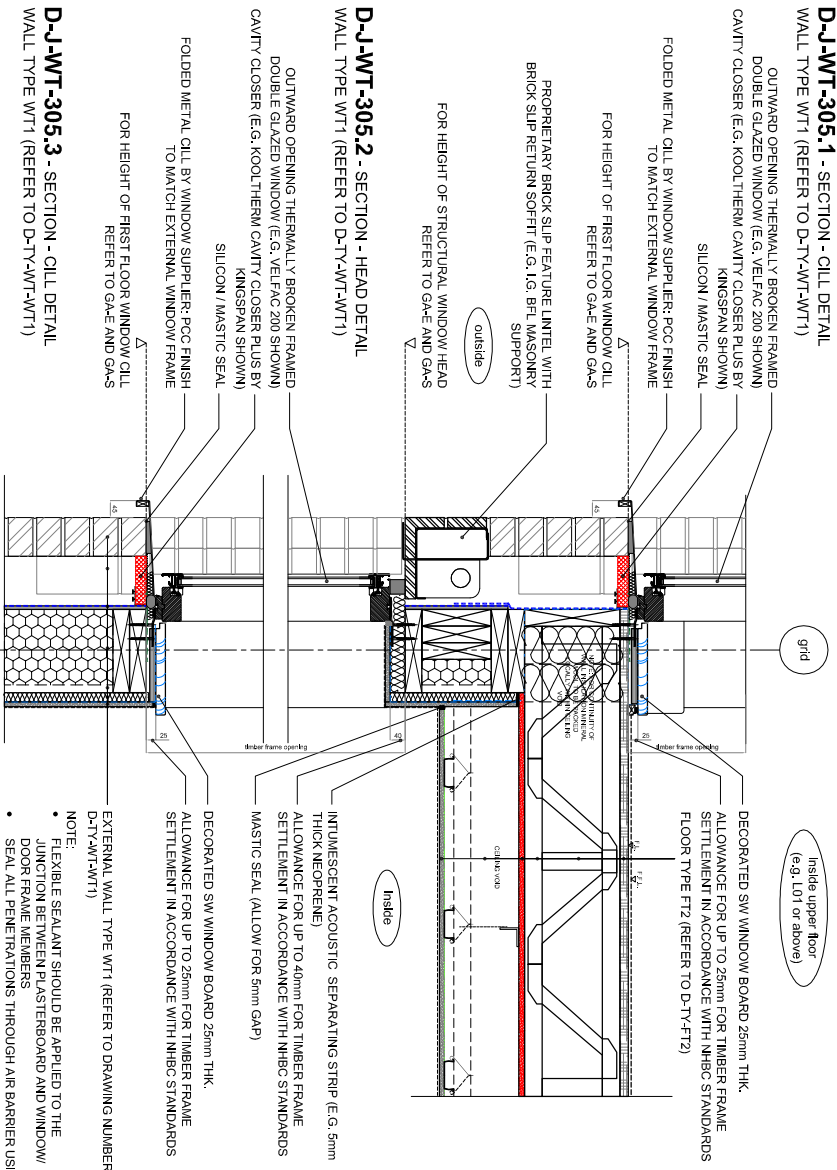

D-J-WT-305.1 - SECTION - CILL DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)

D-J-WT-305.2 - SECTION - HEAD DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)


ACCREDITED DETAIL	-
ROBUST DETAIL	-

D-J-WT-305.3 - SECTION - CILL DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)

Example location: (L00/01/02 GL B)
DETAIL - Block B2 - D-J-WT-305 - Window Head / Cill - Outward Opening

NOTE: THIS DETAIL IS TO BE READ IN CONJUNCTION WITH DETAILS D-J-WT-101 AND D-J-WT-102 FOR INTERFERENCE WITH EXTERNAL WALL TYPE WT1/WT2 AND D-J-WT-301 FOR WINDOW JAMB AND D-J-WT-302 FOR WINDOW HEAD

ACCREDITED DETAIL	-
ROBUST DETAIL	-

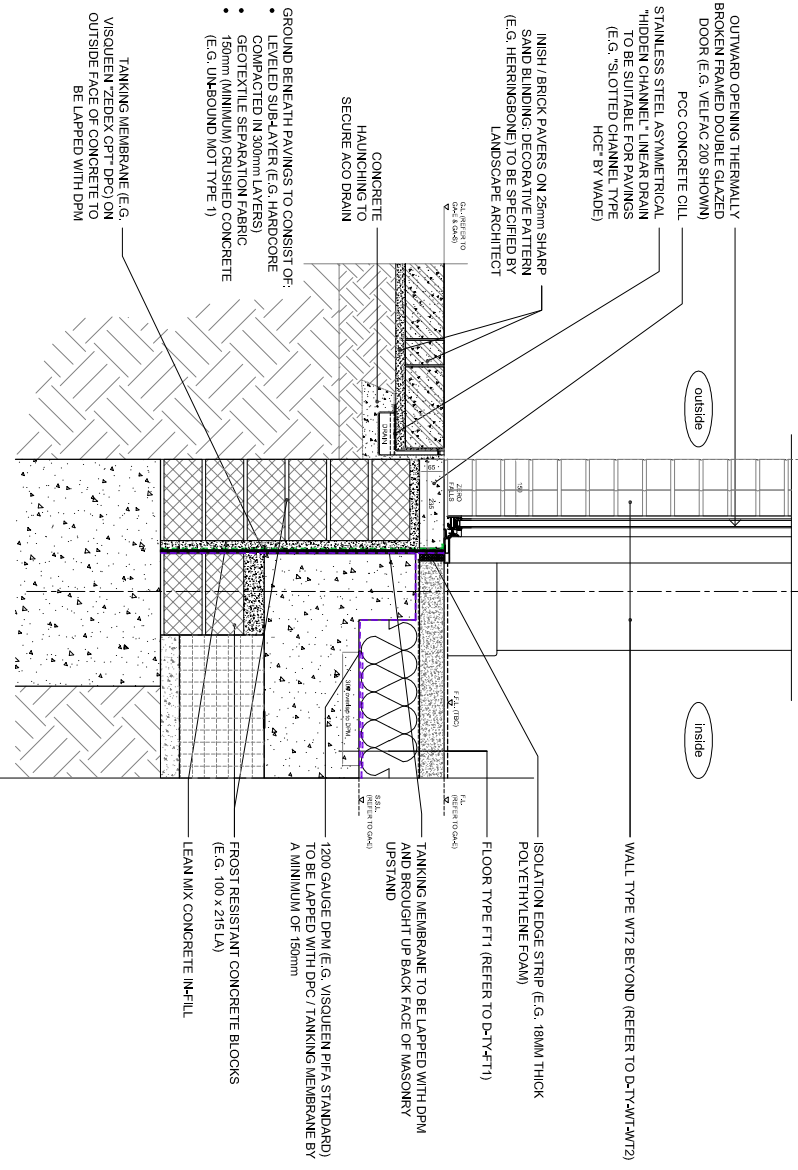


D-J-WT-307 - SECTION - HEAD DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)

Example location: (L00 GL B)
DETAIL - Block B2 - D-J-WT-307 - GF Window Cill - Outward Opening

NOTE: THIS DETAIL IS TO BE READ IN CONJUNCTION WITH DETAILS D-J-WT-108 AND D-J-WT-109 FOR INTERFERENCE WITH EXTERNAL WALL TYPE WT1/WT2 AND D-J-WT-302 FOR WINDOW JAMB

ACCREDITED DETAIL	NEAREST TFW-WD-01&02
ROBUST DETAIL	-

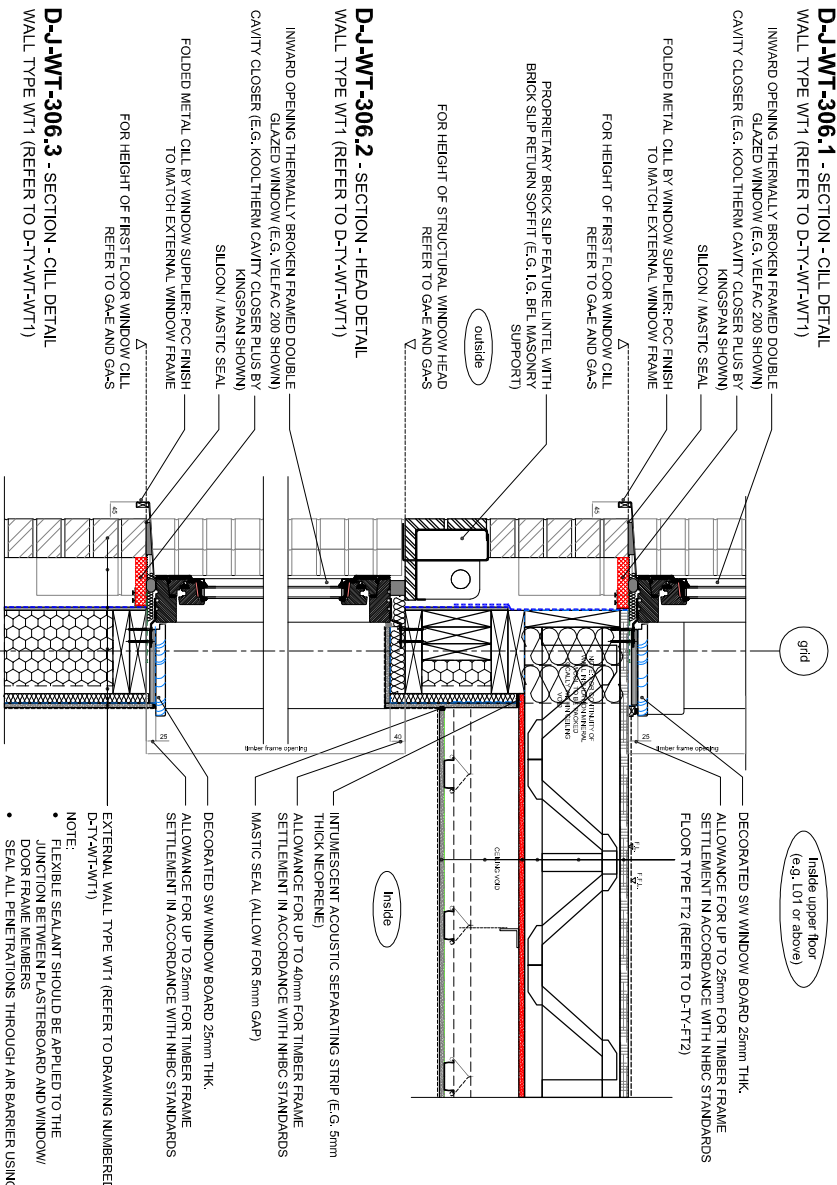

D-J-WT-306.1 - SECTION - CILL DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)


D-J-WT-306.2 - SECTION - HEAD DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)

D-J-WT-306.3 - SECTION - CILL DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)

Example location: (L01 GL A)
DETAIL - Block B2 - D-J-WT-306 - Window Head / Cill - Inward Opening

NOTE: THIS DETAIL IS TO BE READ IN CONJUNCTION WITH DETAILS D-J-WT-203 FOR INTERFERENCE WITH EXTERNAL WALL TYPE WT1 AND D-J-WT-301 FOR WINDOW JAMB AND D-J-WT-305 FOR WINDOW HEAD

ACCREDITED DETAIL	-
ROBUST DETAIL	-

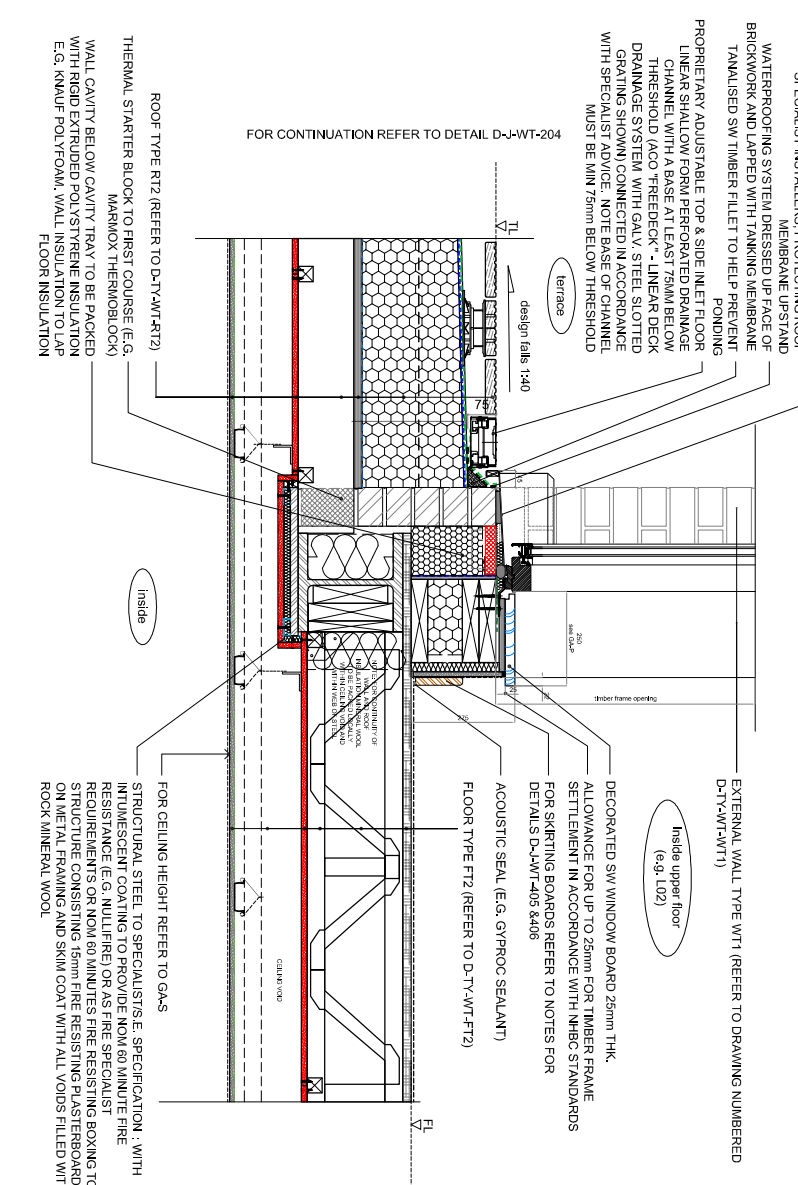

D-J-WT-308 - SECTION - HEAD DETAIL
WALL TYPE WT1 (REFER TO D-TV-WT-WT1)

Example location: (L02 GL 01/02-AB)
DETAIL - Block B2 - D-J-WT-308 - Stepped Window Cill - Outward Opening