

1. Do not scale this drawing.

 For structural dimensions and details see Structural Engineers' drawings.
All dimensions to be checked on site proir to commencement of any works or preparation of any shop drawings. Dimensions are supplied for

tender purposes only. 4. All errors in co-ordinates, levels and dimensions, are to be reported to the Architect/ Contract Administrator.

5. All temporary works to be responsibility of the Contractor.

6. This drawing to be read in conjunction with all relevant Architect's drawings and specifications and with other Consultant's Information.



Area subject to application

