

Notes


The Contractor is to check and verify all building and site dimensions, levels and sewer invert levels at connection points before work starts.

This drawing must be read with and checked against all other standard specifications and any structural or other specialist drawings provided.


The Contractor is to comply in all respects with the current Building Regulations whether or not specifically stated on these drawings.

This drawing is not intended to show details of foundation or ground conditions. Each area of ground relied upon to support the structure decided must be investigated by the Contractor and suitable methods of foundation must be provided.


© This drawing remains the copyright of The JTS Partnership LLP.

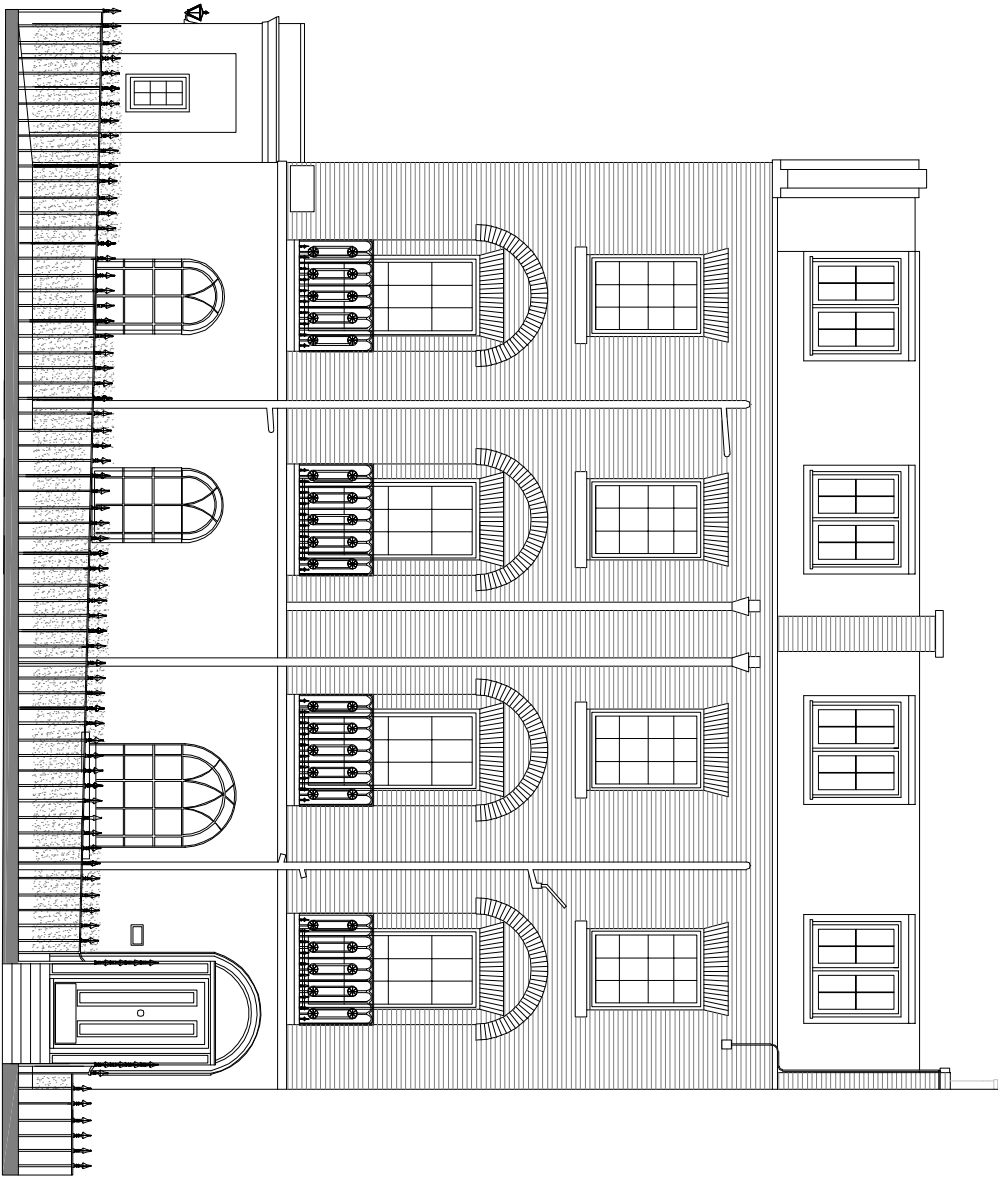

Front Elevation
Scale: 1:100 @ A1

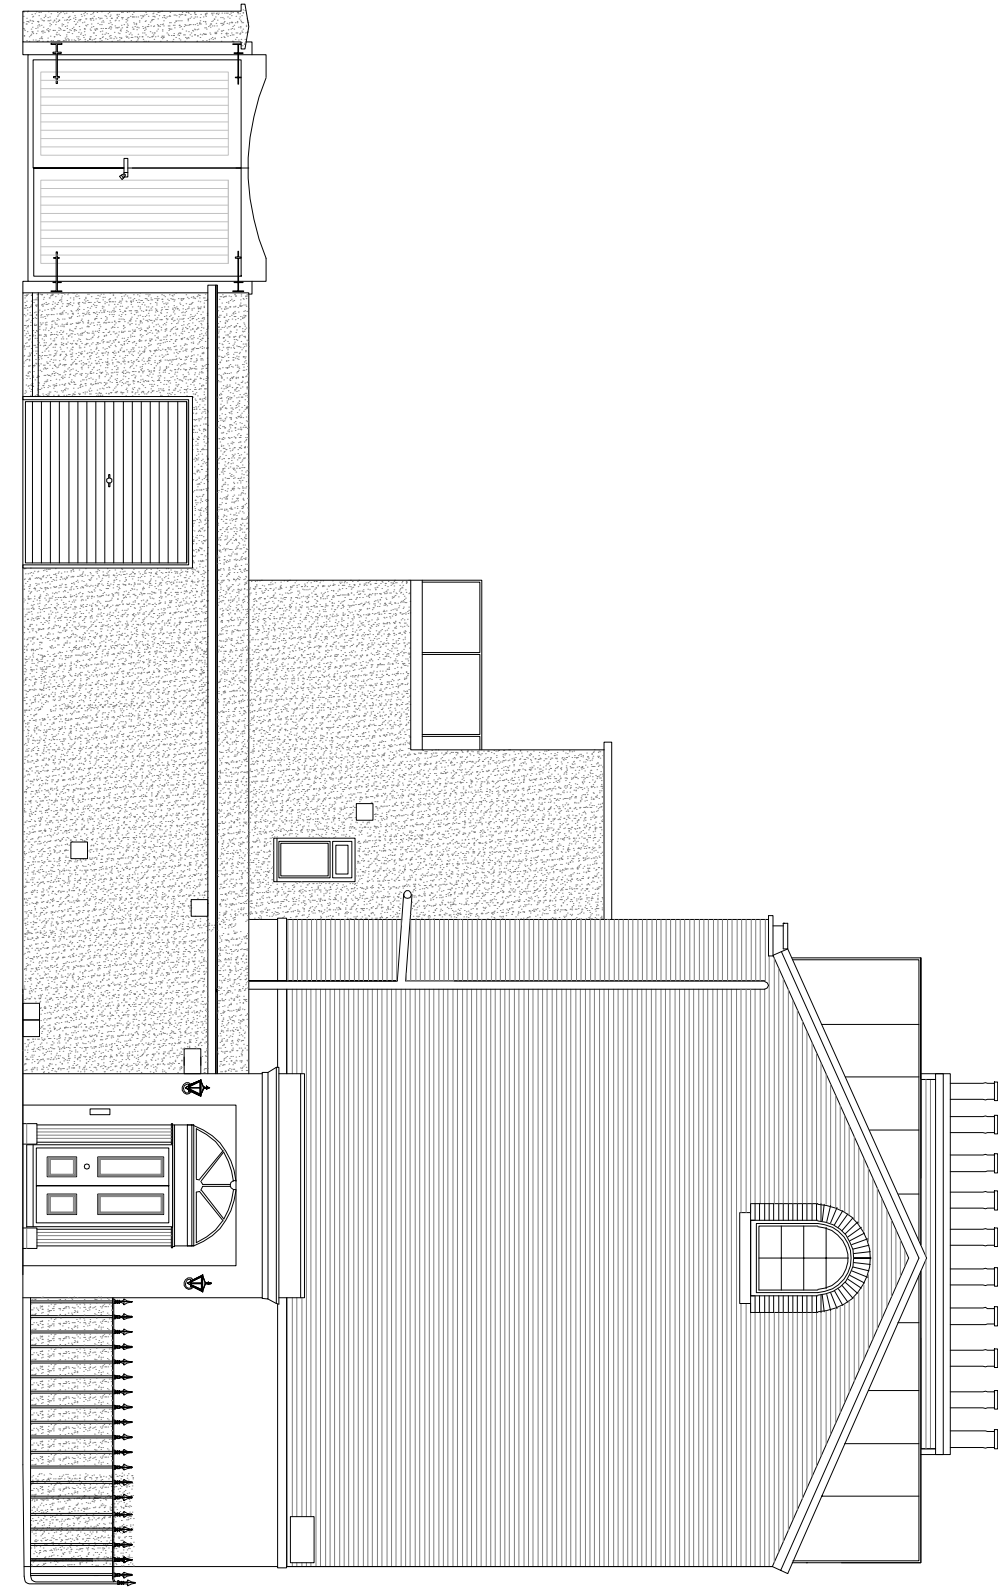

Side Elevation
Scale: 1:100 @ A1

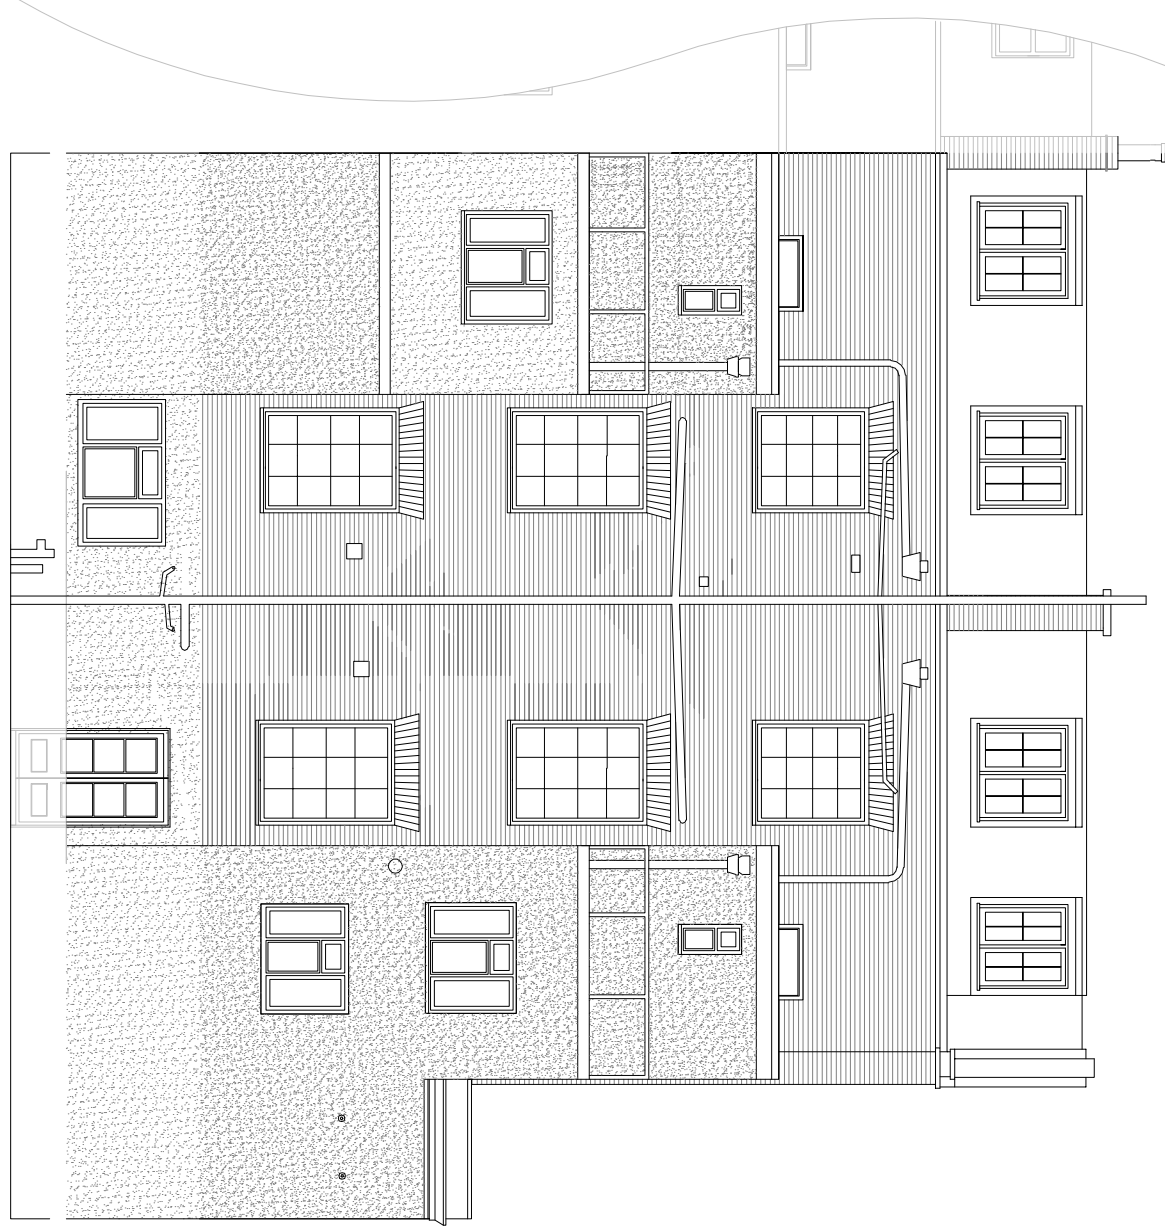


Rear Elevation
Scale: 1:100 @ A1


Scale in Metres




0 2 4 6 8 10

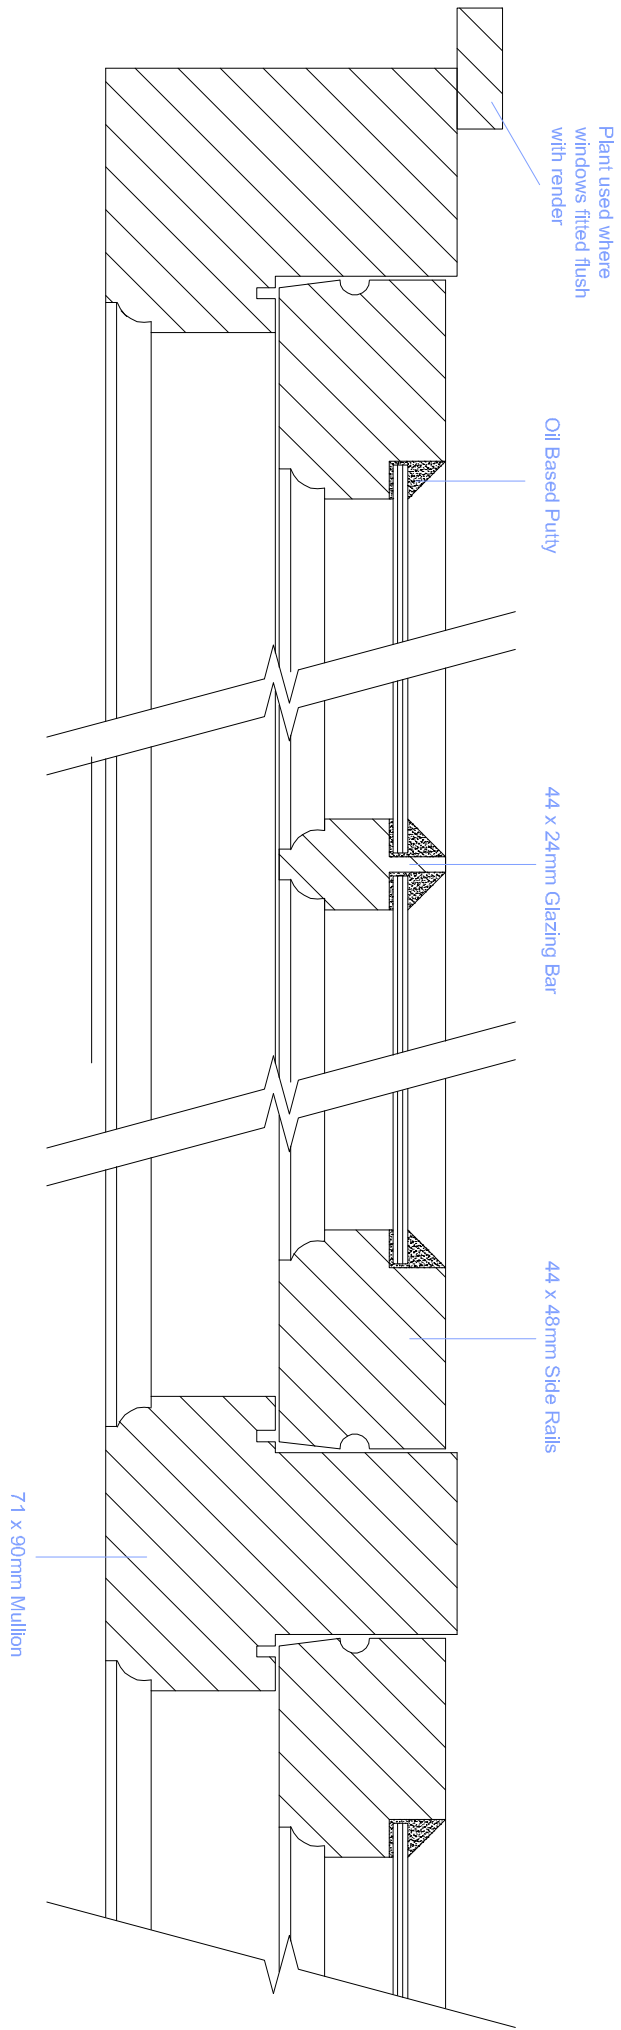

Horizontal Section
Scale: 1:2 @ A1

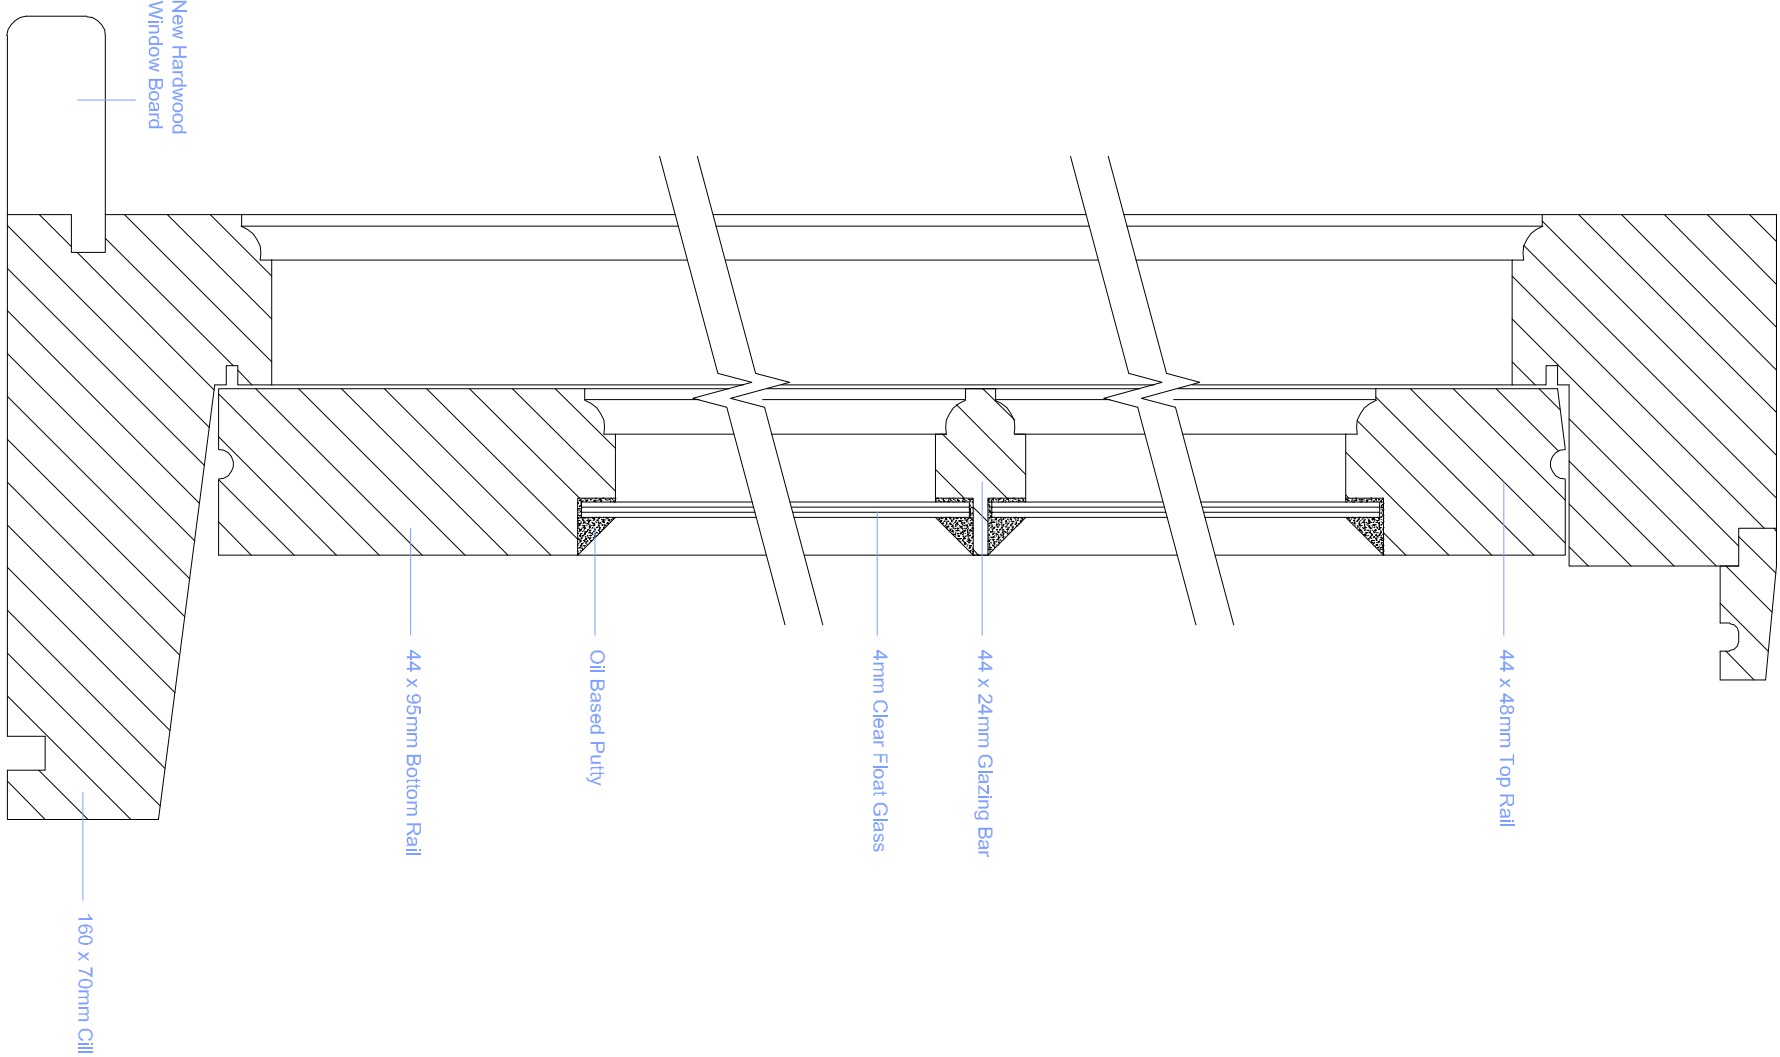


Vertical Section
Scale: 1:2 @ A1

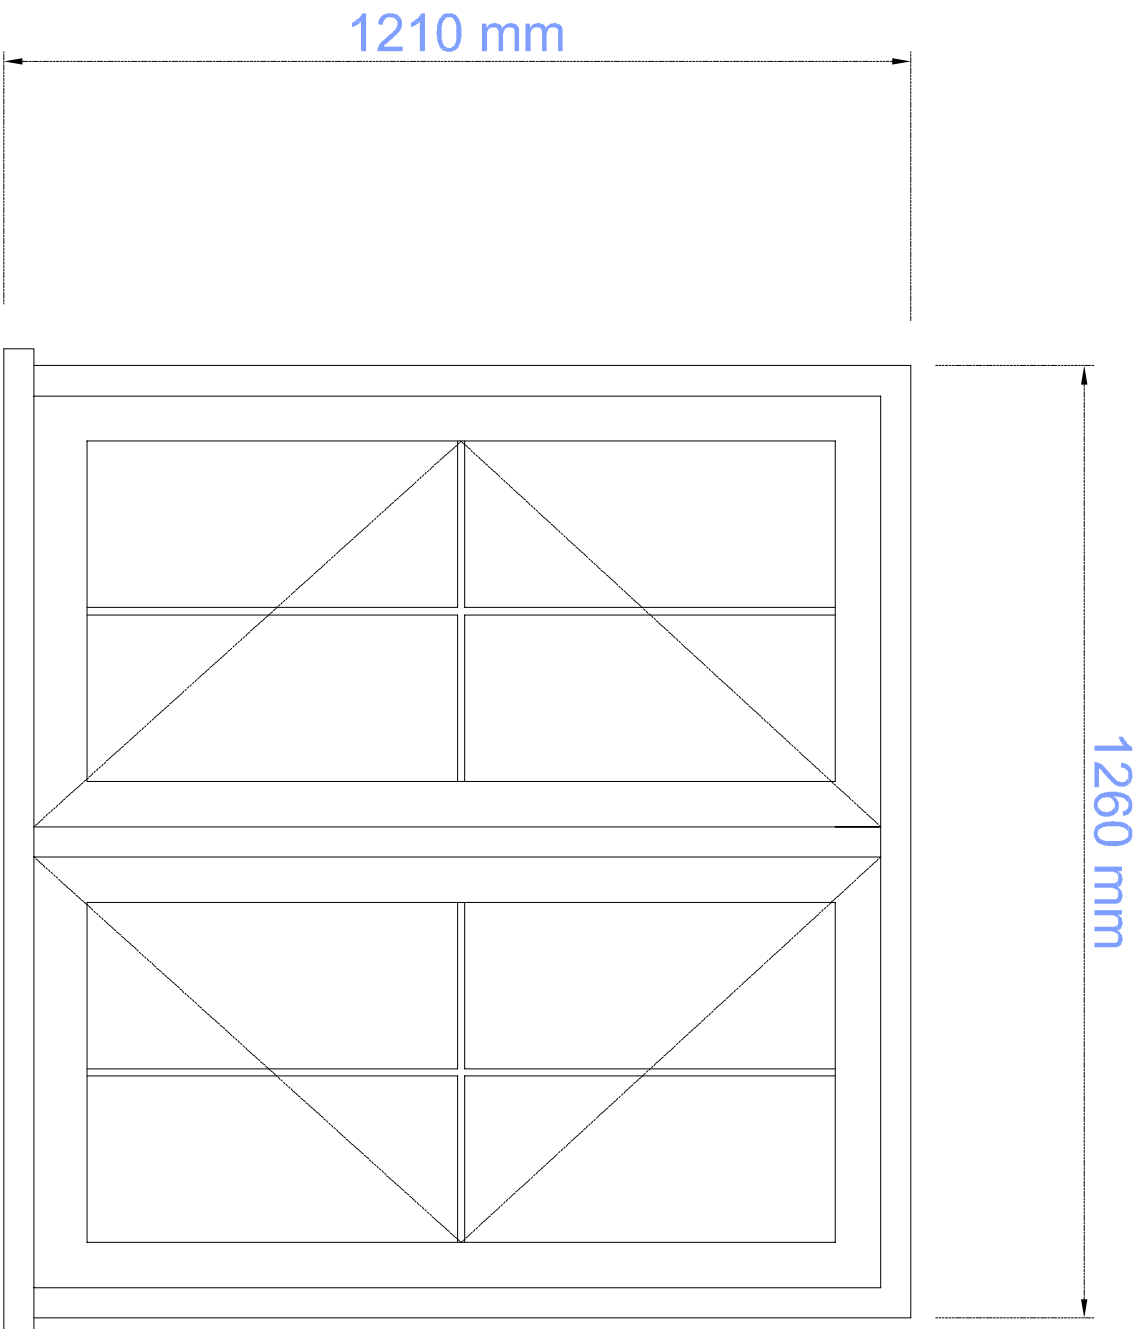

Window Elevation
Scale: 1:10 @ A1

 Scale in Metres



0 0.25 0.5 0.75 1 1.25

REVISIONS			
REV	DATE	BY	DESCRIPTION