
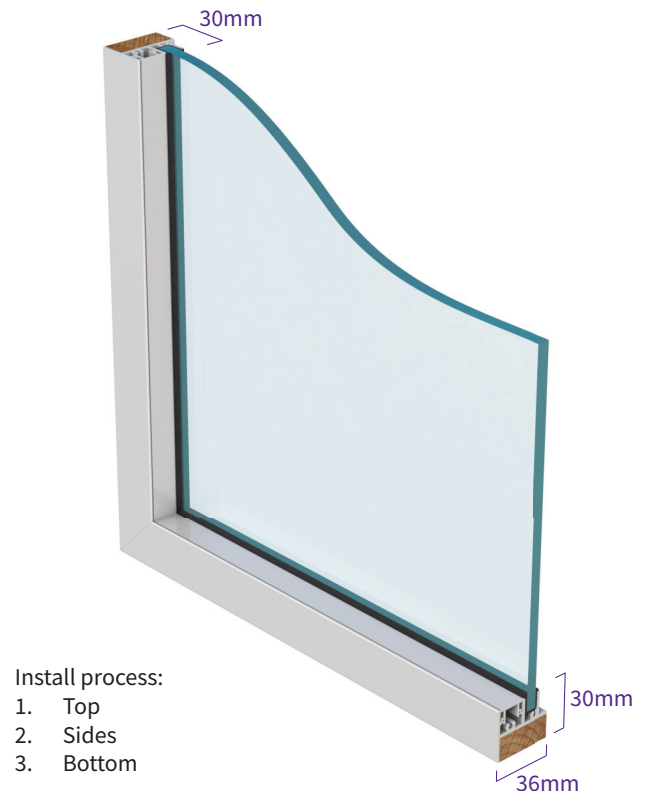
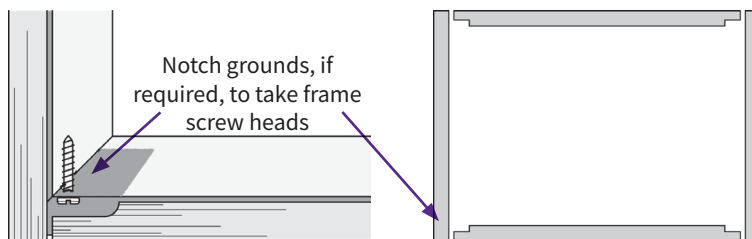


This is a typical fixing detail for Series 46 slimline fixed light units

1. TIMBER GROUNDS

Apply generous joint of acrylic caulk to ensure seal

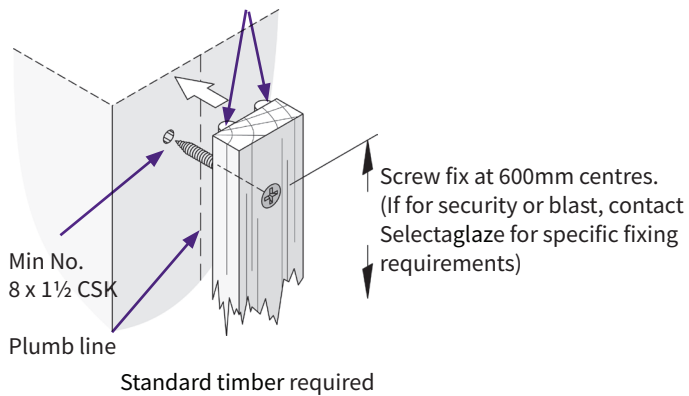


Install process:


1. Top
2. Sides
3. Bottom

2. ALUMINIUM FRAMED FIXED PANEL

- Prior to installing the panel, vacuum the cavity and thoroughly clean the glass

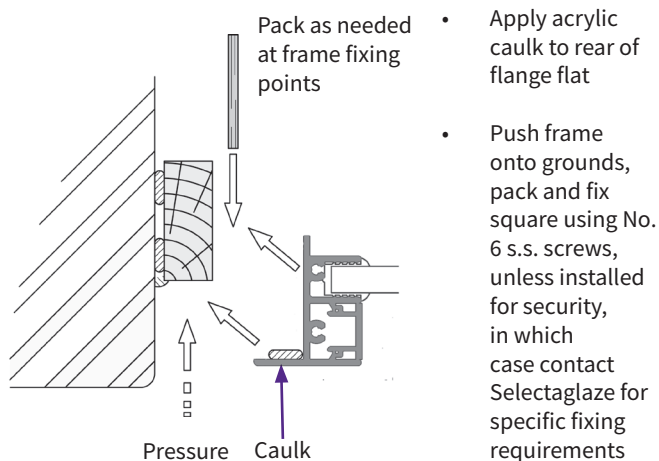


- Install your fixed panel and then clip in the covered beads that are supplied, to conceal the fixing screws

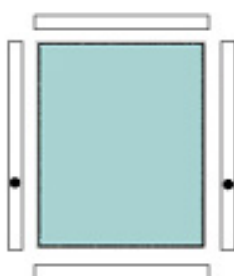

- Clip in Beads - the height beads have a removable plastic grommet which when removed, exposes a hole that can be used for bead extraction

- Carefully dress mitres flat
- Clean down frame and glass

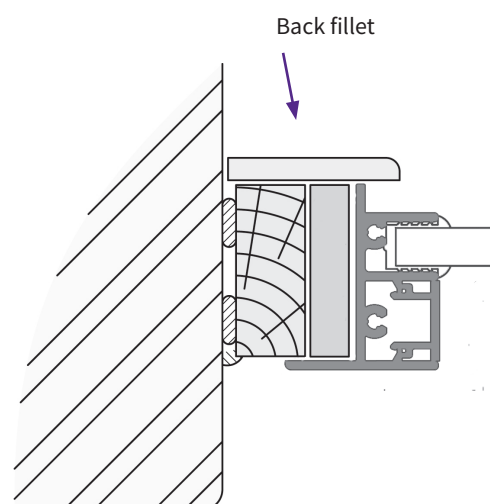

- If the panel has a packing gap that exceeds 6mm, prior to installing the panel, fix back fillet to the rear of the timber