


for the attn of Ed Watson

15 WADHAM GARDENS LONDON NW3

PRELIMINARY METHOD STATEMENT FOR THE CONSTRUCTION OF THE PROPOSED BASEMENT

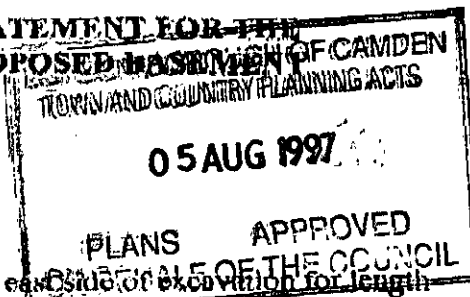

- 1.0 Strip off 300 mm of top soil
- 2.0 Sink 7000mm long augered piles on east side of excavation for length shown on excavation plan to retain excavated side
- 3.0 Carefully excavate basement area to a depth of 2000 and install trench sheeting, walings and props to all sides except for piled length
- 4.0 Carefully excavate basement area to formation level 3500mm below ground level
- 5.0 Extend trench sheeting and add further walings and props and blind formation area with 50mm concrete
- 6.0 Fix base slab reinforcement and cast concrete
- 7.0 Fix wall reinforcement and shutters and pour concrete to walls
- 8.0 Strike wall shutters and erect slab soffit shutters
- 9.0 Fix reinforcement to slab and cast concrete
- 10.0 Strike slab shutters
- 11.0 Apply external waterproof tanking to top of roof slab protect with 100 soft sand and backfill with 400mm of top soil and landscape

PE9700364