

3 Layers Felt 1st Layer Adhesive Board

Slaters

New Dormer

New Windows Make Etc

New Flashing

Slaters


Box Siding & Scaffolding





Box Siding

Start with Flashing on 1st Layer

TP 8401983R

TP 8401983 R1

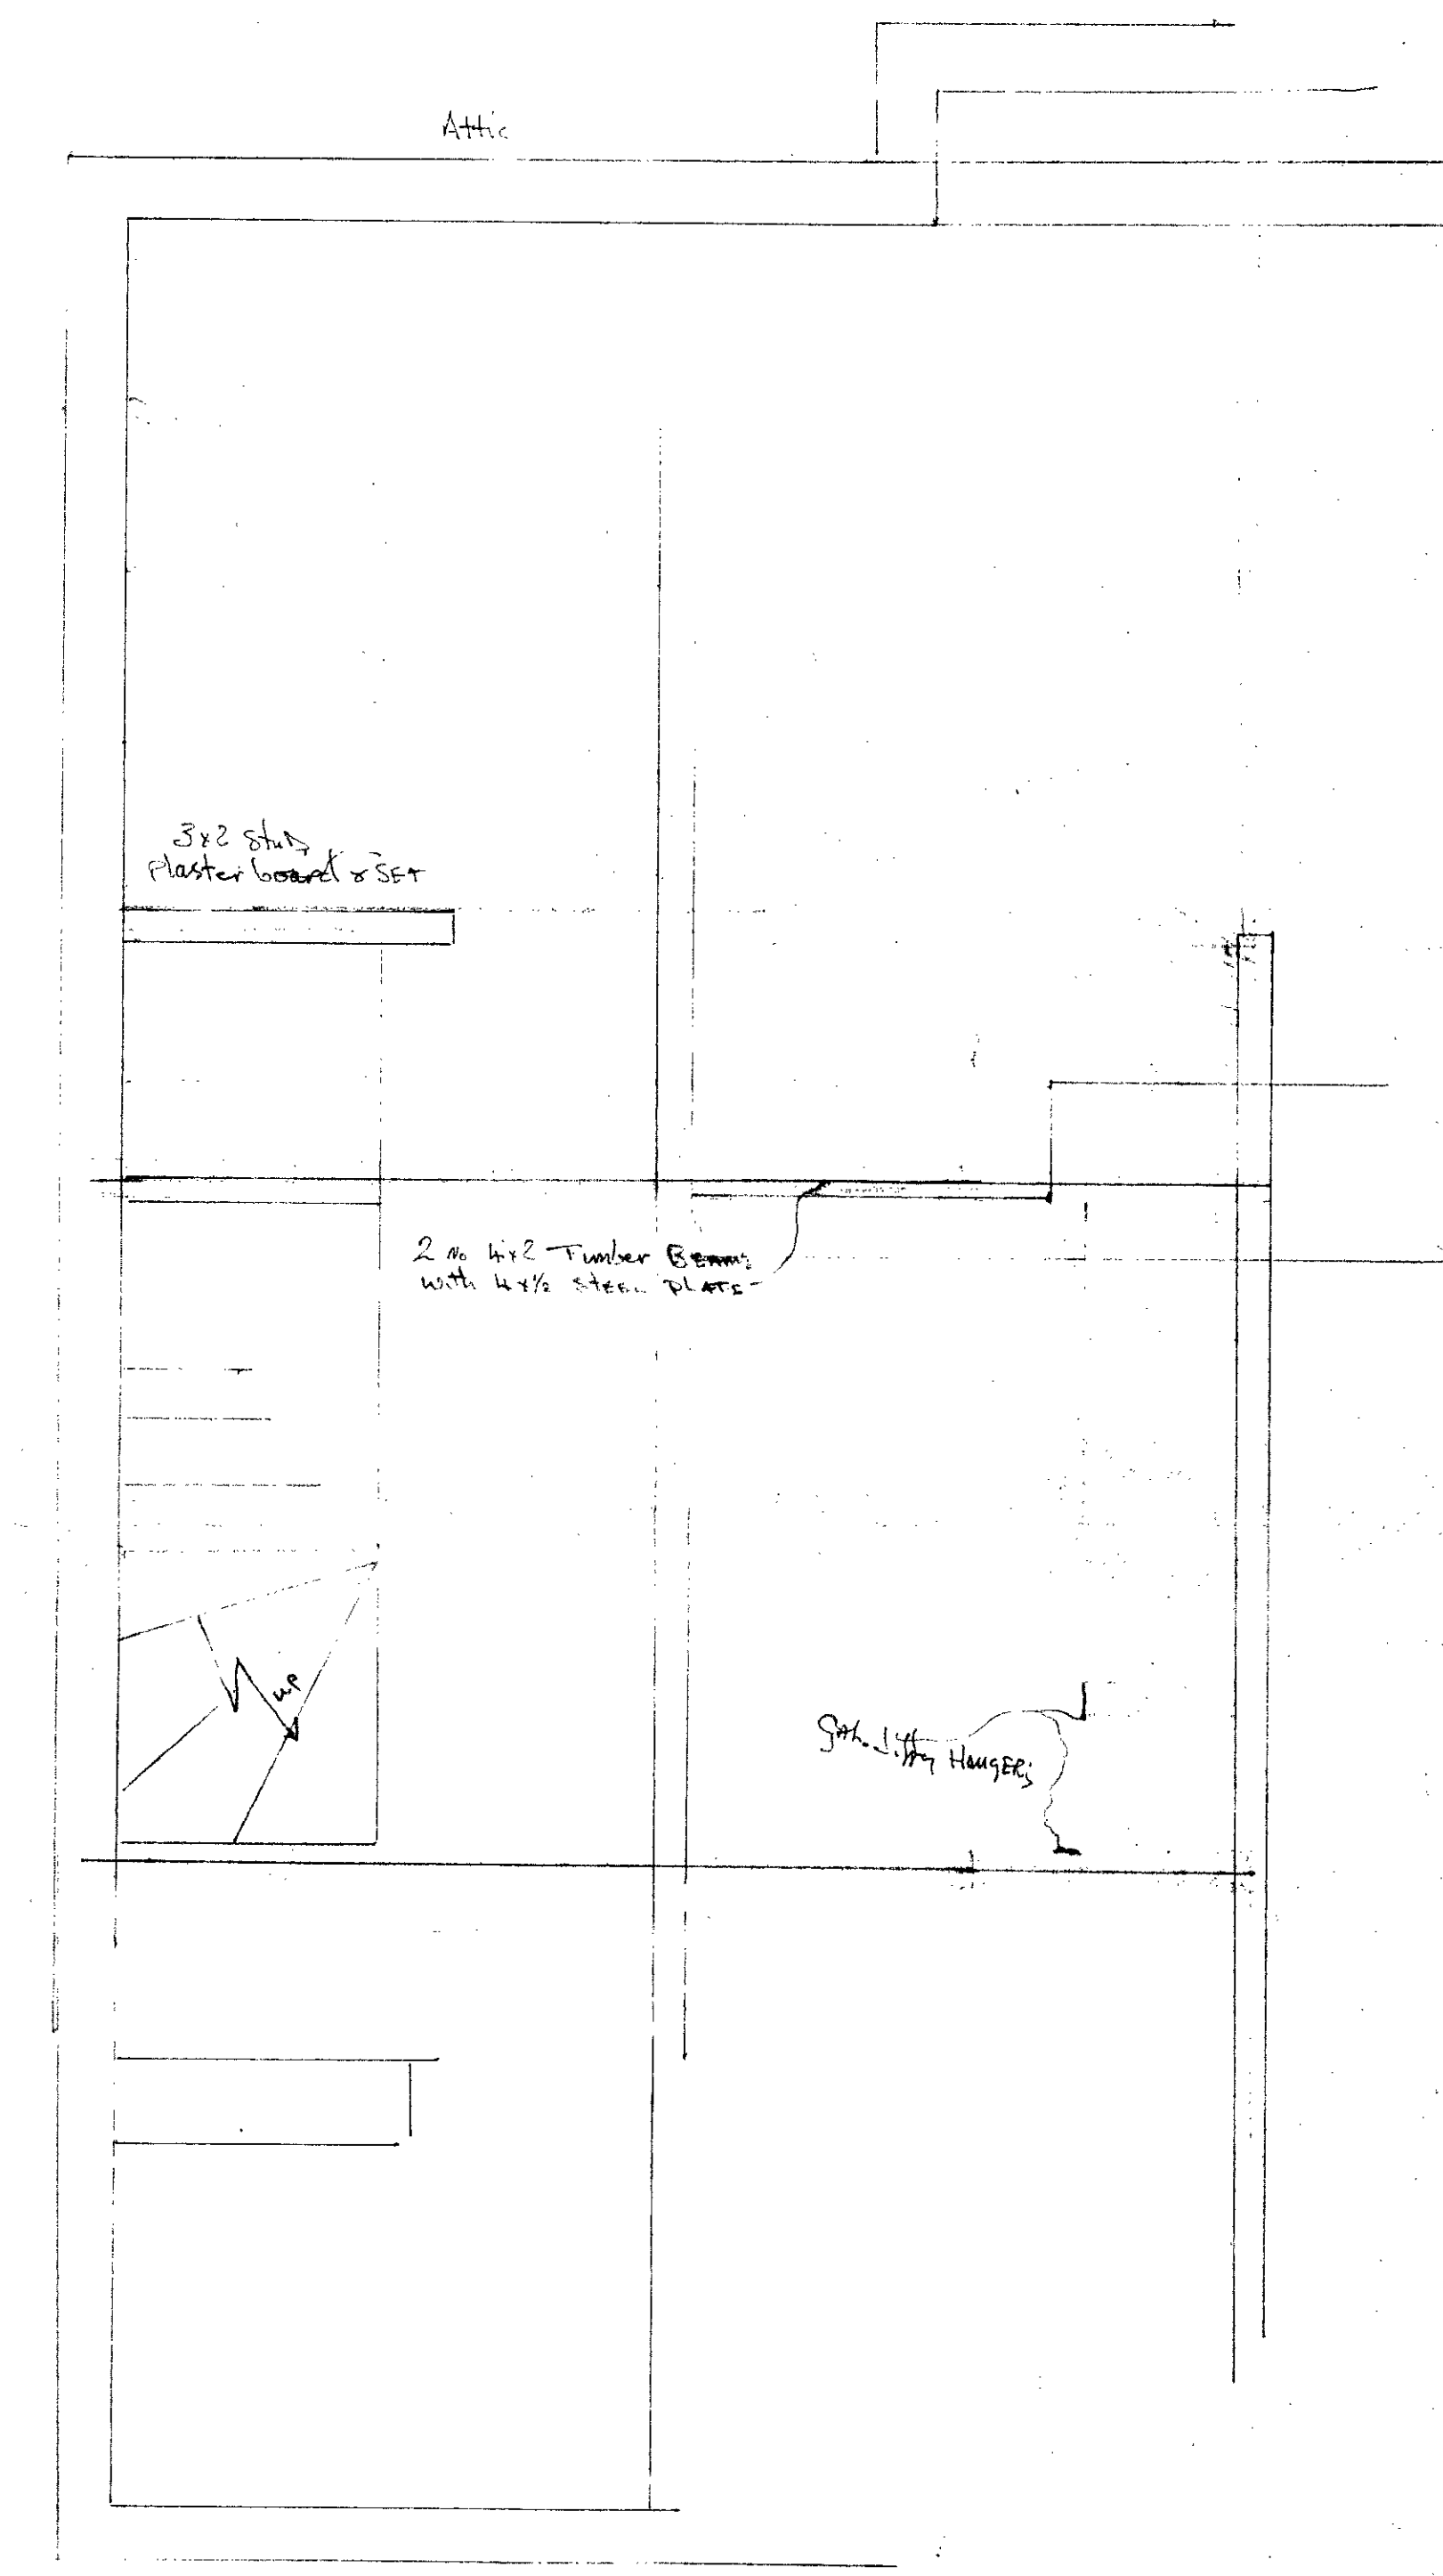

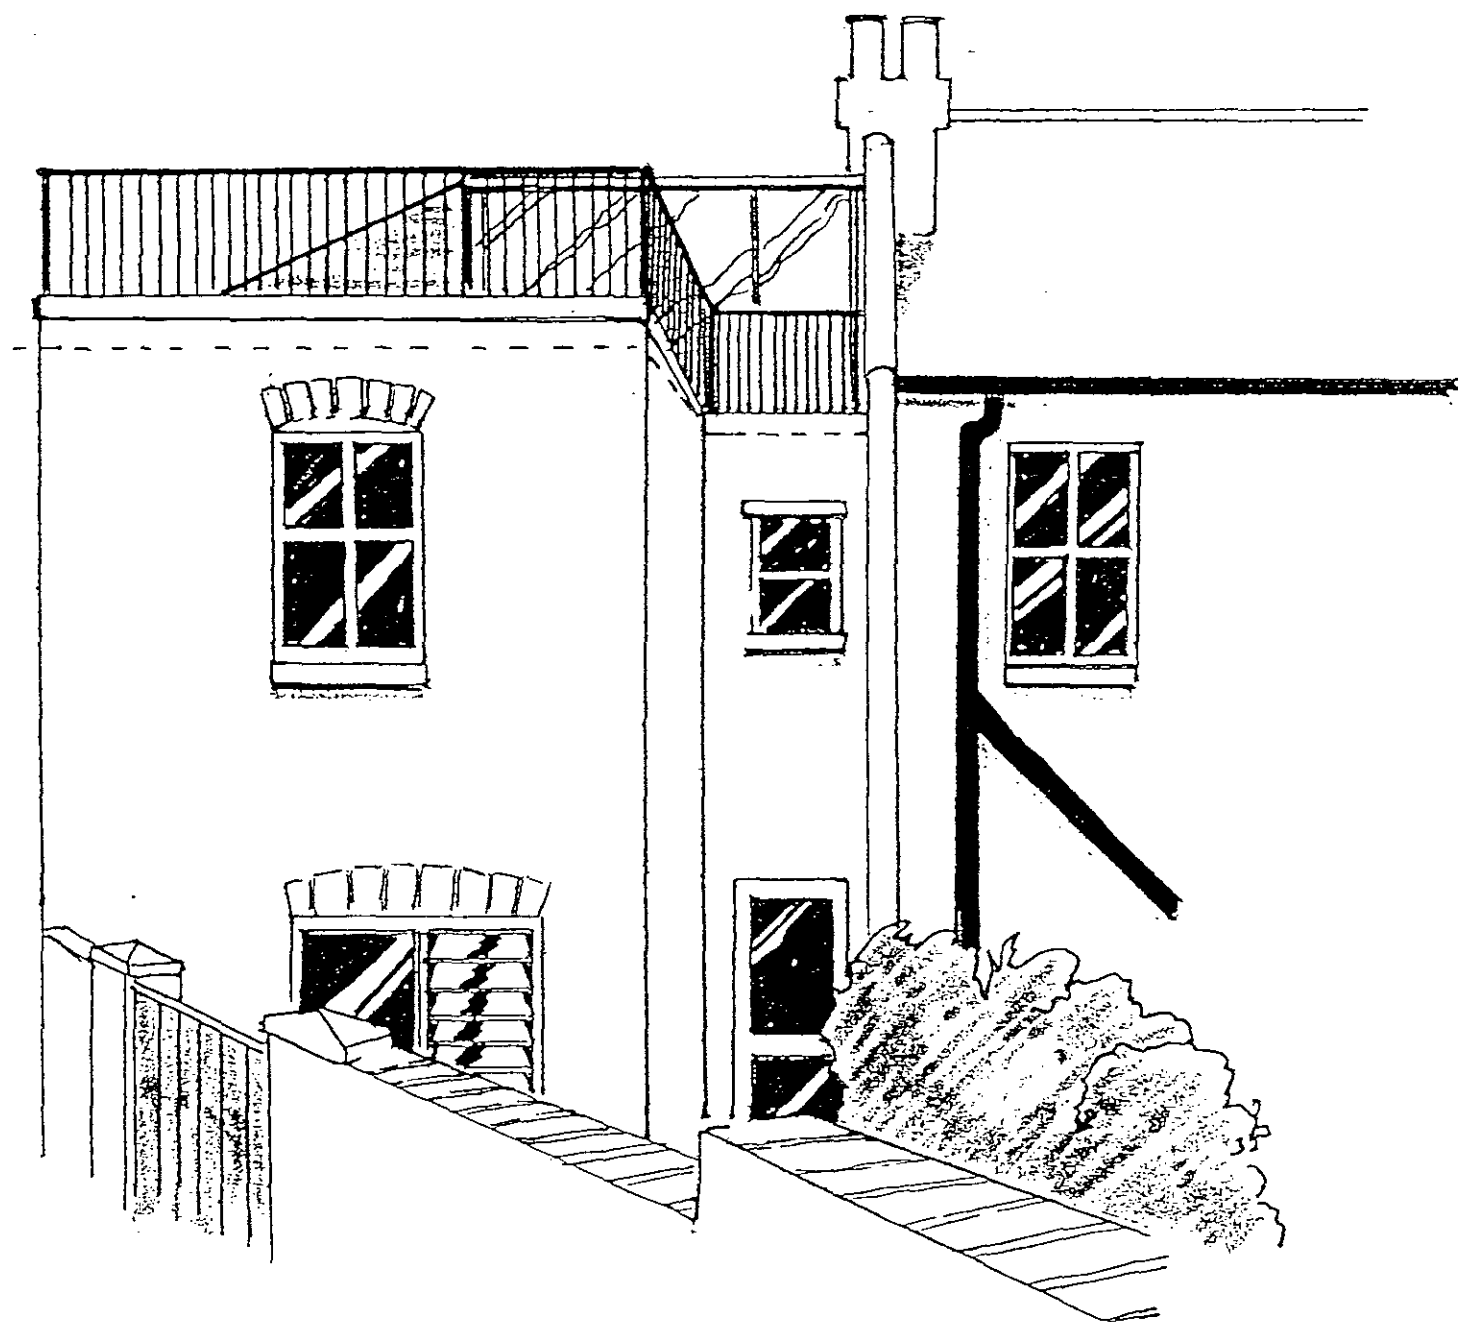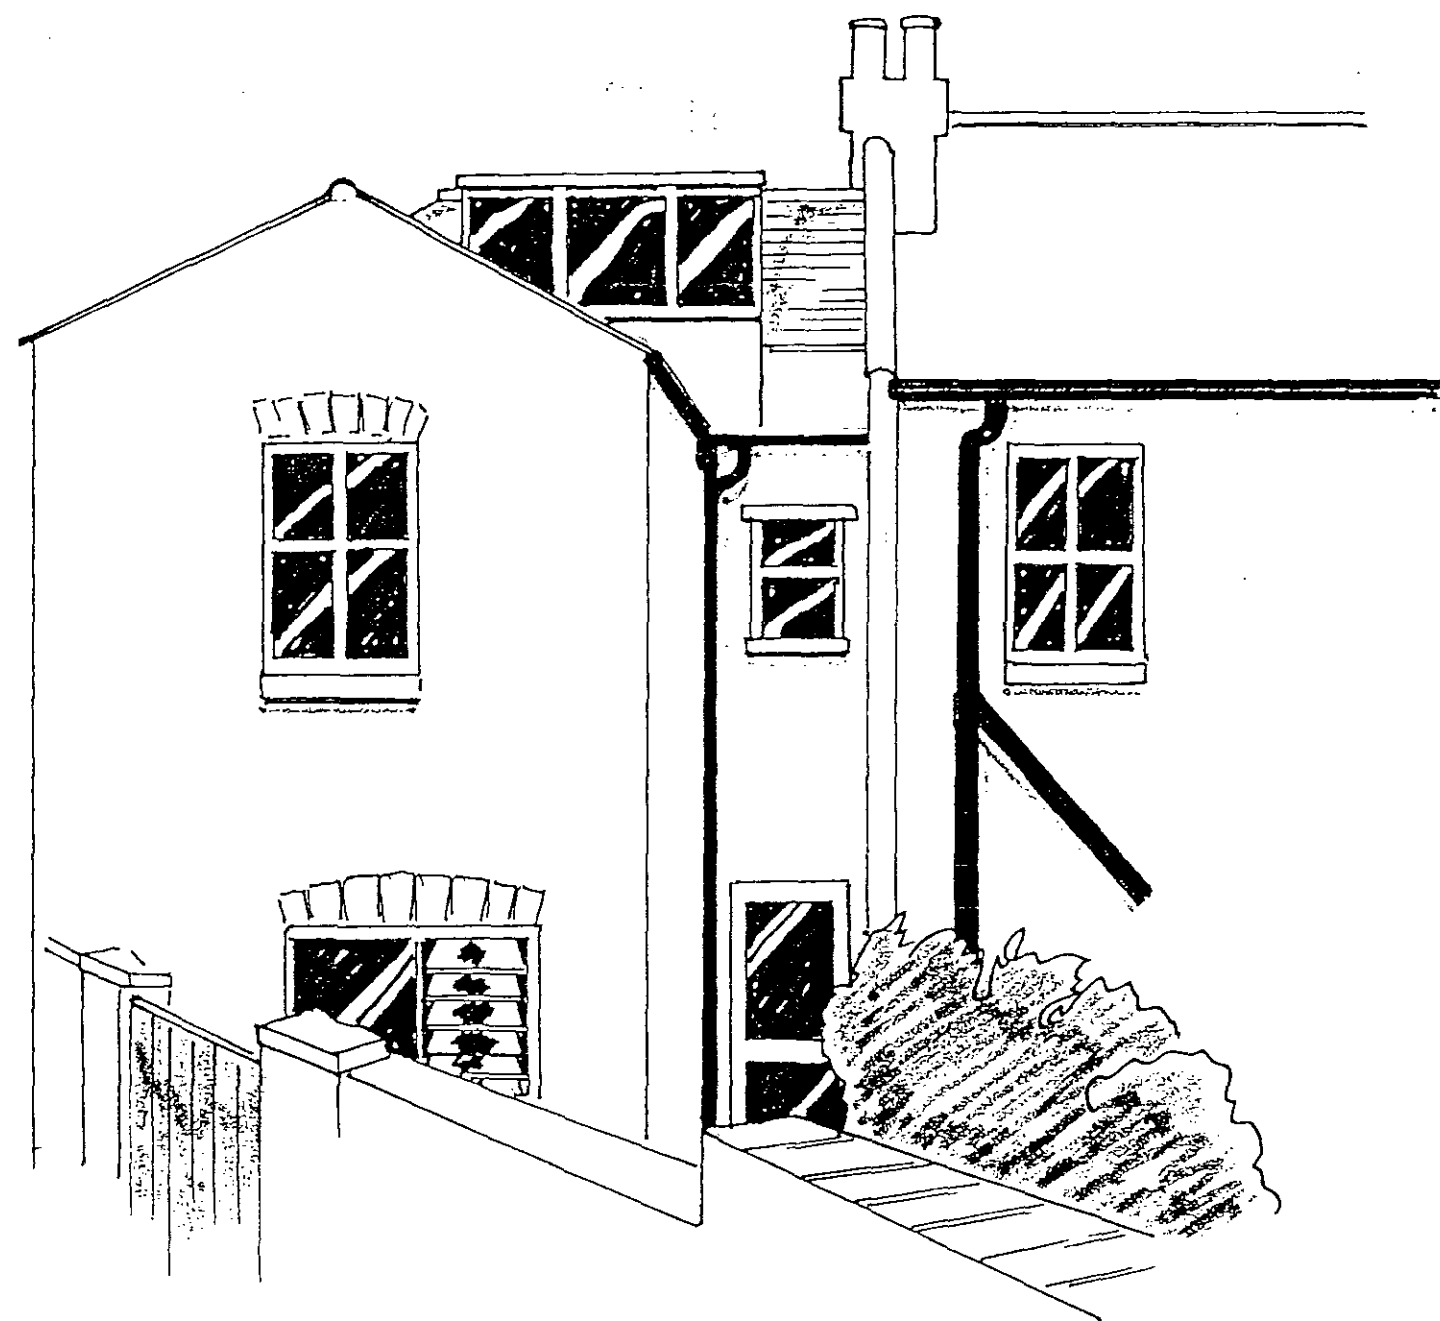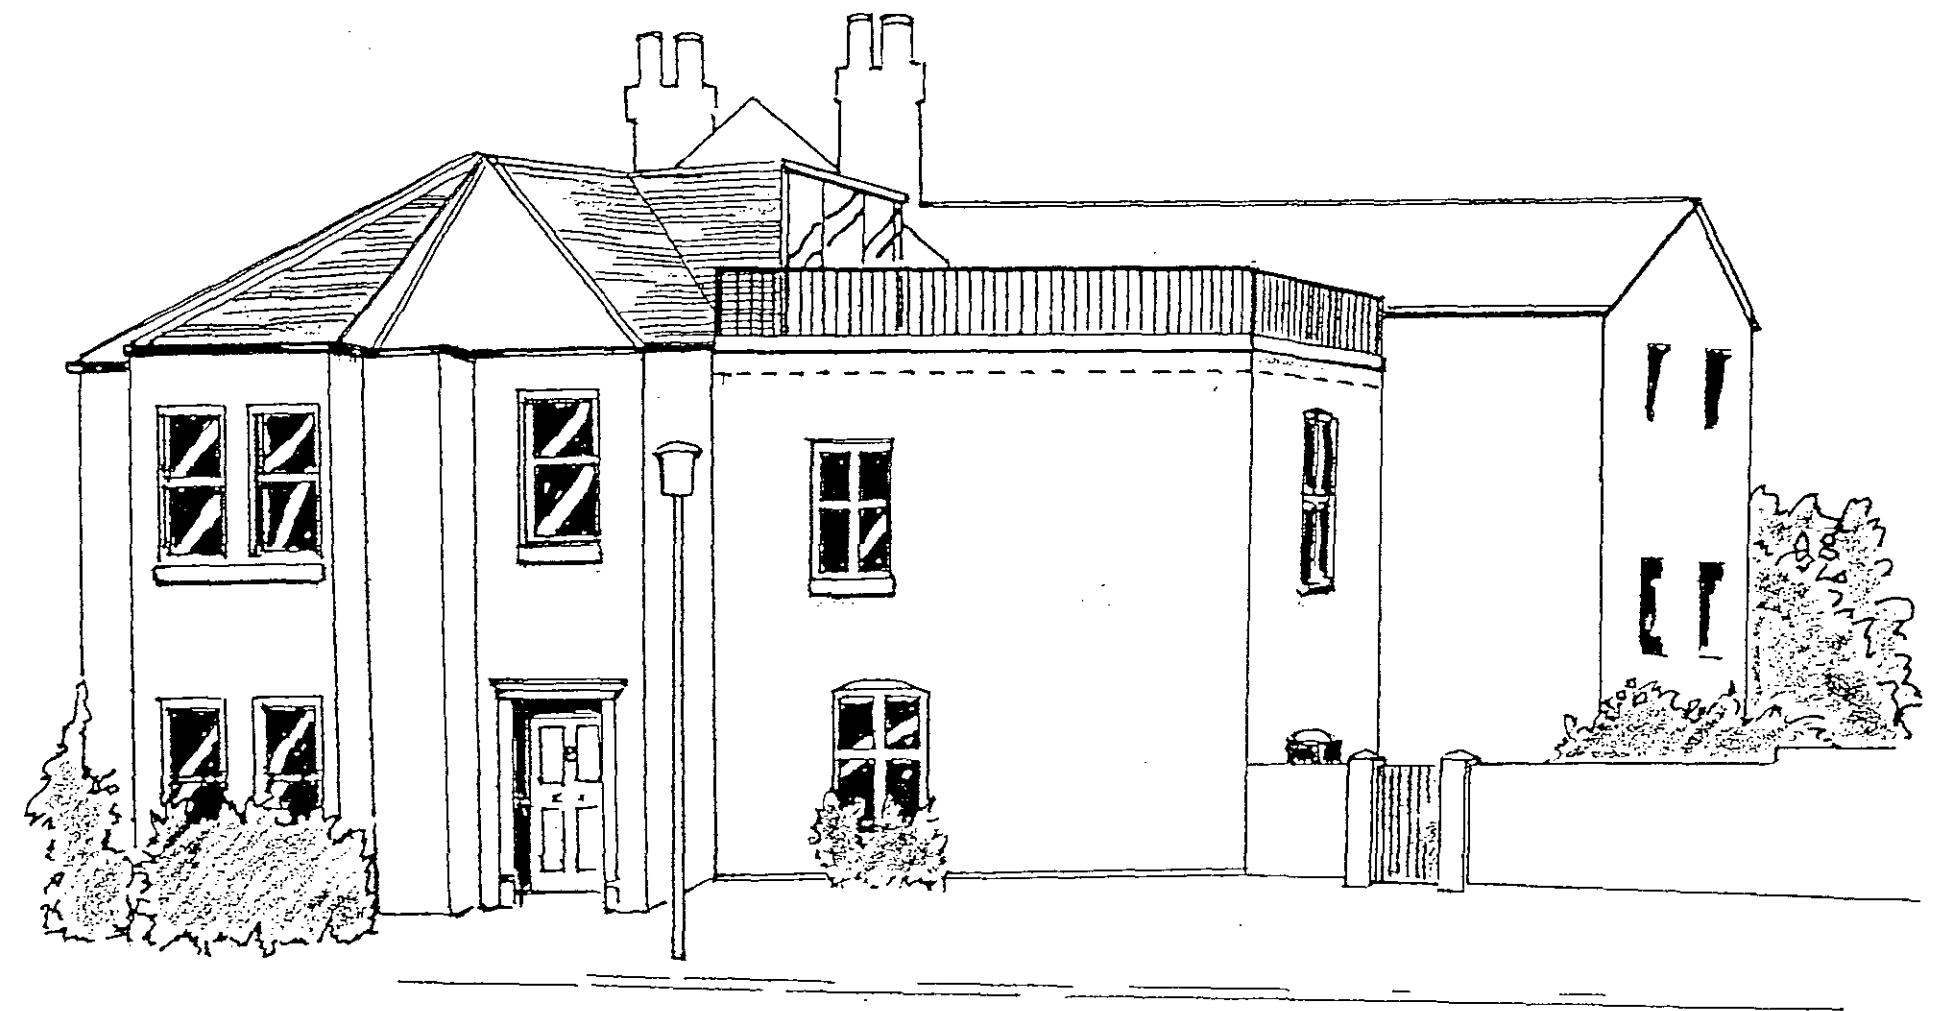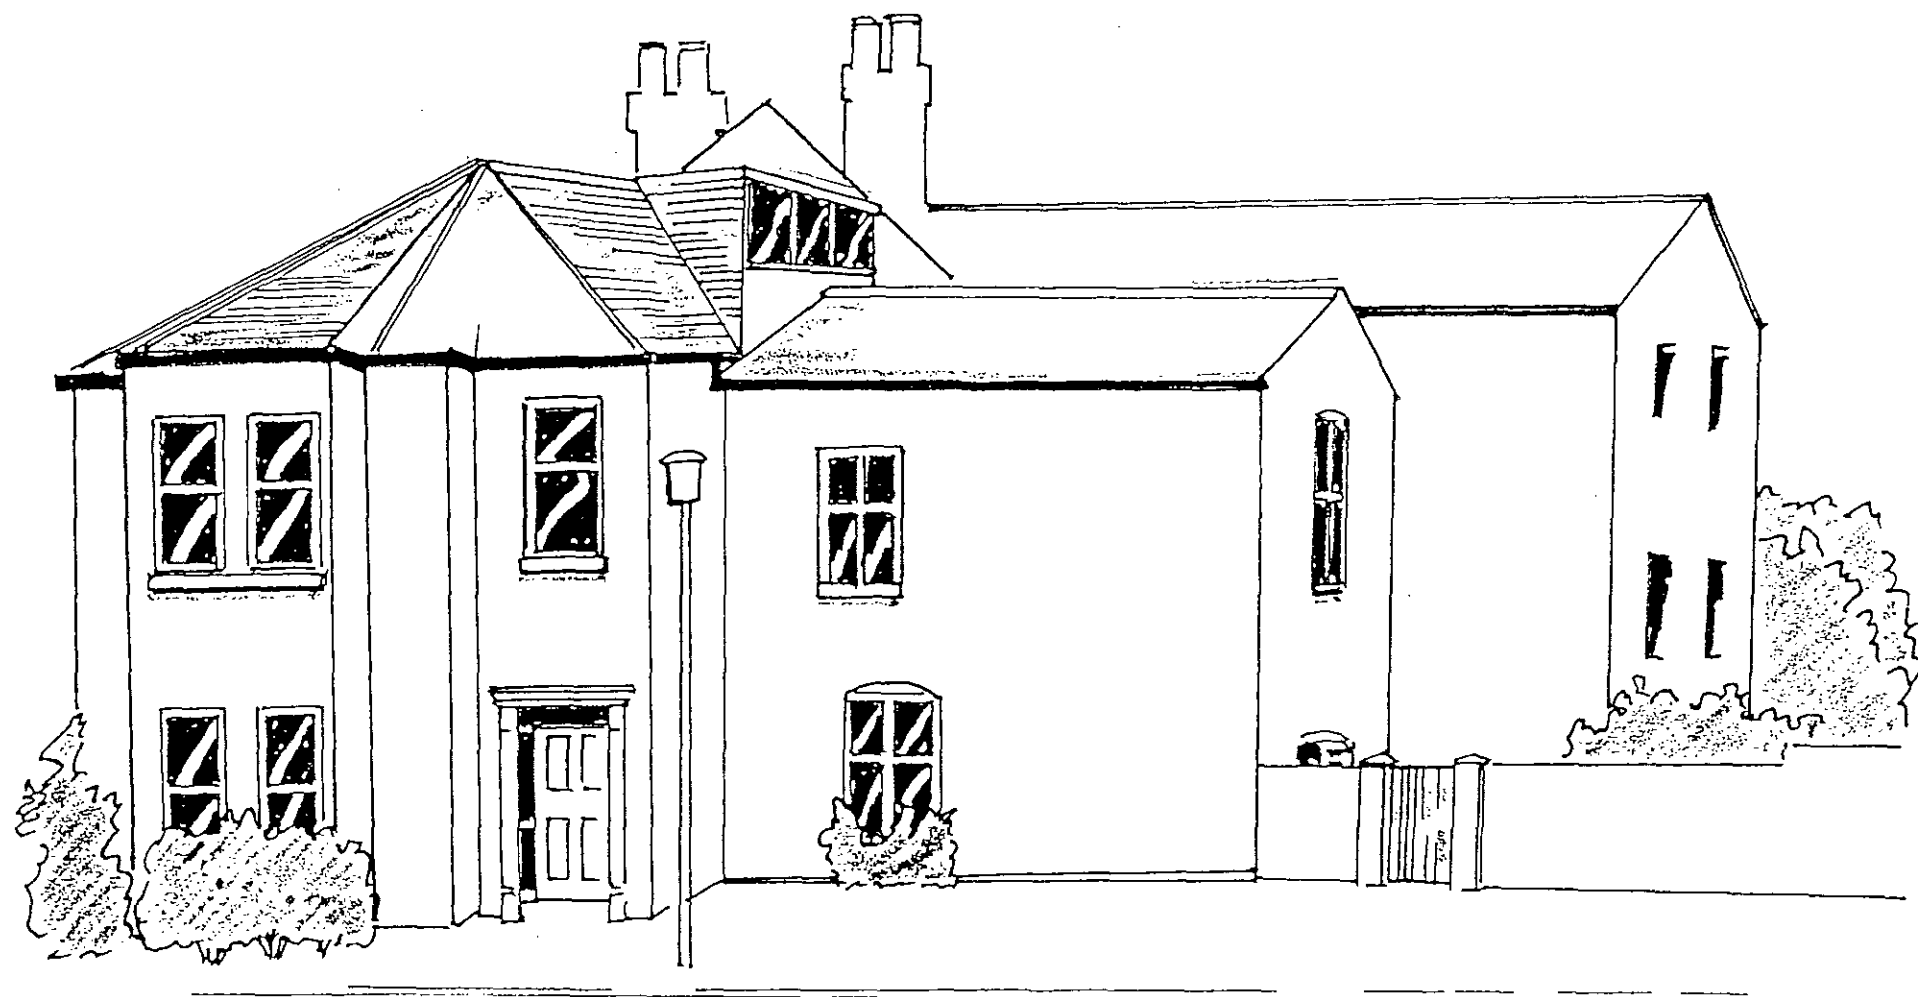

EXISTING

PROPOSED