


Notes:

1. Clean off and prepare all existing walls and Concrete Plinths within the existing plant room to receive one coat of Watco or similar approved Industrial Wall Coating.
2. Clean down the existing and new block work walls within the new plant room and prepare to receive one coat of Watco or similar approved Industrial Wall Coating.
3. Clean off the floor within the existing Boiler Room and prepare to receive one coat of Watco or similar approved Anti-Slip Concrete Floor Paint.
4. Grind off the surface and polish the existing concrete floor within the new plant room, repair with Watco Concrete or similar approved Epoxy Repair Mortar to receive one coat of Watco or similar approved Anti-Slip Concrete Floor Paint.

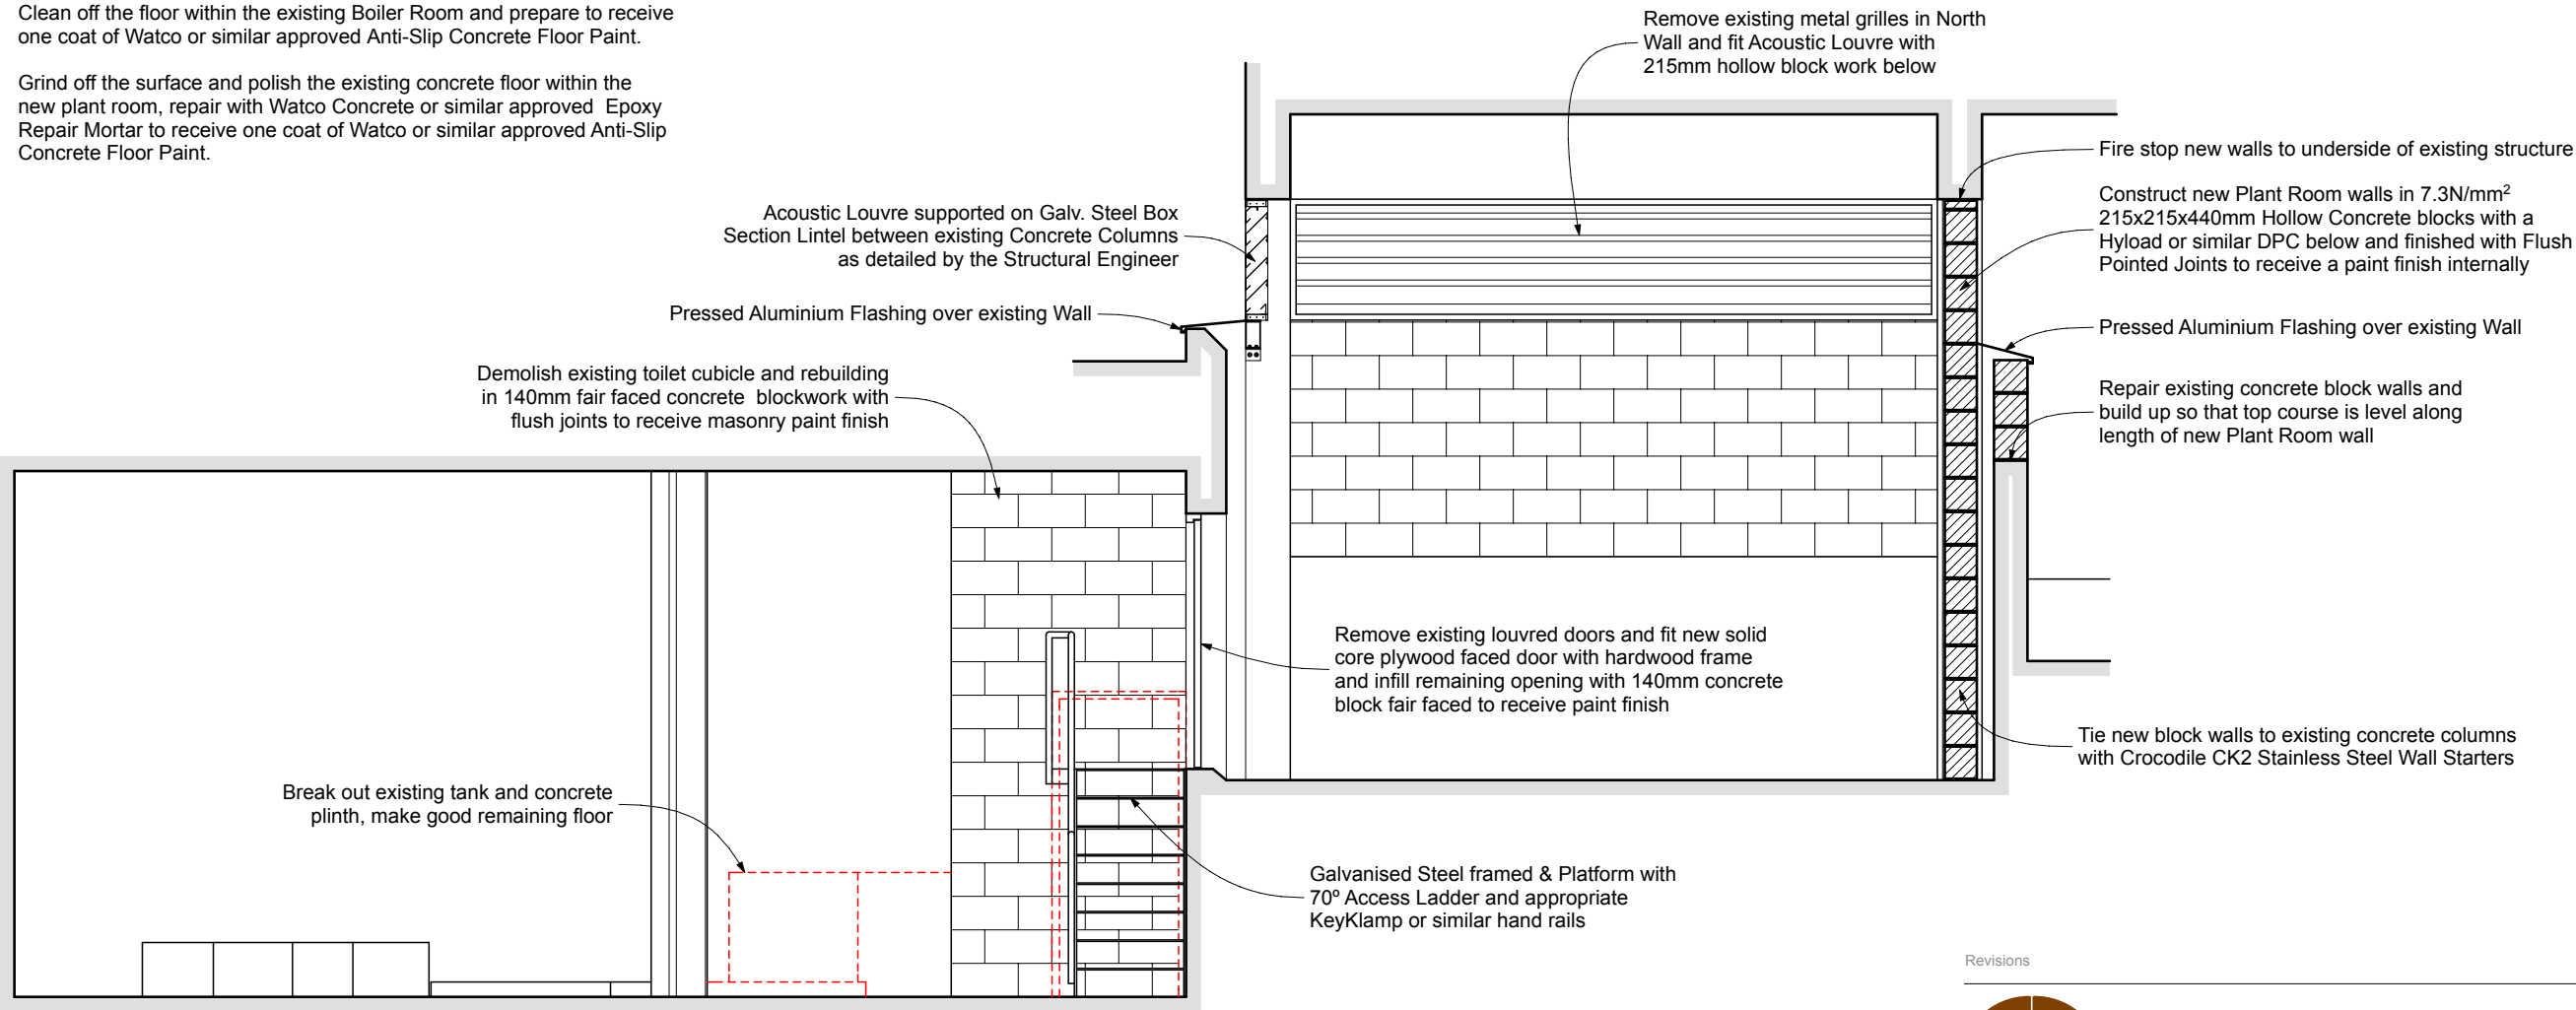

Revisions



COTLEIGH CONSULTING

Chartered Architects and Building Surveyors

23-24 The Green, Southgate, London N14 6EN T: 020 8802 0111 F: 020 8043 0700 E: consulting@cotleigh.com

Project

**THE BOILER HOUSE
HIGHGATE NEWTOWN,
HIGHGATE, LONDON,**

Client

TGA Consulting Eng. Ltd

Drawing Title

Proposed Section Through X/X

Drawn	IP	Status	PLANNING DRAWING	Scale	1:50 @ A3
Date	17/09/2014	Drawing No.	CC3601/P02	Rev.	

All dimensions to be checked on site. Do not scale.
Any discrepancy between this drawing and other
information to be referred to Cotleigh Consulting.
This drawing is copyright.



THE COTLEIGH GROUP
www.cotleigh.com

Scale: 1:50

