




## External Materials Schedule



Project	<b>Baton Low Rise, Camden</b>	
Job no	1952	
Document no	SC-EM	
Revision		
P1	20.11.13	Reference change, Materials Added from NBS
P2	21.02.13	Building Control Issue
P3	03.03.14	Bricks updated
P4	09.10.14	Issued for Planning

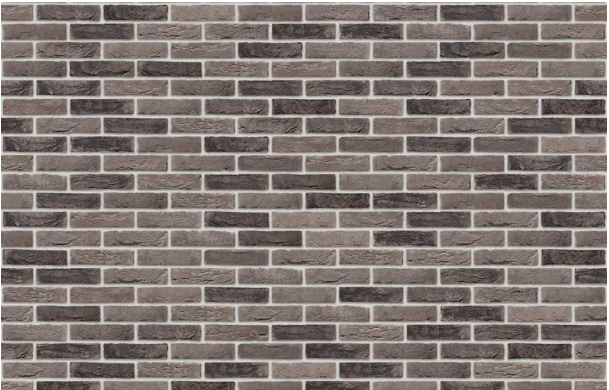

Description	Reference	Notes	Sample Image
Facing Brickwork	MAT 1	<p>Vandersanden Antro 215x102.5x65mm</p> <p>Bond: Stretcher</p> <p>Mortar: light grey</p> <p>Joints: 10mm nominal Bucket handle Brushed</p>	
Facing Brickwork	MAT 2	<p>Engels Royal Emerald 215x102.5x65mm</p> <p>Bond: Stretcher</p> <p>Mortar: light grey</p> <p>Joints: 10mm nominal Bucket handle Brushed</p>	
Facing Brickwork	MAT 3	<p>Vandersanden Cortona 215x102.5x65mm</p> <p>Bond: Stretcher</p> <p>Mortar: light grey</p> <p>Joints: 10mm nominal Bucket handle Brushed</p>	





Facing Brickwork	MAT 4	<p>Engels Mystique 215x102.5x65mm</p> <p>Bond: Stretcher</p> <p>Mortar: light grey</p> <p>Joints: 10mm nominal Bucket handle Brushed</p>	
Facing Brickwork	MAT 5	<p>Vandersanden Highbury 215x102.5x65mm</p> <p>Bond: Stretcher</p> <p>Mortar: light grey</p> <p>Joints: 10mm nominal Bucket handle Brushed</p>	



Site Sample panel photo