


4

3

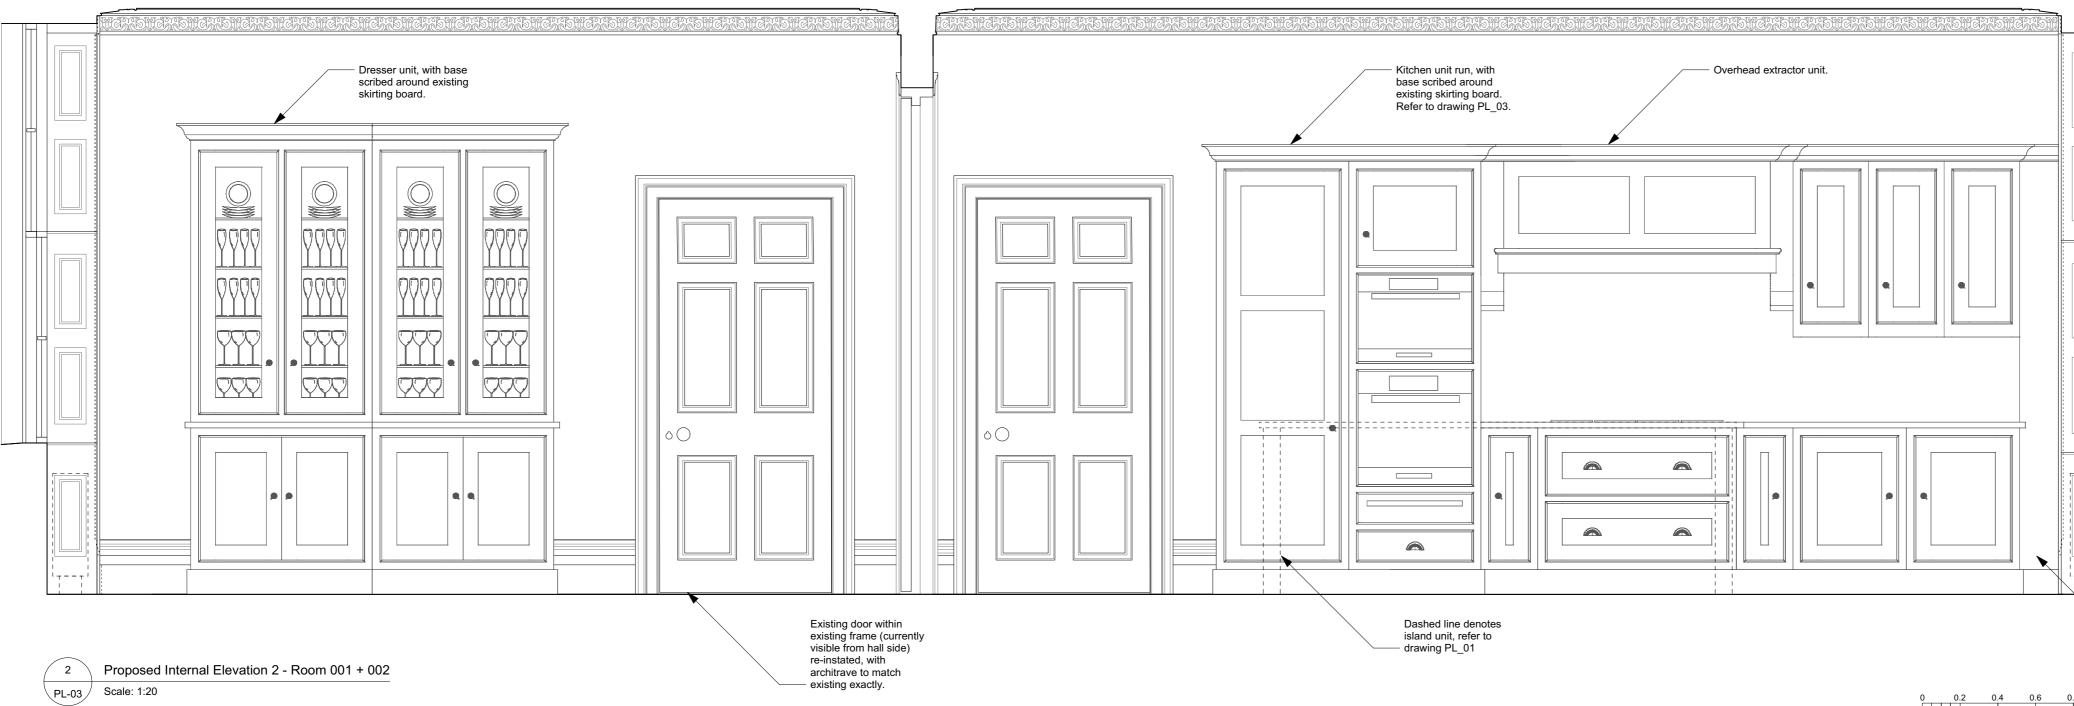

2

2

1

А

В

С

D

Е

1

3

0 0.2 0.4 0.6 0.8 1.0 M

0 0.2 0.4 0.6 0.8 1.0 M


4

5

6

5



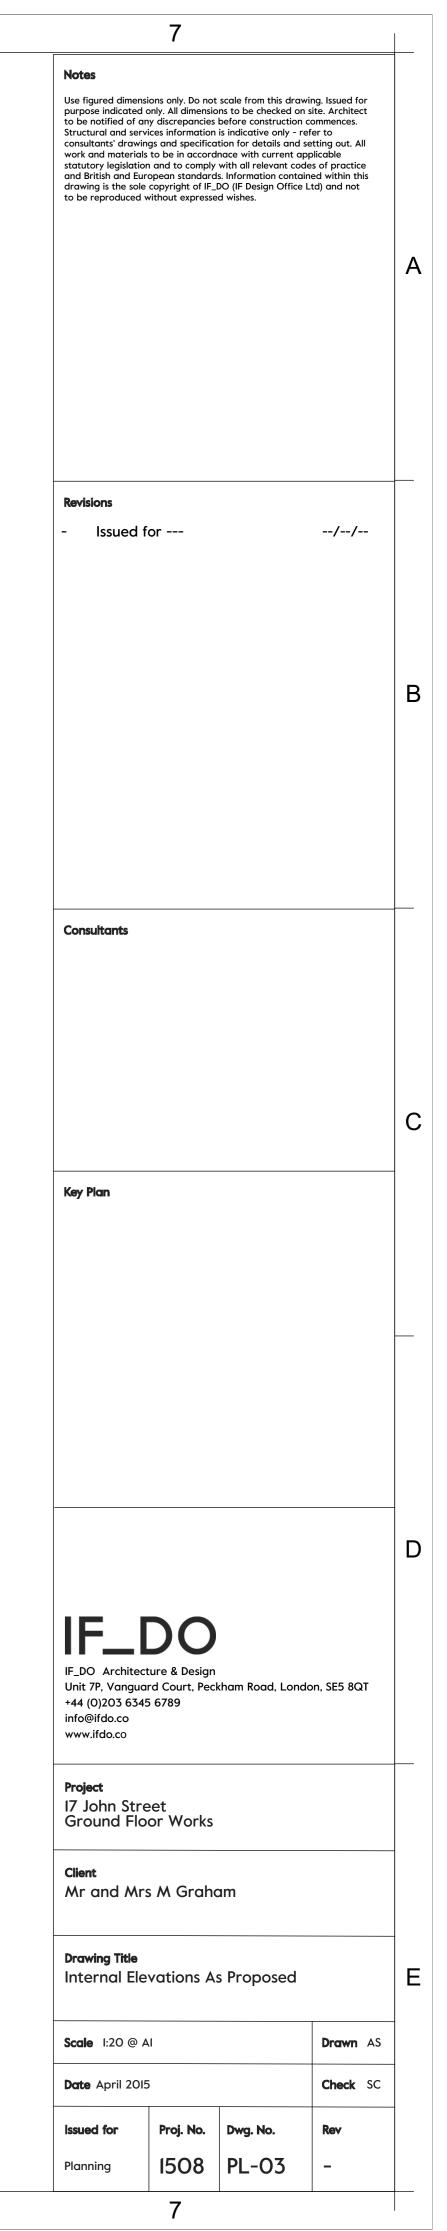

6

Built-in recessed panelling to conceal duct run, and to step units away from window

architrave.