


DETAIL: DOOR HEAD MOULDING

GENERAL MOULDING NOTES:

Linings and Trims
 Install new moulded softwood skirting boards, linings and architraves to match existing exactly. Allow for decoration and patch repair of existing skirting boards and architraves.

Section where original architrave is damaged or only part exists to be replaced with new to match original exactly. Use solid timber.

Clear finish to bedroom door, lining and architraves
 Apply 3-4 thin coats of Osmo Door-oil to door architrave and lining, 3060 Clear Satin. Follow manufacturer's recommendations.

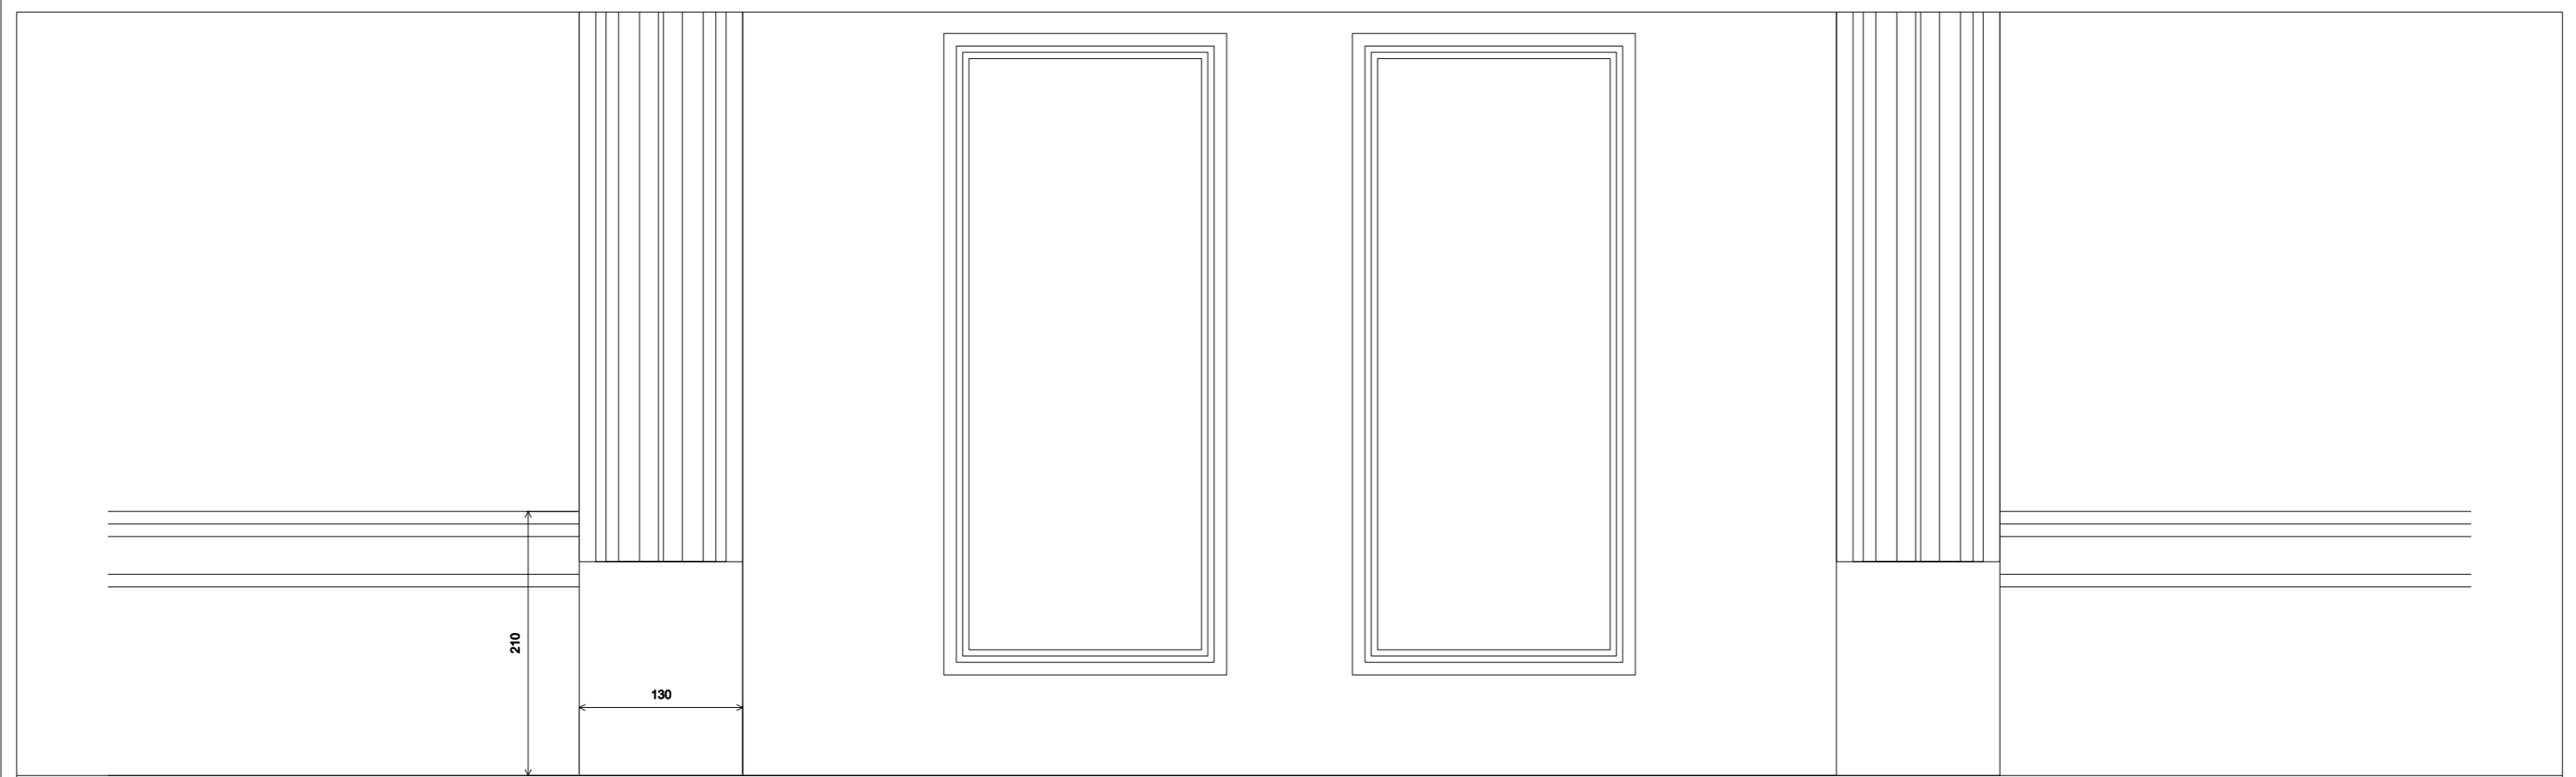

DETAIL: DOOR JAMBS MOULDING