


8mm dia "Sockfix" grouted sock anchors in 20mm dia diamond drilled holes staggered @ 150mm centres vertically.


Void filled with lime mortar as new brick reveal proceeds.

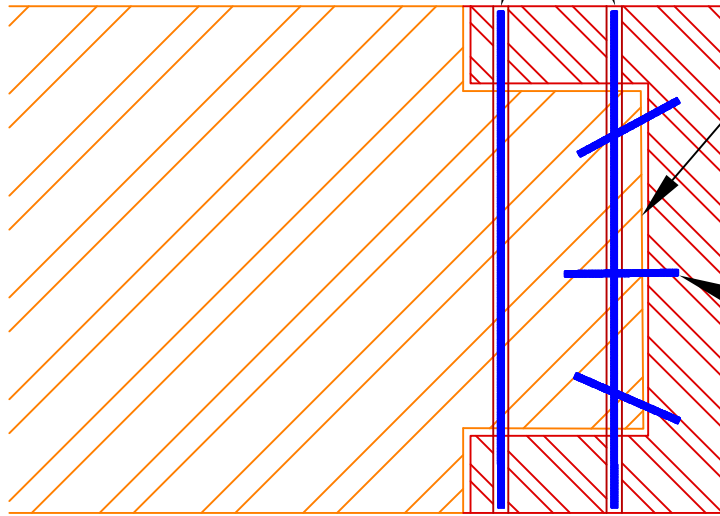

New brickwork bonded to existing on both faces.

Insert SS ties typically 150mm long min 100mm into mortar filled pockets in existing. Ties @ 225mm vertically.

Plan

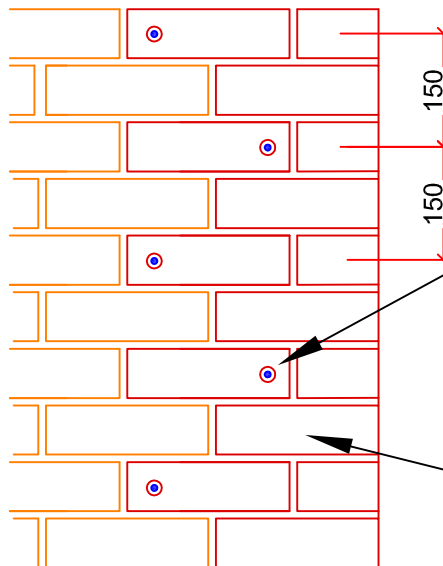

"Sockfix" grouted sock anchors.

Extent of removal and rebuild to be agreed with specialist contractor.

Typical Elevation

NOTE Similar SS sock anchors to "Sockfix" may be used if approved by Engineer.

Place: Kenwood House, Lady Mansfield's Bedroom

Title: New Brick Reveal

Civil & Structural Engineering

Project Engineer: Stephen Parris

Date: 24.11.15

Scale: 1:15 @ A4

Sketch No: SK005

Job No: 19865



Historic England

The Engine House
Fire Fly Avenue, Swindon, SN2 2EH
Tel 01793 414 700