
Living Room Weights Loaded Timber Sash Windows


Details:


SW01

SW02

Existing Weights Loaded Timber Sash Windows Single Glazing Putty Finish Design

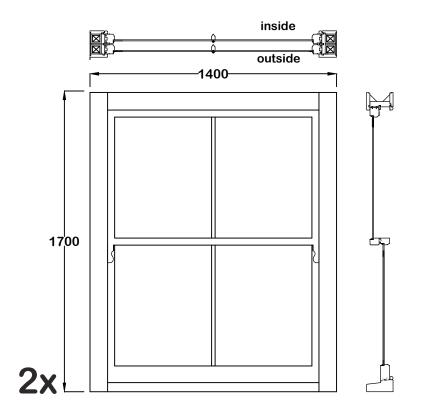

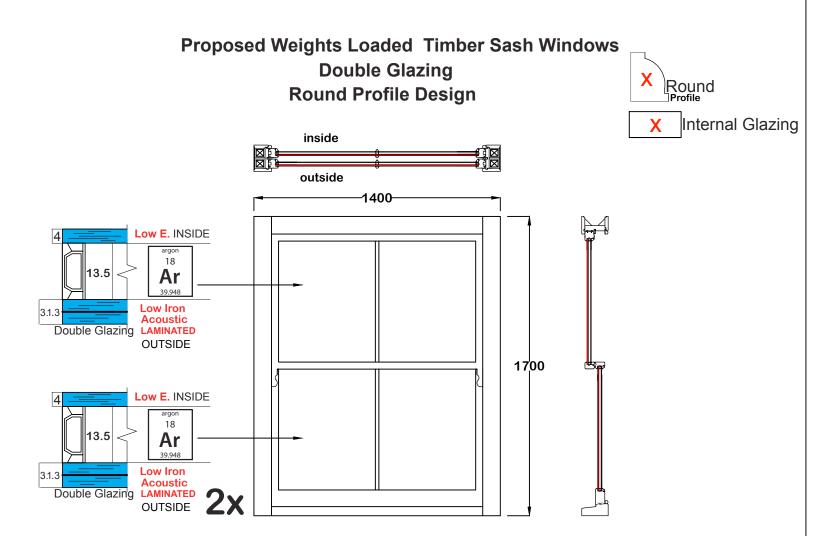

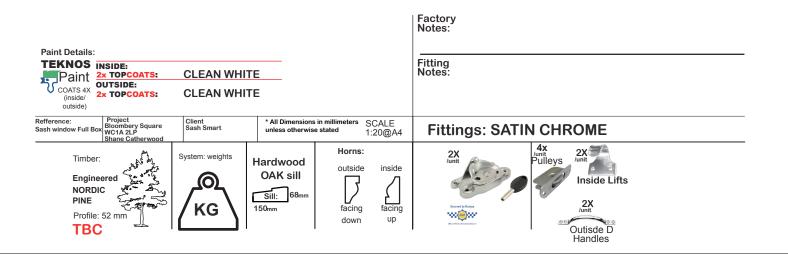


Weights Loaded Timber Sash Windows

Details:

SW03 - Bedroom SW04 - Study

Existing Weights Loaded Timber Sash Windows Single Glazing Putty Finish Design

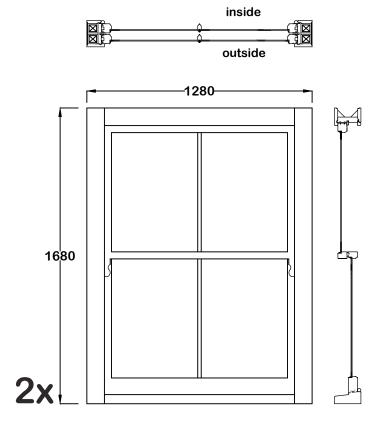



Proposed Weights Loaded Timber Sash Windows

Double Glazing Round Profile Design



X Internal Glazing

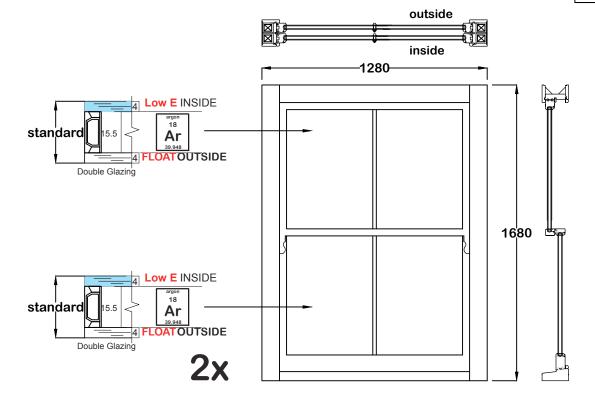

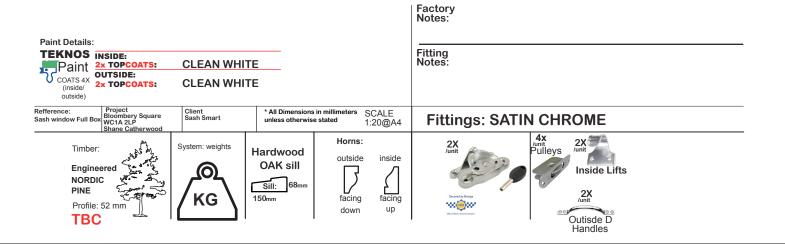

TBC

Timber Double French Door

