


TIMBER SLEEPER EDGING (LAID HORIZONTALLY)

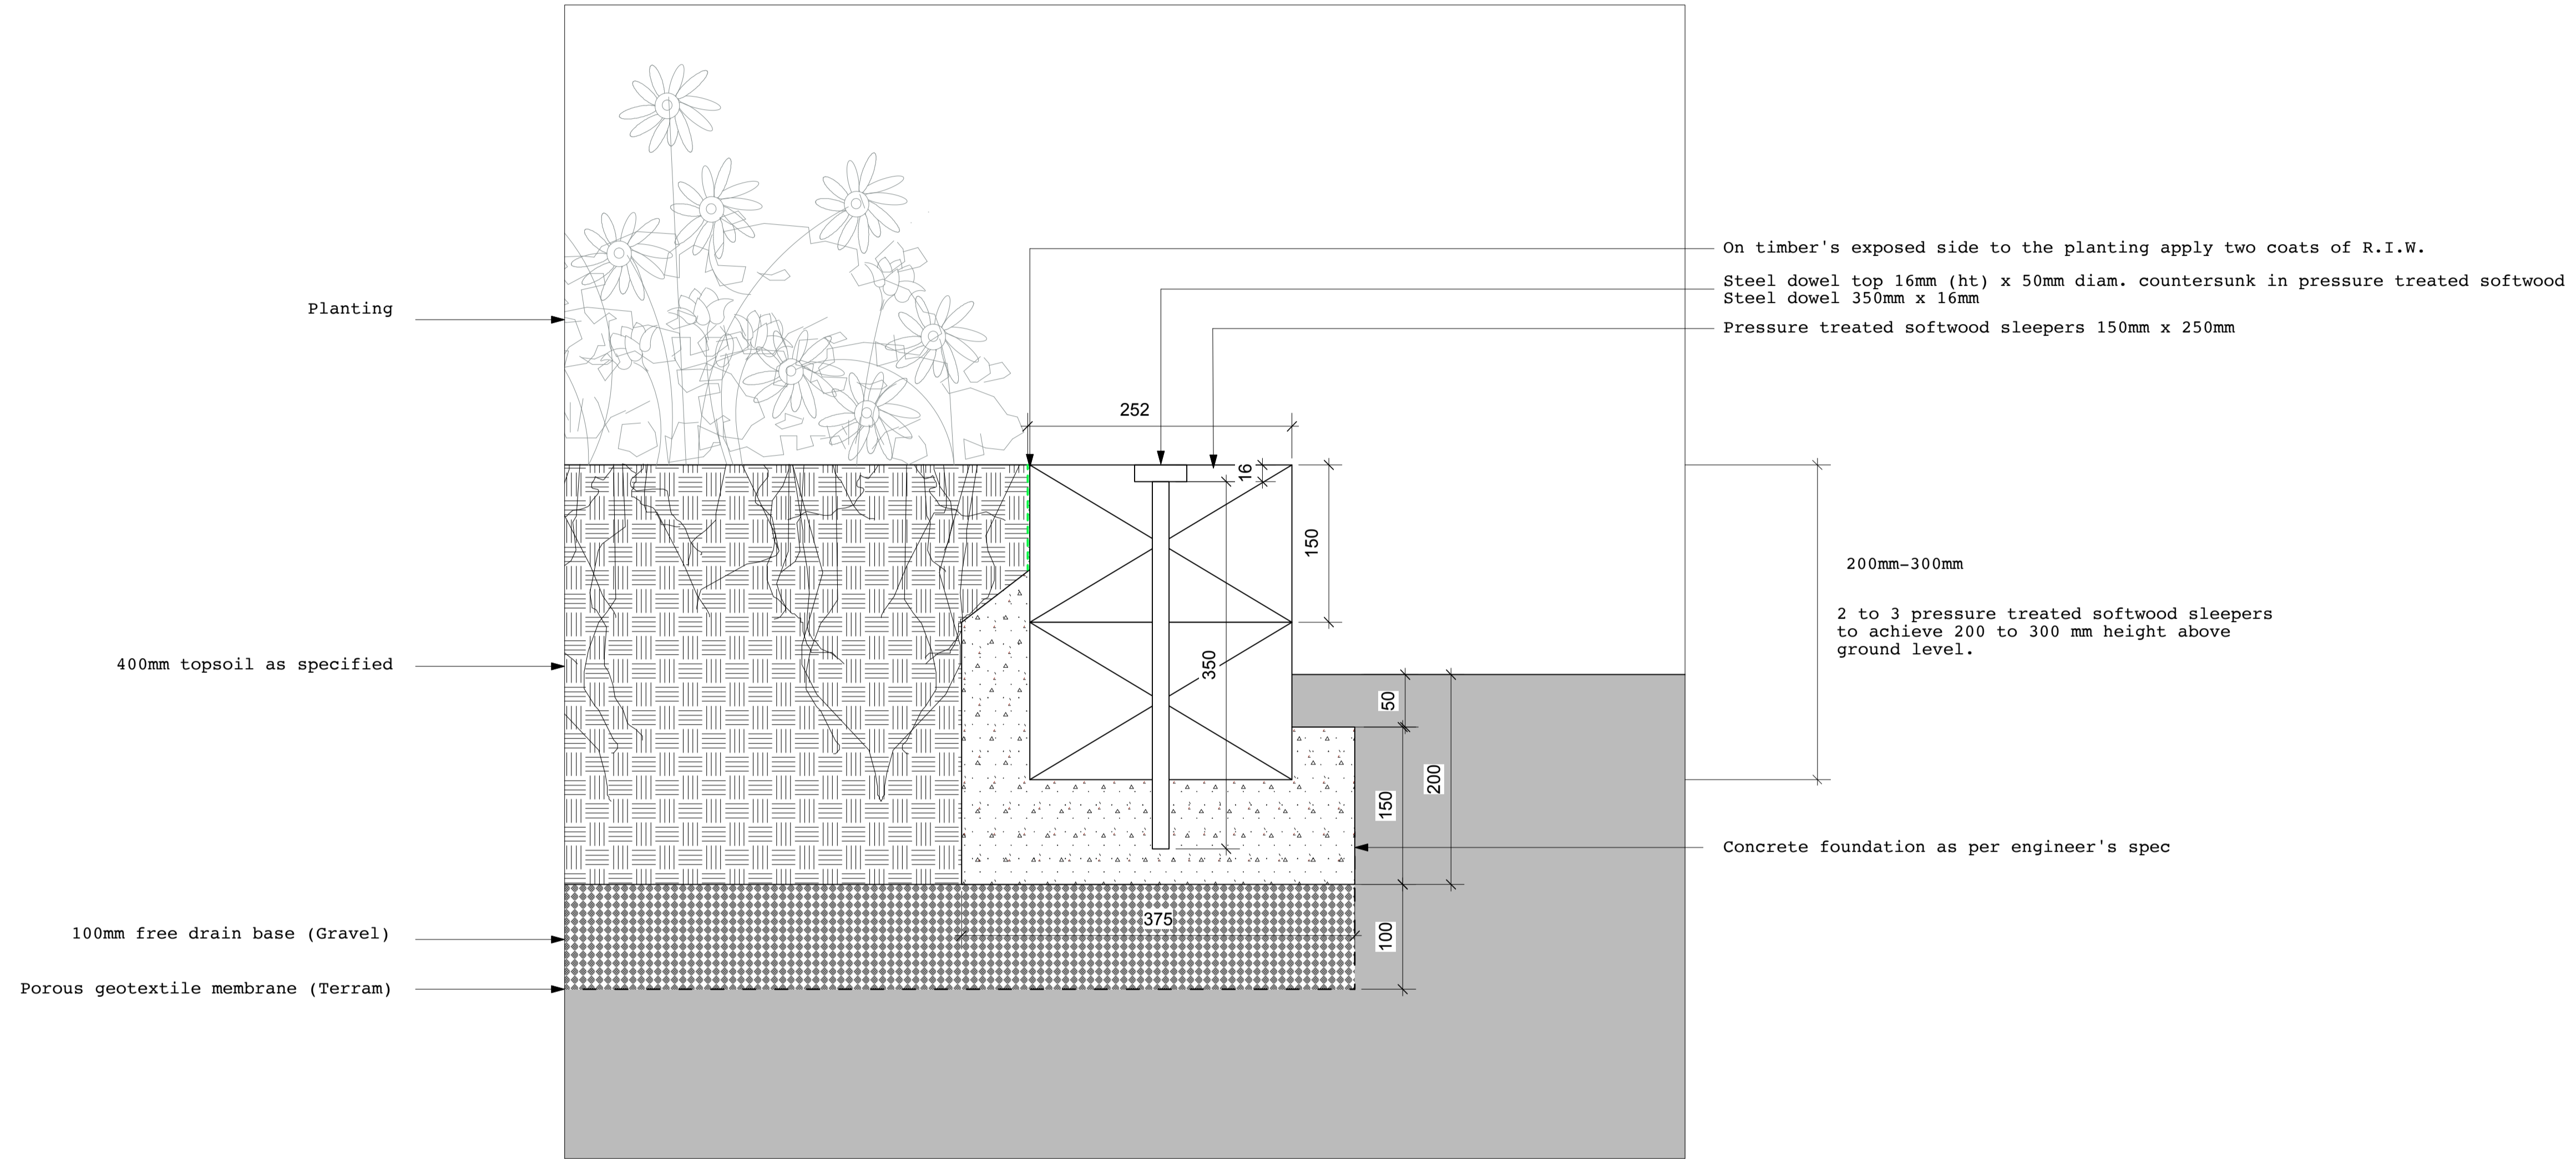

On timber's exposed side to the planting apply two coats of R.I.W.
 Steel dowel top 16mm (ht) x 50mm diam. countersunk in pressure treated softwood
 Steel dowel 350mm x 16mm
 Pressure treated softwood sleepers 150mm x 250mm

200mm-300mm
 2 to 3 pressure treated softwood sleepers to achieve 200 to 300 mm height above ground level.

Concrete foundation as per engineer's spec

Planting

400mm topsoil as specified

100mm free drain base (Gravel)

Porous geotextile membrane (Terram)