


STAGE 6:
ONCE ALL THE UNDERPINNING IS COMPLETE, EXCAVATE AND REDUCE HEIGHT OF CENTRAL BERM TO APPROXIMATELY 1/3 OF THE TOTAL HEIGHT. INSTALL A SECOND LAYER OF LATERAL PROPS. THE PROPS ARE TO REMAIN UNTIL AFTER THE BASE SLAB HAS BEEN FORMED AND THE CONCRETE REACHED MIN 20N/mm² COMPRESSIVE STRENGTH.

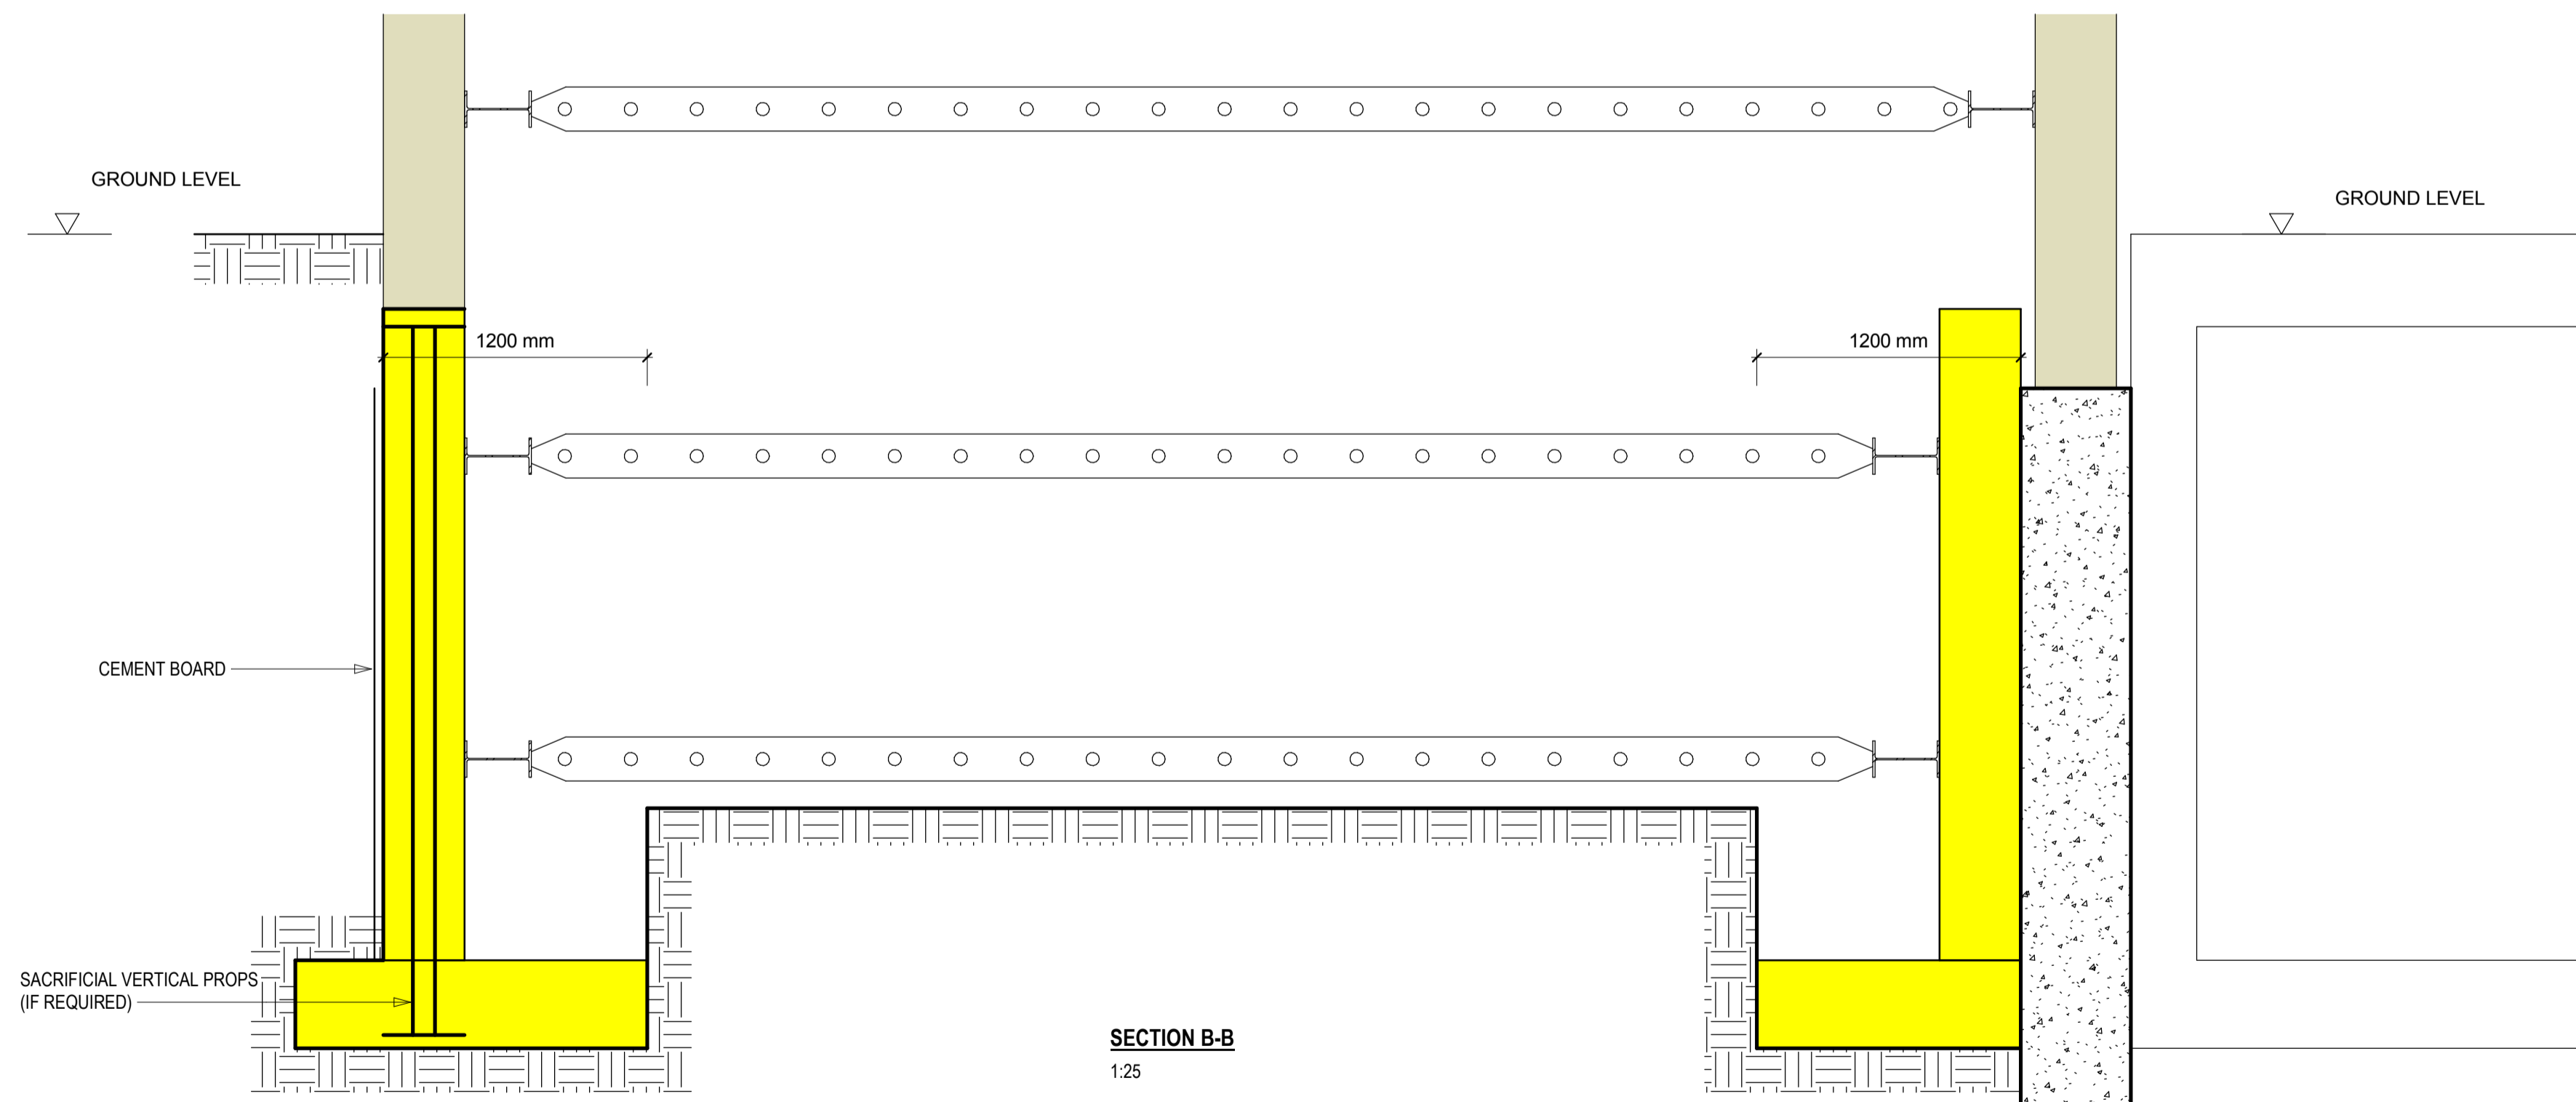

No.	By	Description	Date
CLIENT			
Julia and Brendan O'Toole			
ARCHITECT			
QUANTITY SURVEYOR			
M+E ENGINEER			
27 John's Mews WC1N 2NS			
Basement construction sequence 6			
ROSS & PARTNERS			
CONSULTING CIVIL & STRUCTURAL ENGINEERS			
1 BASTWICK STREET		tel : (020)-7553-6050	
CLERKENWELL		fax : (020)-7253-6720	
LONDON EC1V 3NU		email : mail@ross-partners.co.uk	
DRN:	Author	CHKD: Checker	DATE: 04/19/18
STATUS:	Approver	SCALE:	1 : 25 @ A1
Project No.	11751/TW/	DRG. No.	06