

26/04/2018 09:50:10

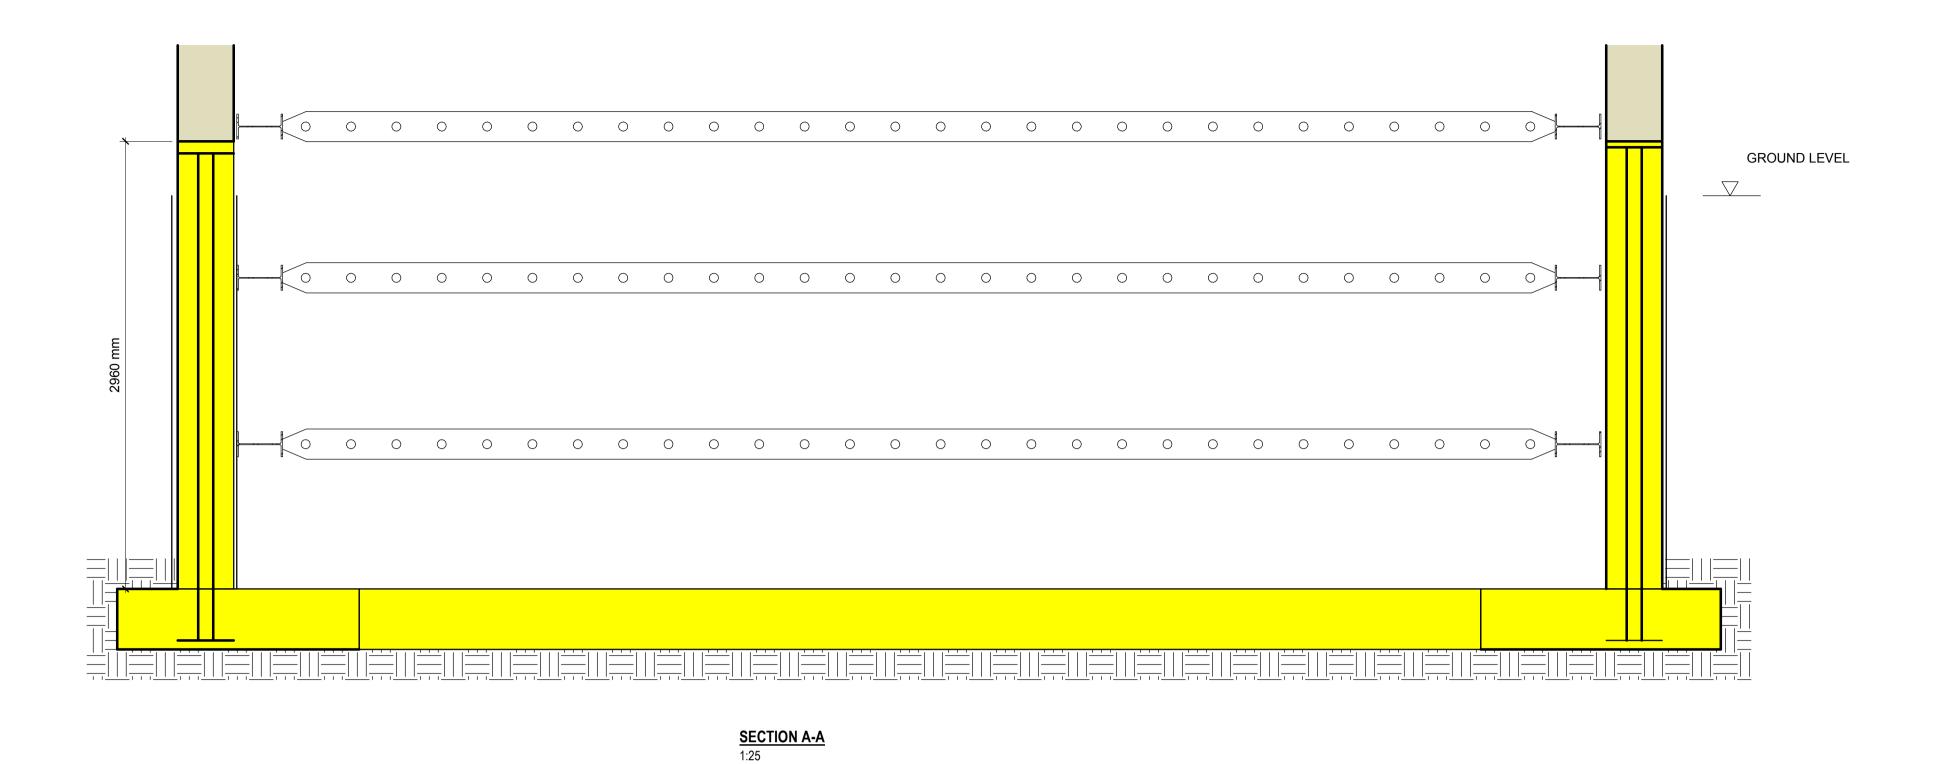

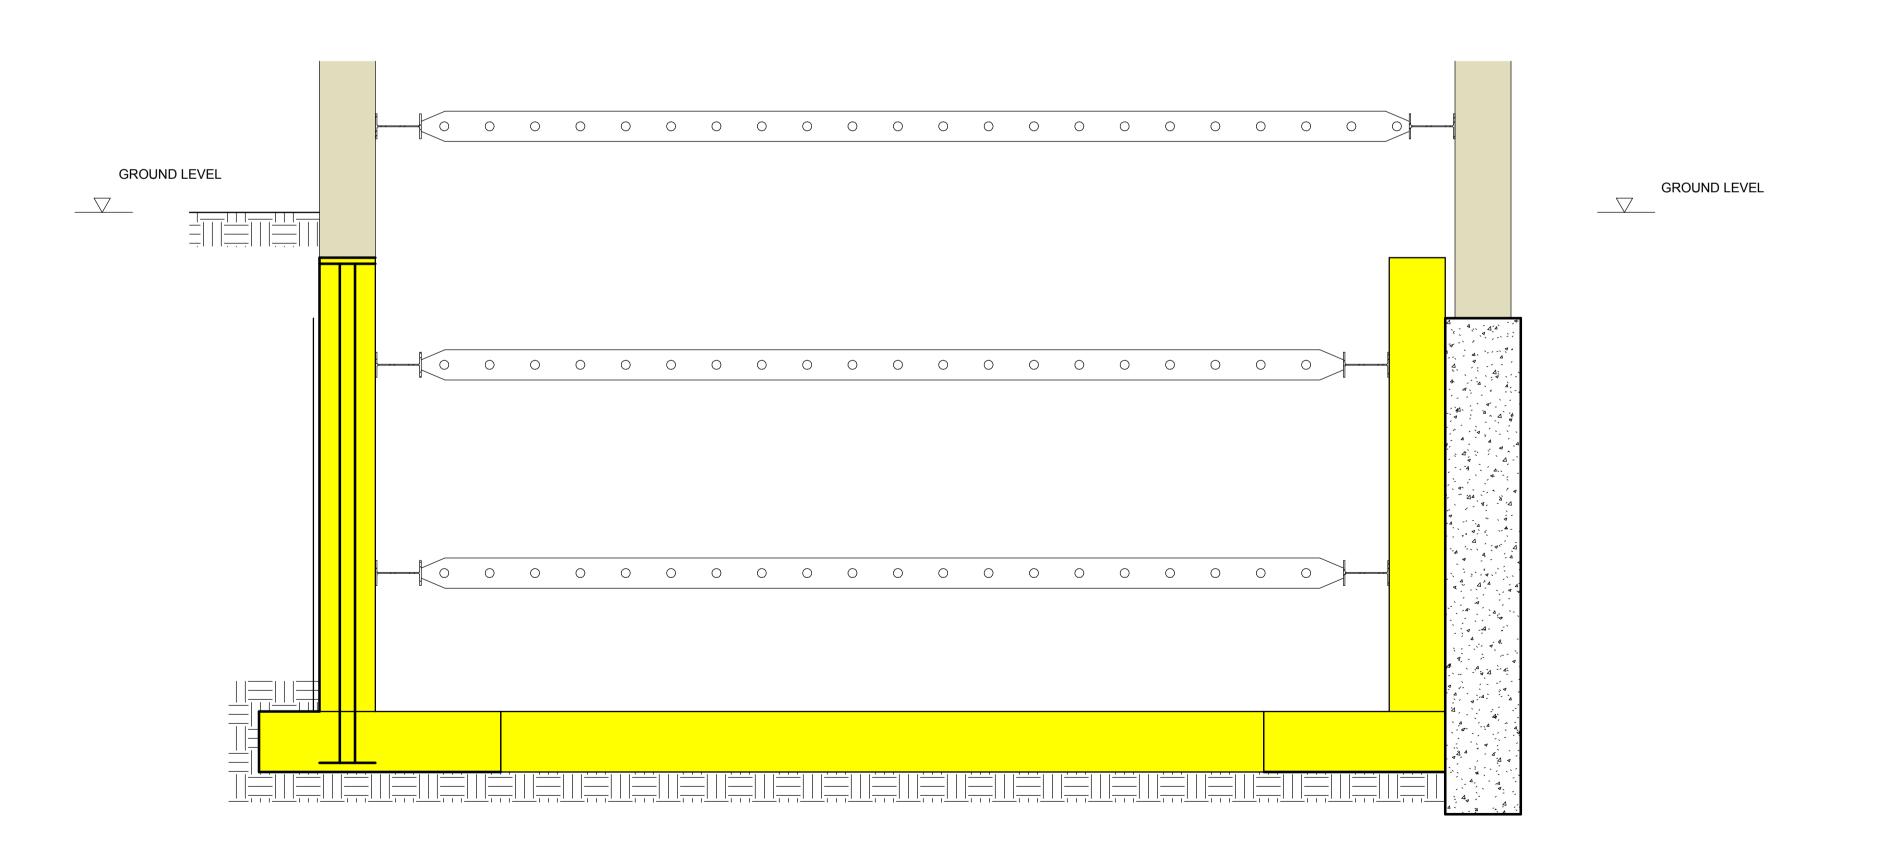

**SECTION B-B** 1:25

STAGE 7:

EXCAVATE DOWN TO THE FORMATION LEVEL. INSTALL ANY NEW DRAINAGE, SUMPS, PUMPS ETC. THE SUMP SHOULD BE SET AWAY MINIMUM 300mm FROM THE FACE OF ANY WALL. PREPARE BASE BLINDING, FIX REINFORCING BARS AND CAST BASE SLAB.

