

INSERT HELIFIX 6mm AUSTENITIC STAINLESS STEEL BARS ACROSS EACH CRACK, EXTENDING A MIN OF 500mm BEYOND THE CRACK @ EVERY 4th COURSE. WHERE THE CRACK EXTENDS THROUGH A PIER, THE MORTAR BED OF THE PIER TO BE RAKED OUT TO ALLOW THE HELI BAR TO CONTINUE THROUGH THE PIER TO 500mm BEYOND IT. MORTAR BED TO BE GROUTED UP AND MADE GOOD WHEN HELI BAR IS IN PLACE. MAKE GOOD ALL VERTICAL CRACKS WITH CRACKBOND TE, AN EPOXY-BASED WEATHERPROOF FILLER. RE-POINT THE MORTAR BED AND MAKE GOOD.

TREATMENT OF MOSS/ALGAE
BRUSH SURFACE TO REMOVE ANY LOOSE GROWTH, DIRT AND DUST
APPLY RAPID MOSS AND ALGAE KILLER - BATIFACE AND LEAVE FOR 30 TO 60 MINUTES. WASH DOWN WITH PRESSURE WASHER TO REMOVE WEED KILLER AND ALL DEAD GROWTH. ONCE THE TREATED AREA HAS DRIED APPLY A COAT OF CONCENTRATED MOSS AND ALGAE KILLER - BATICLEAN CR. AFTER BOTH THESE TREATMENTS APPLY A WATER REPELLANT SEALER TO THE SURFACE, ROOF AND WALL SEALER - HYDROSIL BS. EVERY 12 TO 14 MONTHS BRUSH SURFACE AND APPLY A NEW COAT OF CONCENTRATED MOSS AND ALGAE KILLER - BATICLEAN CR


TO BE INSTALLED STRICTLY IN ACCORDANCE WITH MANUFACTURES INSTRUCTIONS

ETON AVENUE

TREATMENT OF MOSS/ALGAE
BRUSH SURFACE TO REMOVE ANY LOOSE GROWTH, DIRT AND DUST
APPLY RAPID MOSS AND ALGAE KILLER - BATIFACE AND LEAVE FOR 30 TO 60 MINUTES. WASH DOWN WITH PRESSURE WASHER TO REMOVE WEED KILLER AND ALL DEAD GROWTH. ONCE THE TREATED AREA HAS DRIED APPLY A COAT OF CONCENTRATED MOSS AND ALGAE KILLER - BATICLEAN CR. AFTER BOTH THESE TREATMENTS APPLY A WATER REPELLANT SEALER TO THE SURFACE, ROOF AND WALL SEALER - HYDROSIL BS. EVERY 12 TO 14 MONTHS BRUSH SURFACE AND APPLY A NEW COAT OF CONCENTRATED MOSS AND ALGAE KILLER - BATICLEAN CR

INSERT HELIFIX 6mm AUSTENITIC STAINLESS STEEL BARS ACROSS EACH CRACK, EXTENDING A MIN OF 500mm BEYOND THE CRACK @ EVERY 4th COURSE. WHERE THE CRACK EXTENDS THROUGH A PIER, THE MORTAR BED OF THE PIER TO BE RAKED OUT TO ALLOW THE HELI BAR TO CONTINUE THROUGH THE PIER TO 500mm BEYOND IT. MORTAR BED TO BE GROUTED UP AND MADE GOOD WHEN HELI BAR IS IN PLACE. MAKE GOOD ALL VERTICAL CRACKS WITH CRACKBOND TE, AN EPOXY-BASED WEATHERPROOF FILLER. RE-POINT THE MORTAR BED AND MAKE GOOD.

TO BE INSTALLED STRICTLY IN ACCORDANCE WITH MANUFACTURES INSTRUCTIONS

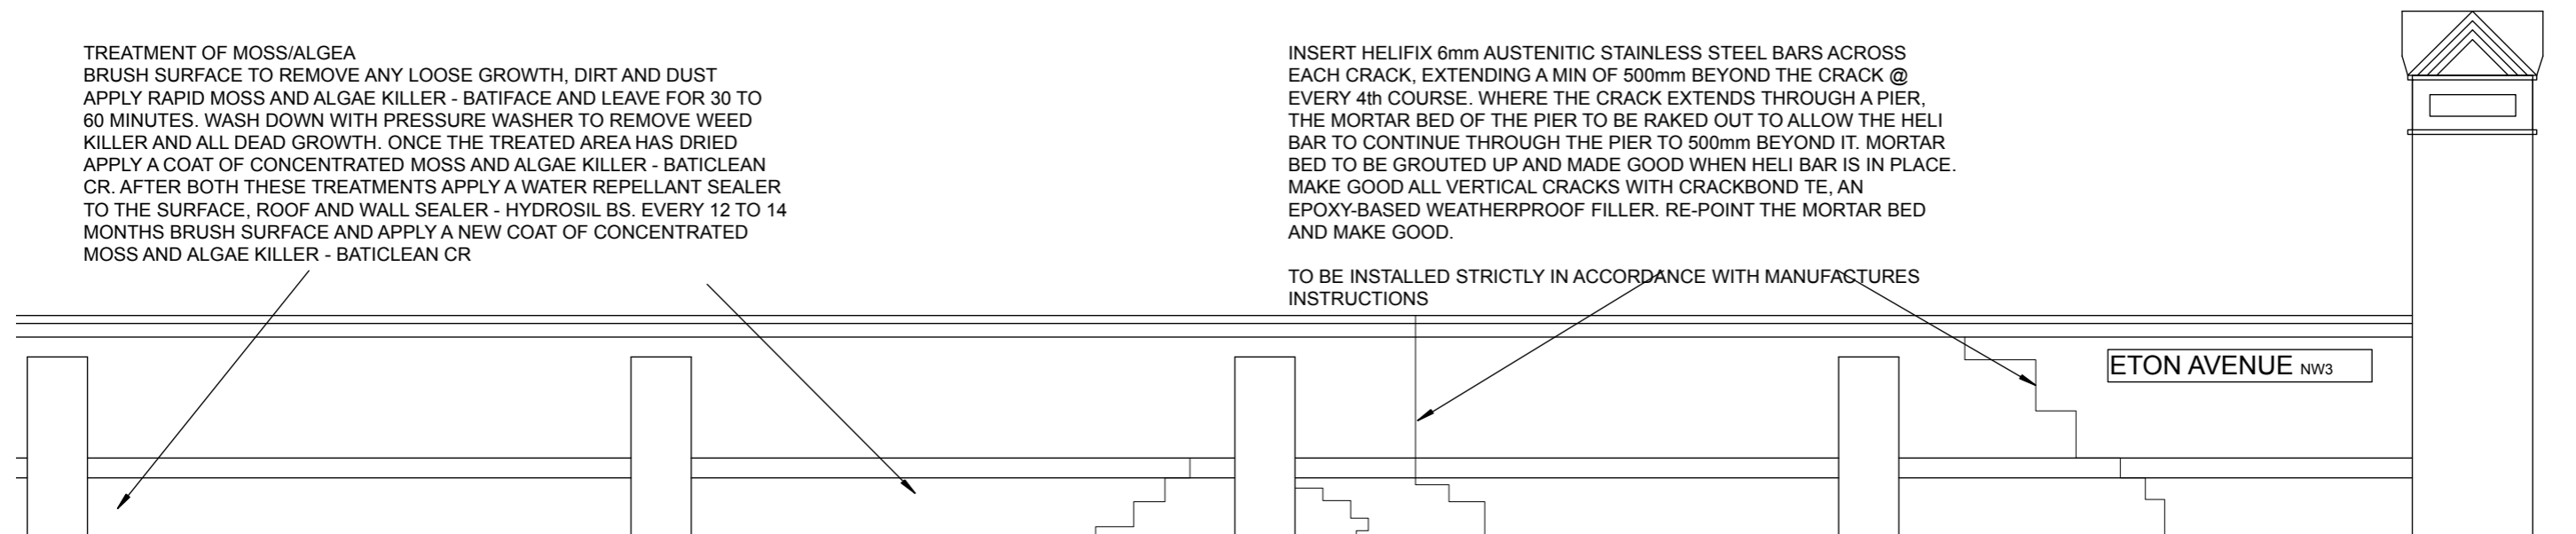

ETON AVENUE NW3

ETON AVENUE