

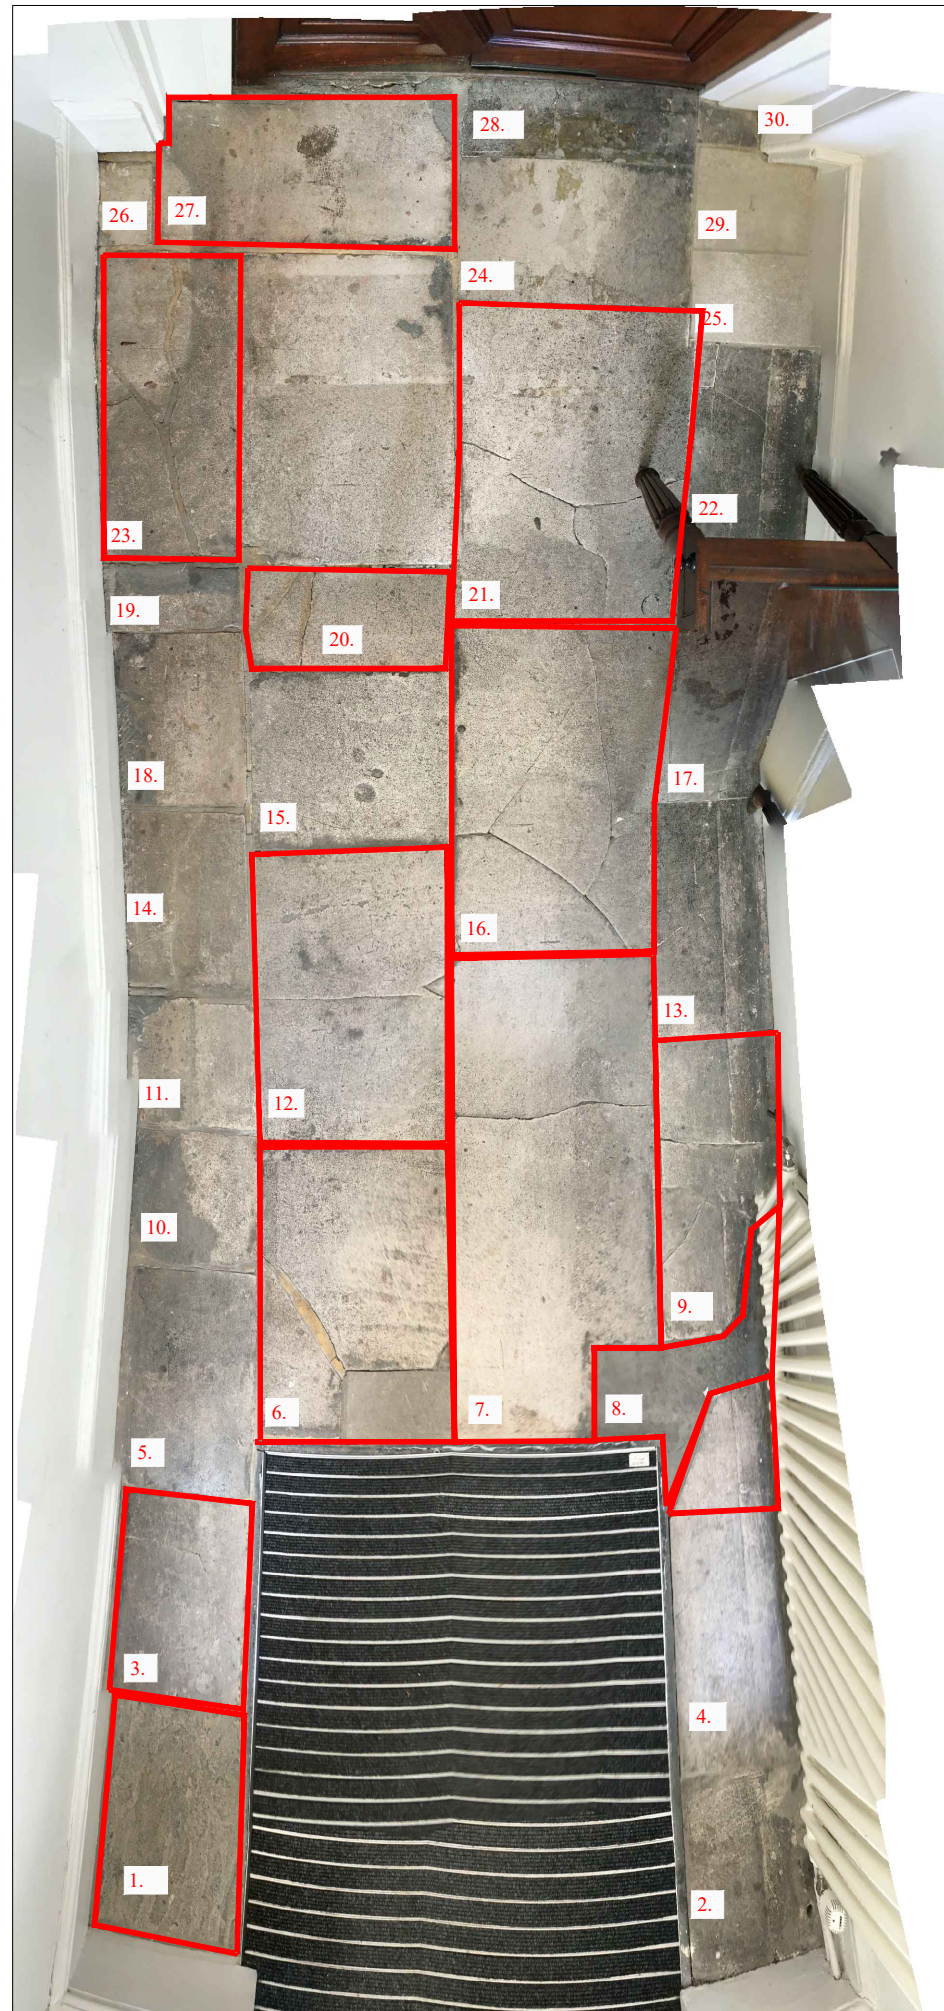


DEMOLITION PLAN @ 1:20

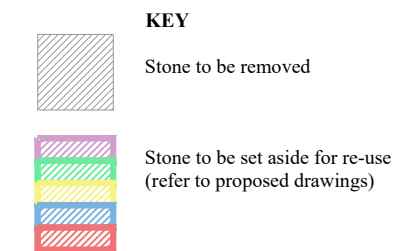

EXISTING PHOTOGRAPH

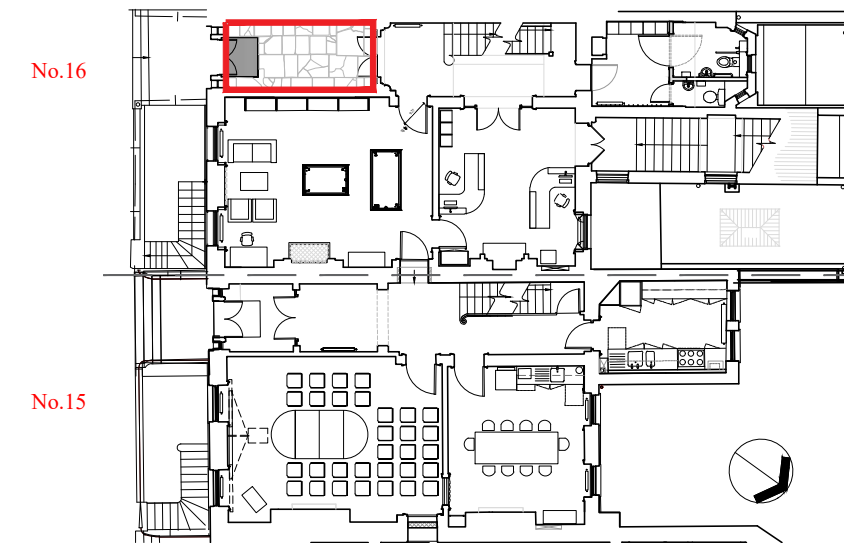

DEMOLITION PRINCIPLES:

- Remove all stones with large cracks
- Remove any recent/modern repairs
- Remove mortar repairs.



REVISIONS:	
PAUL MELLON CENTRE 15 & 16 BEDFORD SQUARE	
DEMOLITION GROUND FLOOR STONE LAYOUT	
DRAWING NO: 150	
SCALE: 1:20, 1:250 @A3	DATE: 16.04.19
WRIGHT & WRIGHT ARCHITECTS	
<small>80/91 Bayham Street London NW1 0AG TEL 020 7428 9393 FAX 020 7428 9394 www.wrightandwright.co.uk www.wrightandwright.co.uk</small>	