
broxap®

Operating the Hi-Rise, easy to use and with minimal effort







trough be overloaded

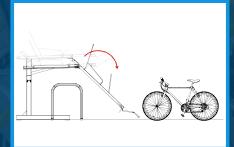


2 Lift and pull to lower trough

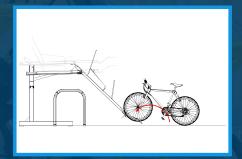


Place front wheel of cycle into trough

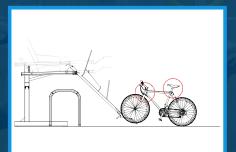


4 Grip cycle at the saddle and head tube

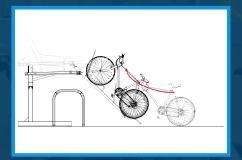


Roll cycle upwards into the trough

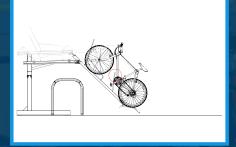


Secure cycle using
'D' lock or similar
style lock

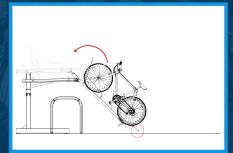

Lift using handles and slide forward until trough is positively locked

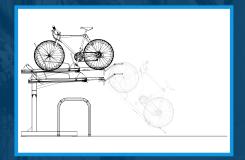

Cycle is now correctly stowed

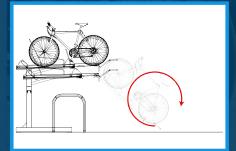

9 Reverse action to unload cycle