

Job No. <b>16.749</b>	Drawn <b>DE</b>	Client <b>4 Handel Street Ltd</b>	david narro associates
Drg No. <b>SK03</b>	Checked	Job Title <b>Staircase at 4 Handel Street, London WC1</b>	Consulting Structural & Civil Engineers
Date <b>Aug 2016</b>	Scale <b>NTS</b>	Sheet Title <b>Stair Repairs</b>	

# Step 2 - Further Propping & removal of finishes

Indicates areas of lath & plaster finishes to underside of stait to be stripped at this stage

Areas of lath & plaster finishes previous stripped

Carefully strip centre section of lath & plaster to underside of winders to establish arrangement of carriage timbers within stair


Install timber frame propping all three carriage beams

Arrangement of carriage timber in winder section of stair not fully known. Do not strip finishes over full underside until pattern of carriage timbers in winder confirmed and propping in place.

Existing timber carriage beams

Strip remaining lath & plaster finishes to underside of straight flights

Take up carpet, underlay and other finishes on top of stair at this stage

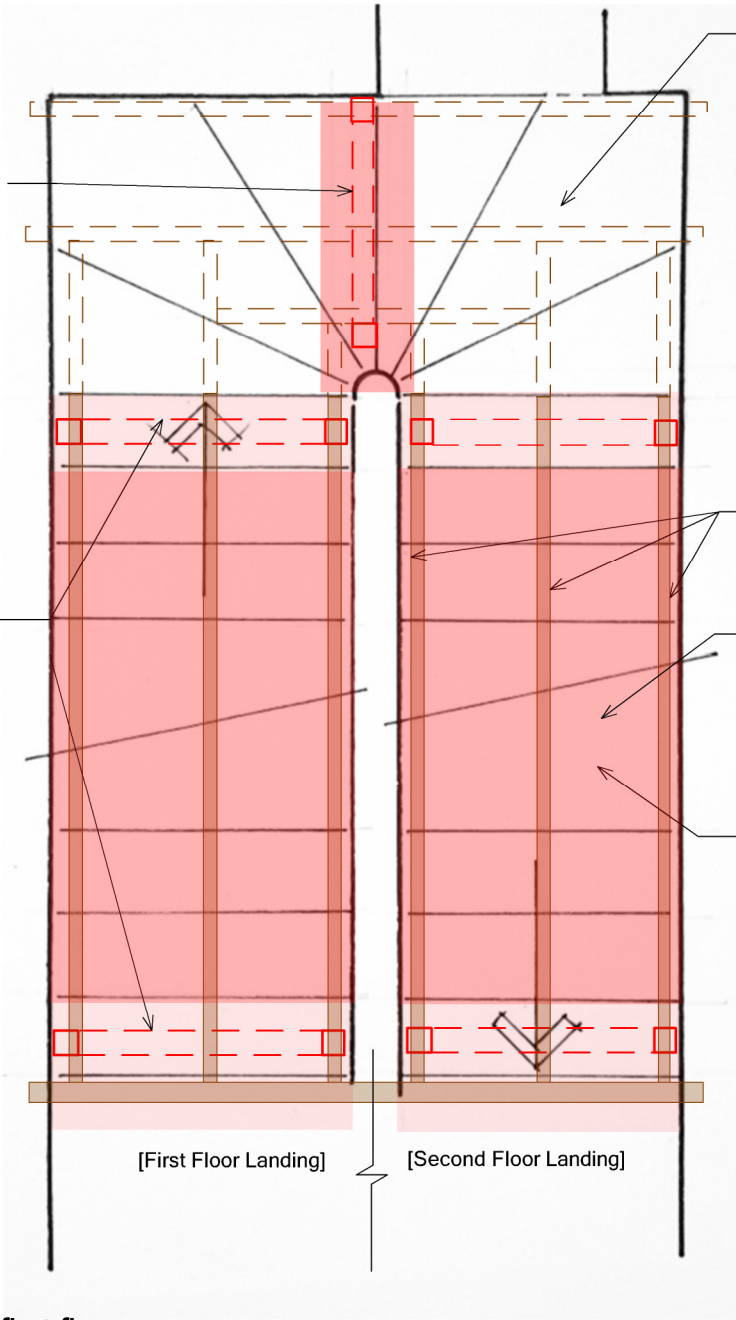

Plan of stair between first floor to second floor landings (not to scale)