
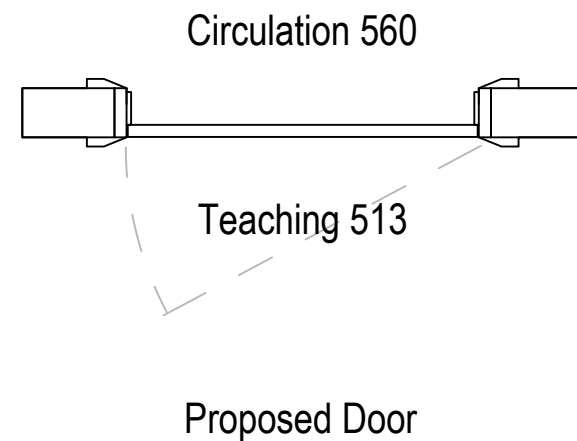


Notes

- Carefully remove existing door and associated fittings, casings, beads, linings and architraves and discard.
- Carefully remove existing glazed fanlights and associated beads, linings and architraves and discard.
- Set existing room name and way finding signage to one side for future reapplication.
- Make good remaining door opening and adjust size of opening to suit new door leaf and the associated proposed casings.
- Supply and fit new casing / lining as per specification to suit dimensions shown. Casing depth to suit wall / partition thickness.
- Form fanlight arrangement above door using mouldings to match existing.
- Apply fire resistant / intumescent flexible sealant around casing and wall abutment.
- Replace existing fanlight with solid timber stud infill with 15mm fireline board to both sides
- Apply new architraves and make good existing skirtings.
- Supply and fit new door and associated fixtures and fittings as per relevant door specification (refer to door schedule)
- Check, ease and adjust door operation.
- Fit retained room name and way finding signage to door.

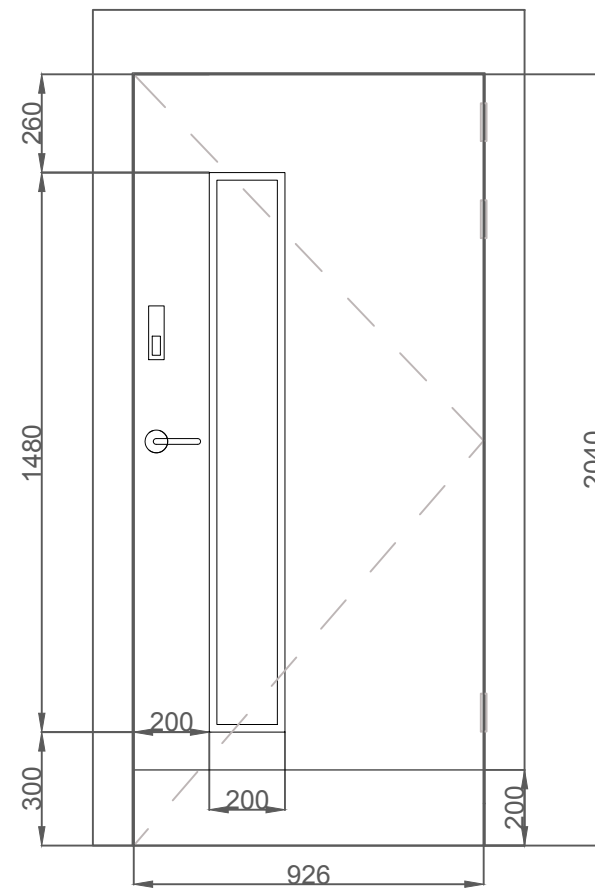

Rev	Date	Description	Initials
-----	------	-------------	----------

Client
CAMDEN WMC

Project Name
CAMDEN WMC DOOR SCHEDULE

Drawing Title
LEVEL 5 DOOR 067

Issue Status
LISTED BUILDING CONSENT

Scale & Paper Size	Date Originated	Drawn
1:20@A3	18-03-21	VP

Project No.	Stage	No.	Rev.
P404	-	002	0

Scale Bar 1:20 (mm)

