ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	3180 x 2100 x 90 Front Panel		1
2	1785x1900 Pre-ins Double doors		1
3	Anodised Aluminium Louvre with hit and miss Vent		2
4	Yale Night latch with Chrome effect Pull		1
5	shoot bolt bracket		2
6	shoot bolt bolt		2
7	Heavy Duty Door Stay		2
8	Stainless Steel Hinge		6
9	3180 x 2100 x 90 Back Panel		1
10	1660 x 2100 x 90 Side Panel		2
11	3200 x 1700 x 90 Lid Panel		1

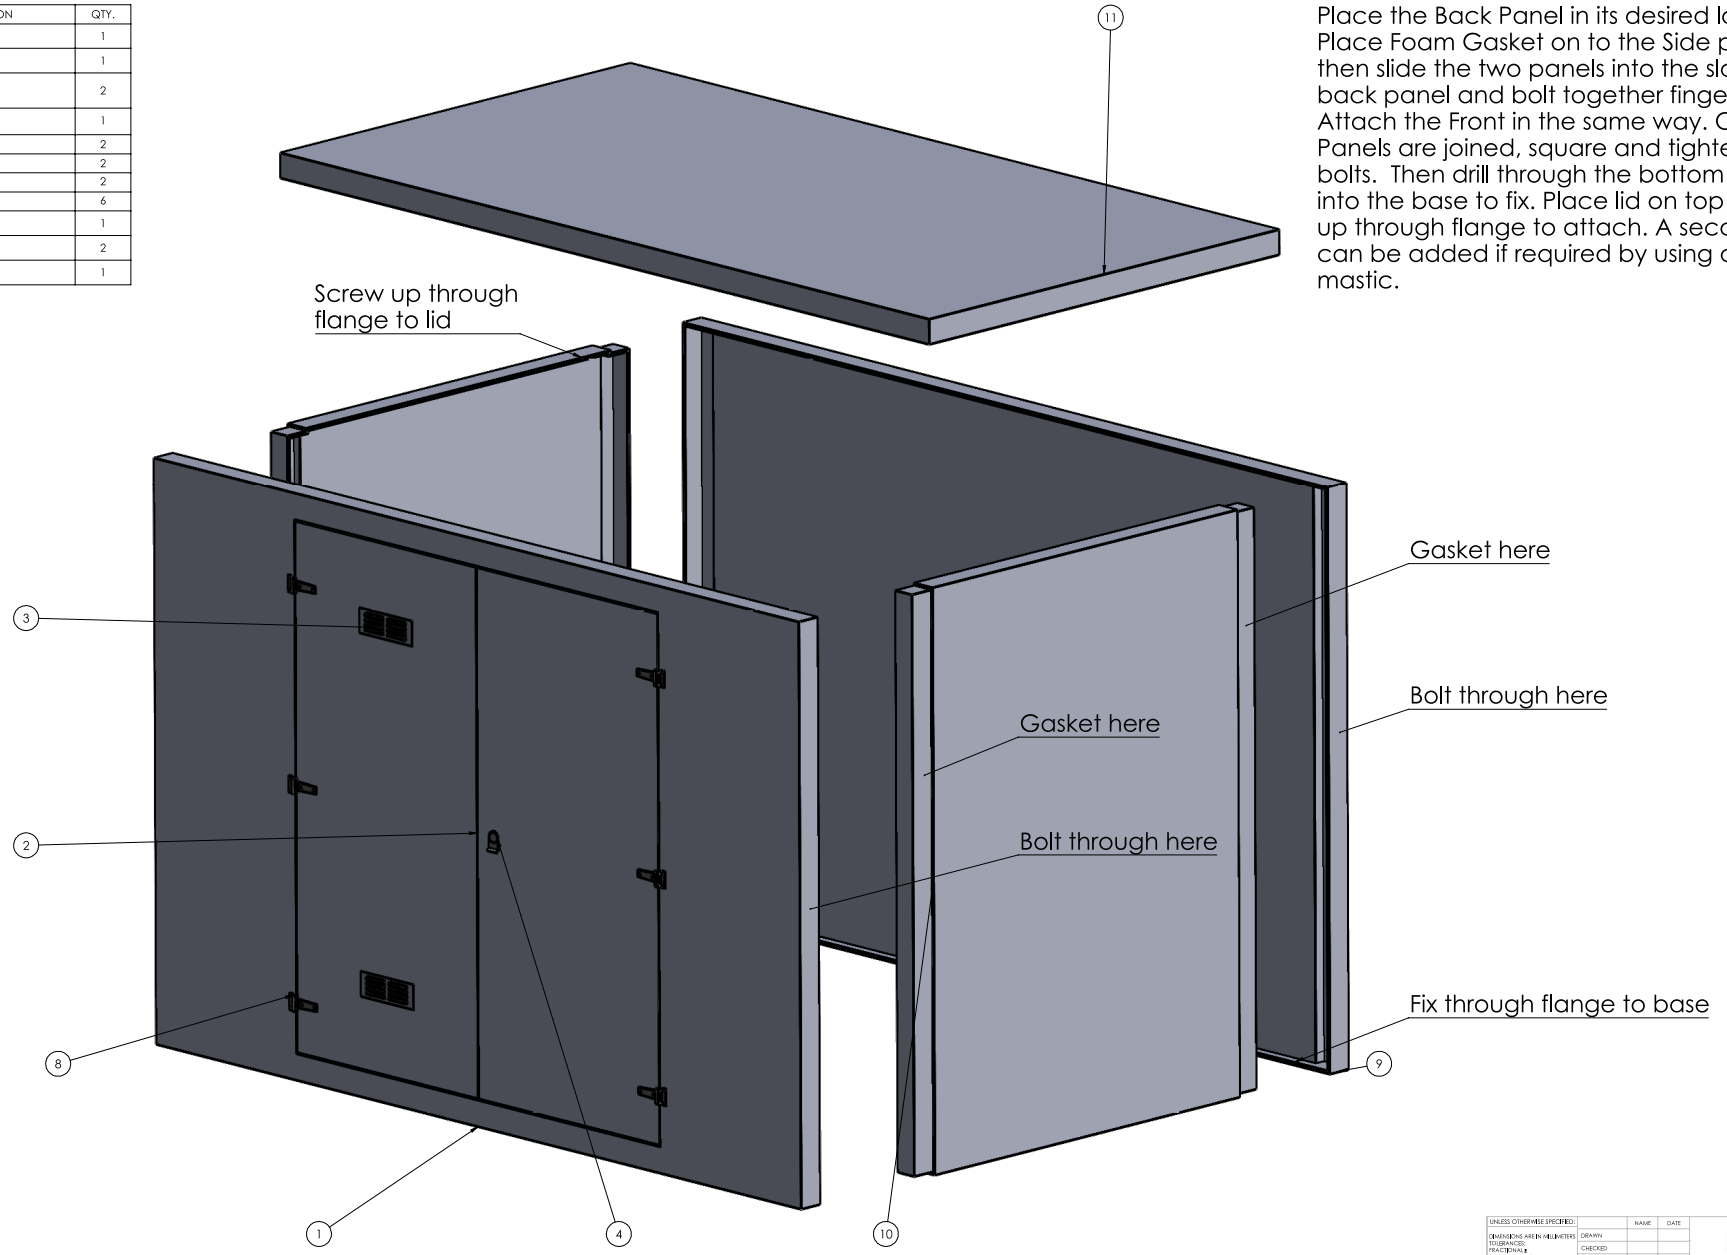

Place the Back Panel in its desired location. Place Foam Gasket on to the Side panels, then slide the two panels into the slots on the back panel and bolt together finger tight. Attach the Front in the same way. Once all Panels are joined, square and tighten the bolts. Then drill through the bottom flange into the base to fix. Place lid on top then Scew up through flange to attach. A secondary seal can be added if required by using a silicone mastic.

UNLESS OTHERWISE SPECIFIED: | NAME | DATE
DIMENSIONS ARE IN MILLIMETERS | DRAWN
TOLERANCES: | CHECKED
FRACTIONAL ± | ENG APPR.
ANGULAR: MACH ± BEND ±
TWO PLACE DECIMAL ± | MFG APPR.
THREE PLACE DECIMAL ± | Q.A.
INTERPRET GEOMETRIC TOLERANCING PER: | COMMENTS:
MATERIAL
FINISH
DO NOT SCALE DRAWING

Dutypoint Systems
Shepherd Road
Gloucester
GL2 2DD
T: 01452 300 110

SIZE D | DWG. NO. | REV