

Sara Crystal - Amended Kitchen (Condenser Location)

Tuesday, 27 July 2021

Prepared For 16 Belsize Road, NW6 3BB

8 Suggested Instructions Identified

Dean Symmons

The Air Conditioning Company






Bed 1

Unit to be installed centred.
Pipework in trunking kit.
Roof penetration to be marked
for builder to cut.



Bed 2

Unit to be installed centred.
Pipework in trunking kit.
Roof penetration to be marked
for builder to cut.

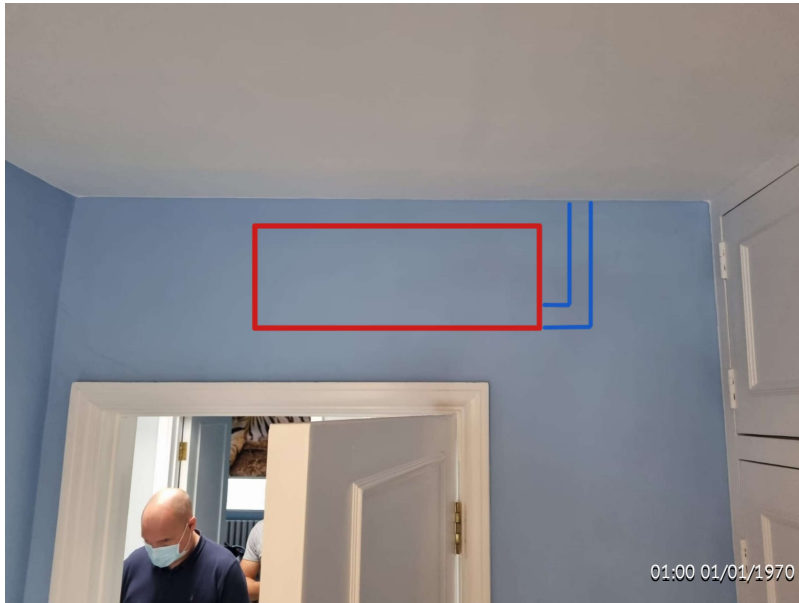

Office

Unit to be installed centred.
 Pipework in trunking kit.
 Roof penetration to be marked
 for builder to cut.



Roof Layout

All Swan necks to be installed by
 builders as well as roof cutting/
 penetrations.

Cable tray and rubberised flexi
 feet to be used to house the
 pipework from Swan neck to
 condensers.

Multi Condenser on the right.
 Kitchen single split on the left.
 Will help with pipe run capacities
 and as its above bathroom will
 reduce noise in bedrooms, the
 chimney brest will help with
 wind protection.

Keep units away from Flue by
 atleast 300mm so as to protect
 against false readings.



Master Bedroom

Unit to be installed over to the right.

Pipework to be boxed in by builders.

Please leave enough room under pipework so as boxing in can finish flush with the bottom of the unit.

Gravity drain to outside.



Kitchen / Diner

Unit to be placed in this location to help with getting the swing of air through to the other side of kitchen.

Pipework to be boxed in by builders.

Please leave enough room under pipework so as boxing in can finish flush with the bottom of the unit.

Mini blanc to be used.



Master Bed Route / Kitchen Route

Master Bedroom Pipework up and over parapet wall, then up tiles and through rain water hole.

Kitchen pipework out and up towards flat roof then up to join Master Bedroom Pipework, then on to roof.



Kitchen Route

Pipework to be housed on cable tray and rubberised feet from wall to condenser.