


SECTION

Notes:

1. Do not scale from drawings, relevant dimensions provided
2. Footing to be mass concrete, base slab and upstands to be reinforced concrete.
3. Foundation depth chosen based on tree survey information and assumed ground conditions.
4. Apply clay protection on inside of the footings, and underneath the slab.
5. Insulation may be placed underneath suspended slab, but to stop short of footing - detail by others.
6. Root protection zone to be established by others - excavation inside root protection zone to be done by non-mechanical dig.

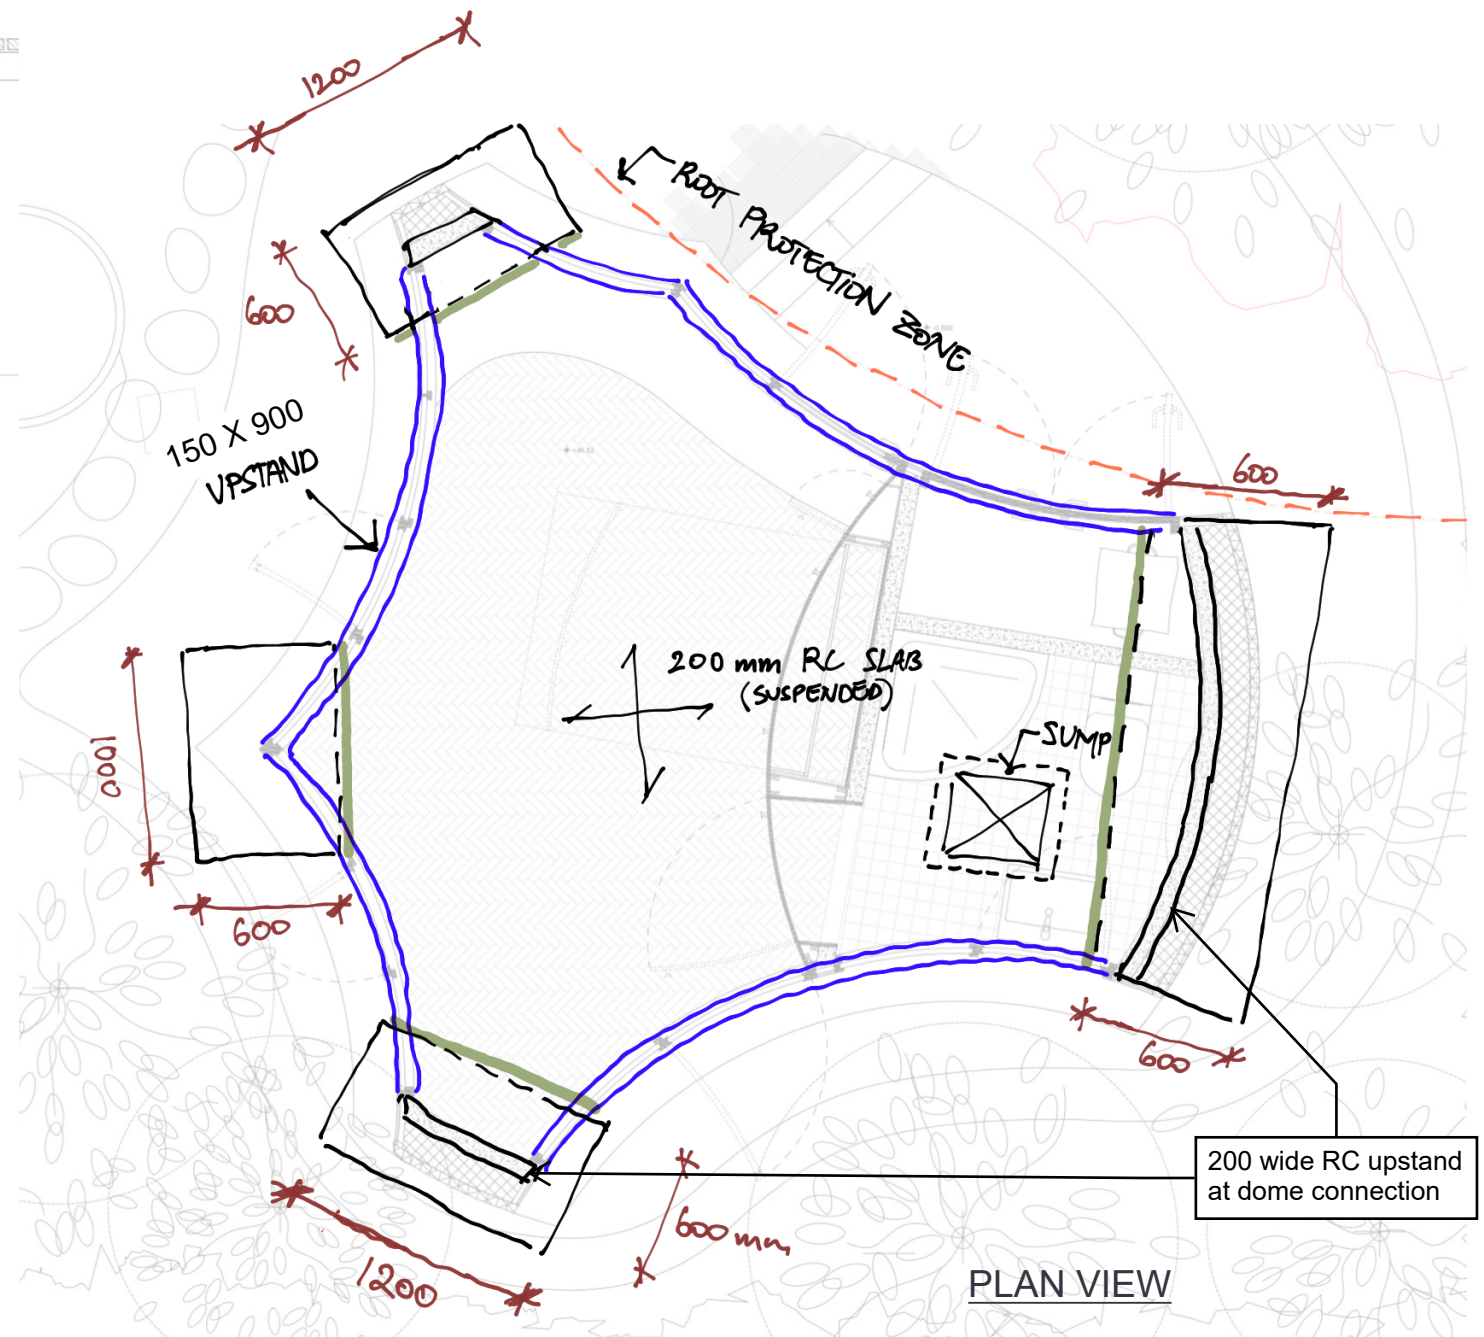

PLAN VIEW