




Measurement condition
PURY-P350,400YJM-A(-BS)

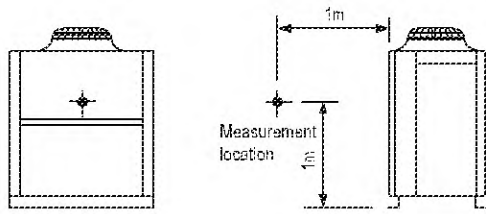

Measurement condition
PURY-P450YJM-A(-BS)

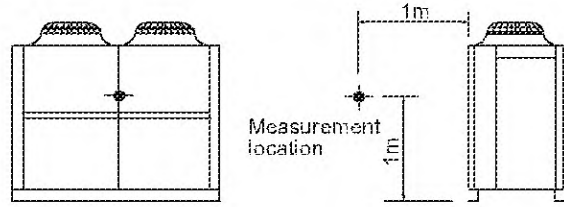


Sound level of PURY-P350YJM-A(-BS)

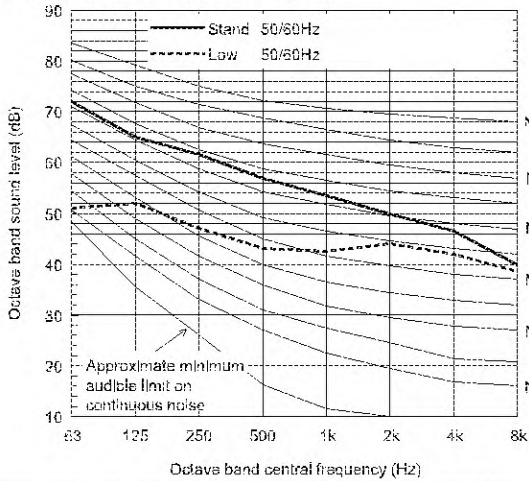

| | | 63 | 125 | 250 | 500 | 1k | 2k | 4k | 8k | dB(A) |
|----------------|---------|------|------|------|------|------|------|------|------|-------|
| Standard | 50/50Hz | 73.0 | 65.0 | 61.5 | 57.0 | 53.5 | 50.0 | 46.5 | 40.0 | 60.0 |
| Low noise mode | 50/50Hz | 51.0 | 52.0 | 47.0 | 43.0 | 42.5 | 44.0 | 42.0 | 38.5 | 50.0 |

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.


Sound level of PURY-P450YJM-A(-BS)

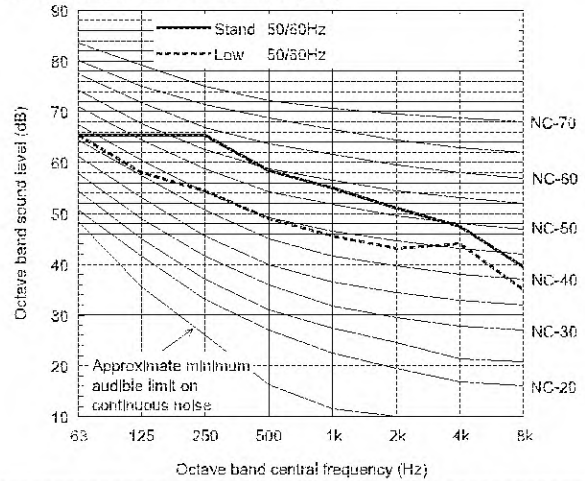

| | | 63 | 125 | 250 | 500 | 1k | 2k | 4k | 8k | dB(A) |
|----------------|---------|------|------|------|------|------|------|------|------|-------|
| Standard | 50/50Hz | 65.5 | 65.5 | 65.5 | 58.5 | 55.0 | 51.0 | 47.5 | 39.5 | 62.0 |
| Low noise mode | 50/50Hz | 35.5 | 38.0 | 34.5 | 29.0 | 25.5 | 23.0 | 21.0 | 17.0 | 53.0 |

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Sound level of PURY-P400YJM-A(-BS)

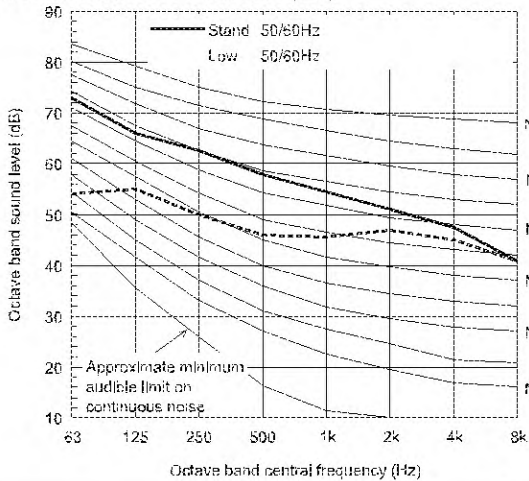

| | | 63 | 125 | 250 | 500 | 1k | 2k | 4k | 8k | dB(A) |
|----------------|---------|------|------|------|------|------|------|------|------|-------|
| Standard | 50/50Hz | 73.0 | 66.0 | 62.5 | 58.0 | 54.5 | 51.0 | 47.5 | 41.0 | 61.0 |
| Low noise mode | 50/50Hz | 54.0 | 55.0 | 50.0 | 46.0 | 45.5 | 47.0 | 45.0 | 41.0 | 53.0 |

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.