




Measurement condition
PURY-EP200, 250YLM-A(-BS)

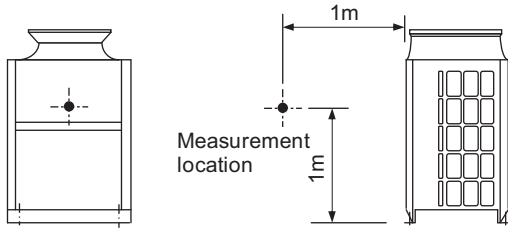

Measurement condition
PURY-EP300, 350YLM-A(-BS)

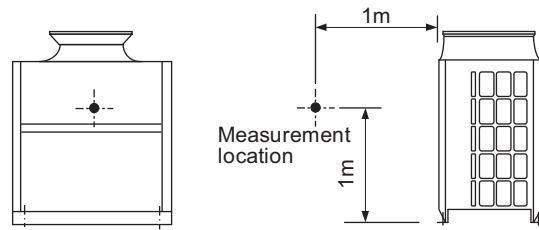


Sound level of PURY-EP200YLM-A(-BS)

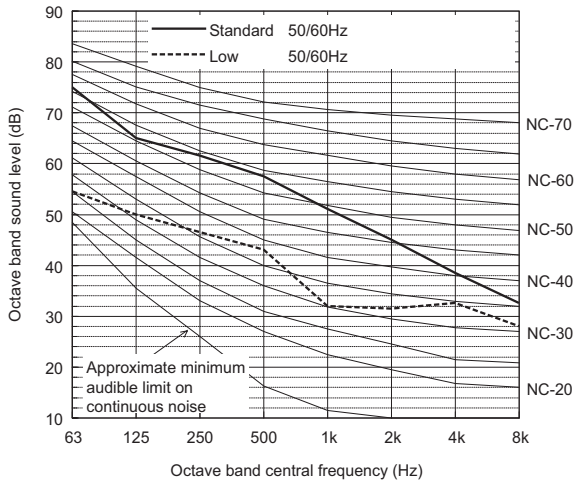

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	75.0	65.0	61.5	57.5	51.0	45.0	38.5	32.5	59.0
Low noise mode	50/60Hz	54.5	50.0	46.5	43.0	32.0	31.5	32.5	28.0	44.0

When Low noise mode is set the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.


Sound level of PURY-EP300YLM-A(-BS)

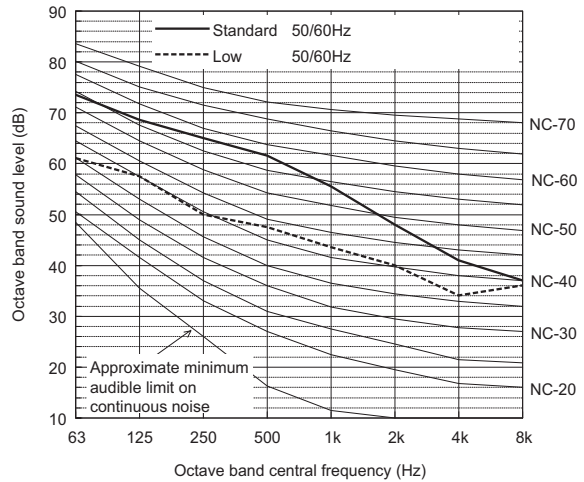

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	73.5	68.5	65.0	61.5	55.5	48.0	41.0	37.0	62.5
Low noise mode	50/60Hz	61.0	57.5	50.0	47.5	43.5	40.0	34.0	36.0	50.0

When Low noise mode is set the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.


Sound level of PURY-EP250YLM-A(-BS)

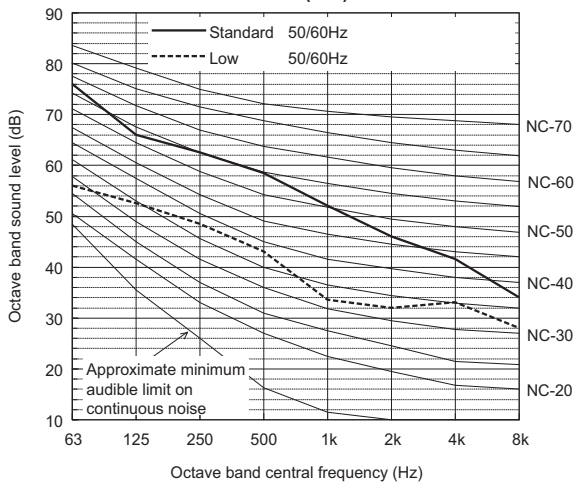

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	76.0	66.0	62.5	58.5	52.0	46.0	41.5	34.0	60.0
Low noise mode	50/60Hz	56.0	52.5	48.5	43.0	33.5	32.0	33.0	28.0	45.0

When Low noise mode is set the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Sound level of PURY-EP350YLM-A(-BS)

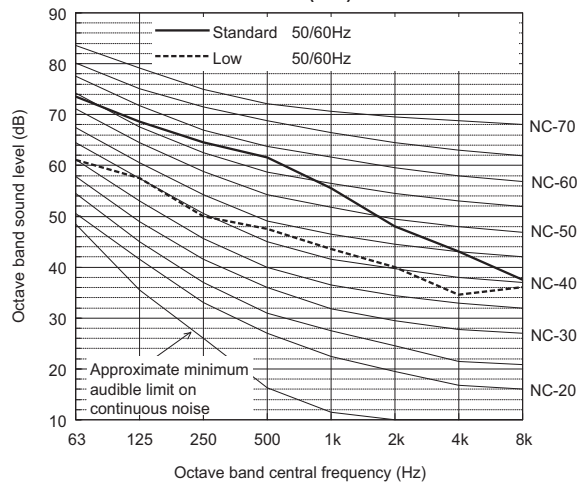


		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	73.5	68.5	64.5	61.5	55.5	48.0	43.0	37.5	62.5
Low noise mode	50/60Hz	61.0	57.5	50.0	47.5	43.5	40.0	34.5	36.0	50.0


When Low noise mode is set the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

♦ Depending on the operation conditions, the unit generates noise caused by valve actuation, refrigerant flow, and pressure changes when operating normally. Please consider to avoid location where quietness is required. For BC controller, it is recommended to be installed in places such as ceilings of corridor, rest rooms and plant rooms.

Measurement condition
PURY-EP400, 450, 500YLM-A(-BS)

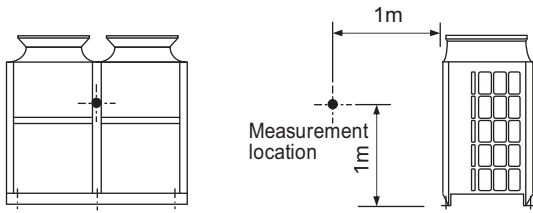


Sound level of PURY-EP500YLM-A(-BS)

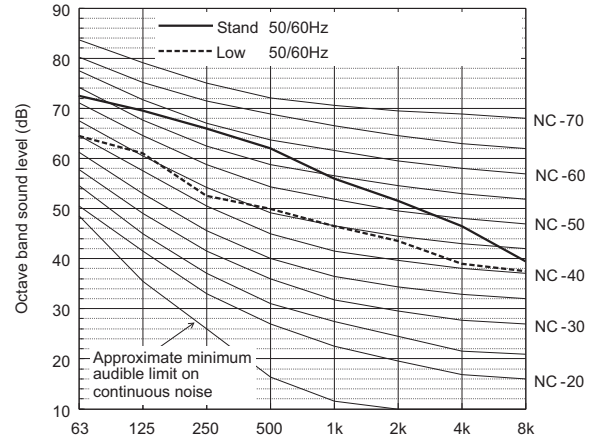

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	72.5	69.5	66.0	62.0	56.0	51.5	46.5	39.5	63.5
Low noise mode	50/60Hz	64.5	61.0	52.5	50.0	46.5	43.5	39.0	37.5	53.0

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.


Sound level of PURY-EP400YLM-A(-BS)

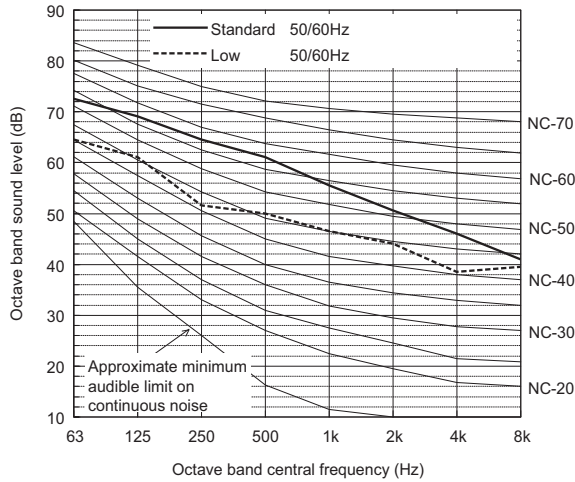

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	72.5	69.0	64.5	61.0	55.5	50.5	46.0	41.0	62.5
Low noise mode	50/60Hz	64.5	61.0	51.5	50.0	46.5	44.0	38.5	39.5	53.0

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Sound level of PURY-EP450YLM-A(-BS)

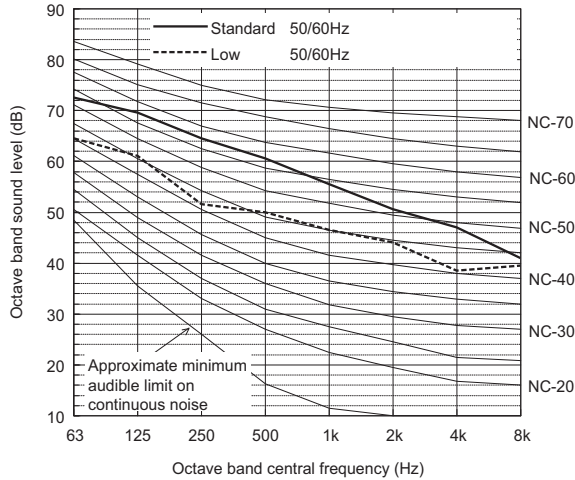


		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	72.5	69.5	64.5	60.5	55.5	50.5	47.0	41.0	62.5
Low noise mode	50/60Hz	64.5	61.0	51.5	50.0	46.5	44.0	38.5	39.5	53.0


When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

- Depending on the operation conditions, the unit generates noise caused by valve actuation, refrigerant flow, and pressure changes when operating normally. Please consider to avoid location where quietness is required. For BC controller, it is recommended to be installed in places such as ceilings of corridor, rest rooms and plant rooms.


Measurement condition
PURY-EP550YSLM-A(-BS)

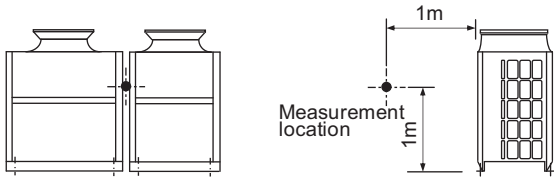

Measurement condition
PURY-EP600, 650, 700YSLM-A(-BS)

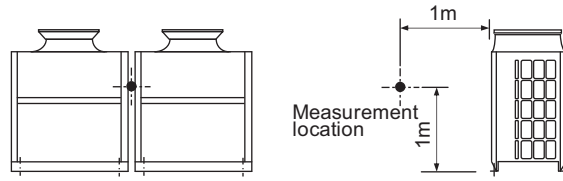


Sound level of PURY-EP550YSLM-A(-BS)

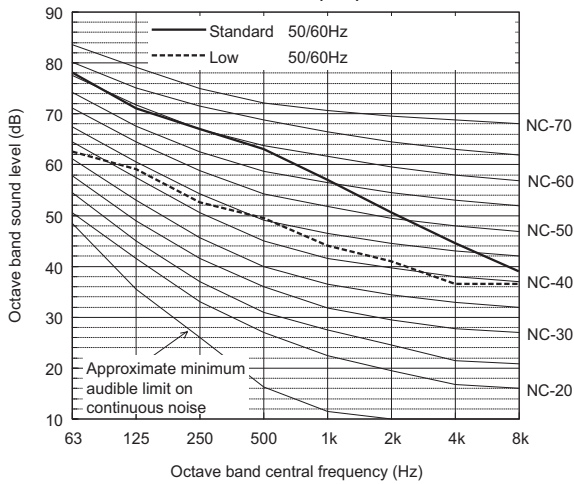

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	78.0	71.0	67.0	63.0	57.0	50.5	44.5	39.0	64.5
Low noise mode	50/60Hz	62.5	59.0	52.5	49.5	44.0	41.0	36.5	36.5	51.5

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.


Sound level of PURY-EP600YSLM-A(-BS)

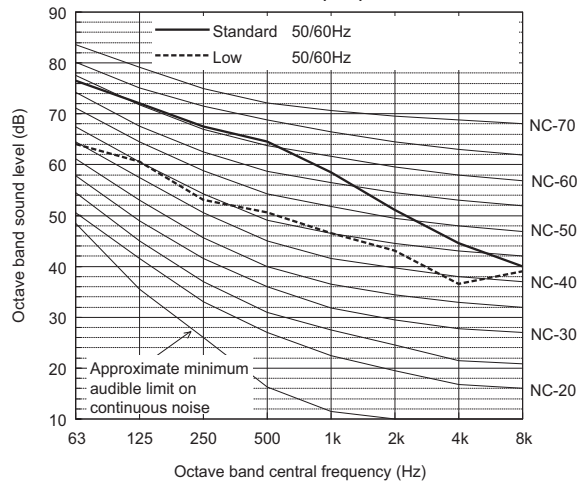

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	76.5	72.0	67.5	64.5	58.5	51.0	44.5	40.0	65.5
Low noise mode	50/60Hz	64.0	60.5	53.0	50.5	46.5	43.0	36.5	39.0	53.0

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.




Sound level of PURY-EP650YSLM-A(-BS)

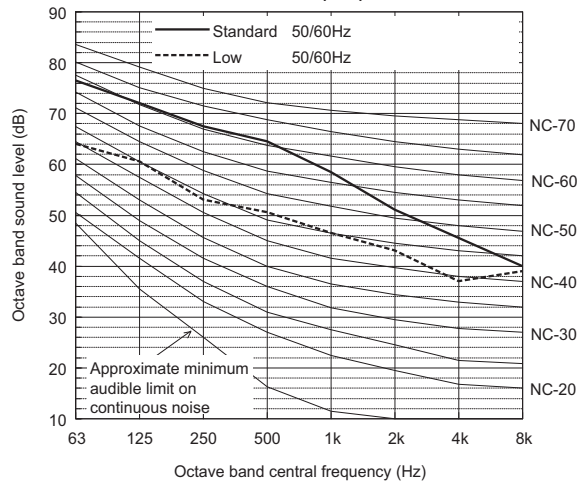

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	76.5	72.0	67.5	64.5	58.5	51.0	45.5	40.0	65.5
Low noise mode	50/60Hz	64.0	60.5	53.0	50.5	46.5	43.0	37.0	39.0	53.0


When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Depending on the operation conditions, the unit generates noise caused by valve actuation, refrigerant flow, and pressure changes when operating normally. Please consider to avoid location where quietness is required. For BC controller, it is recommended to be installed in places such as ceilings of corridor, rest rooms and plant rooms.

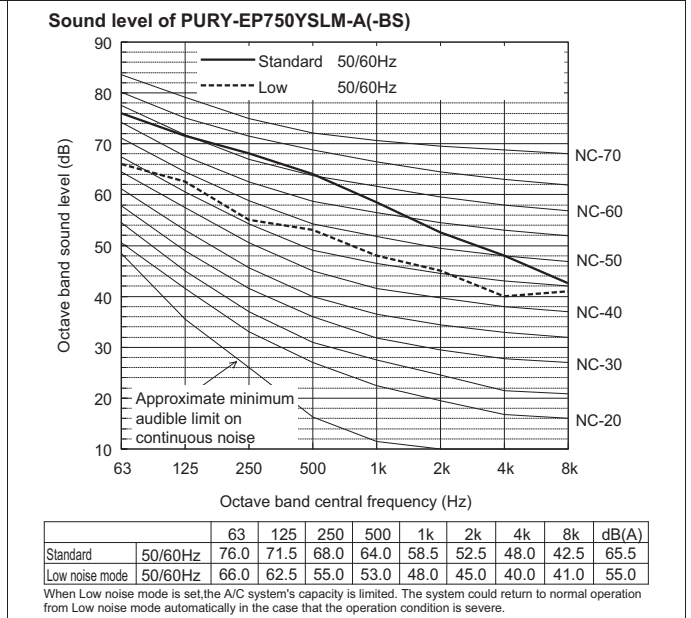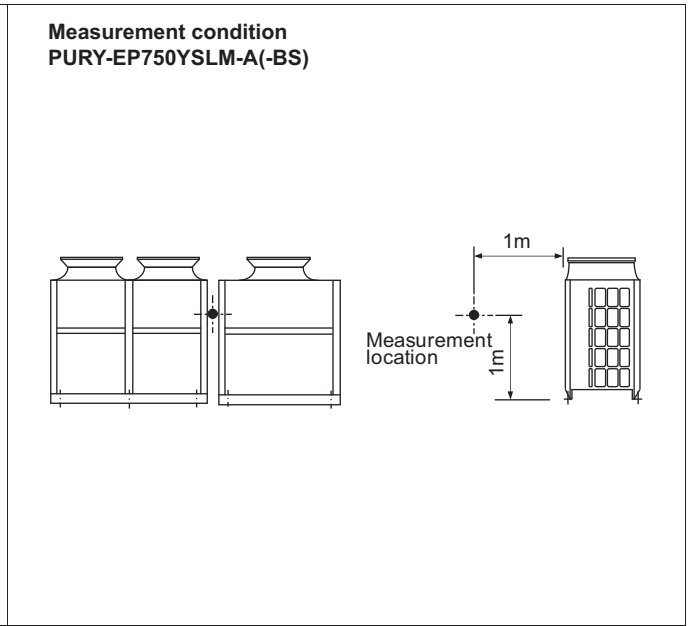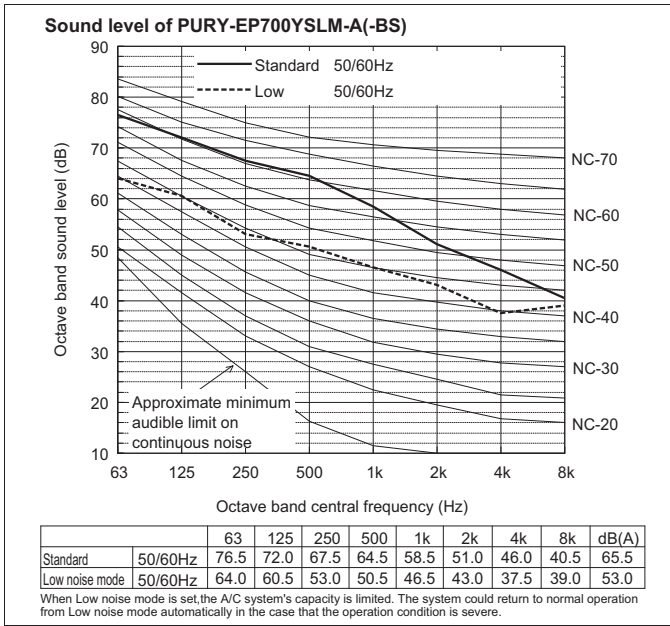


- Depending on the operation conditions, the unit generates noise caused by valve actuation, refrigerant flow, and pressure changes when operating normally. Please consider to avoid location where quietness is required. For BC controller, it is recommended to be installed in places such as ceilings of corridor, rest rooms and plant rooms.

Measurement condition
PURY-EP800, 850, 900YSLM-A(-BS)

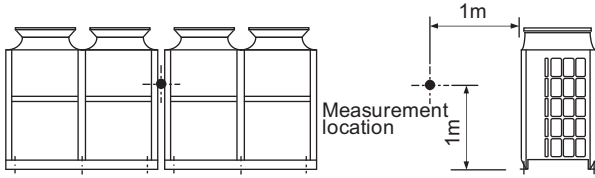


Sound level of PURY-EP900YSLM-A(-BS)

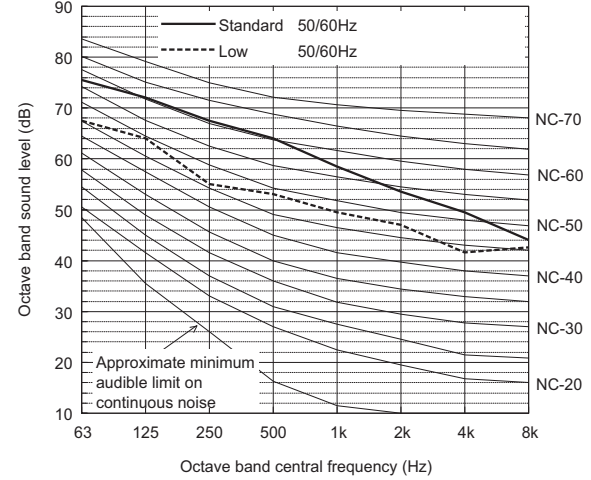

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	75.5	72.0	67.5	64.0	58.5	53.5	49.5	44.0	65.5
Low noise mode	50/60Hz	67.5	64.0	55.0	53.0	49.5	47.0	41.5	42.5	56.0

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.


Sound level of PURY-EP800YSLM-A(-BS)

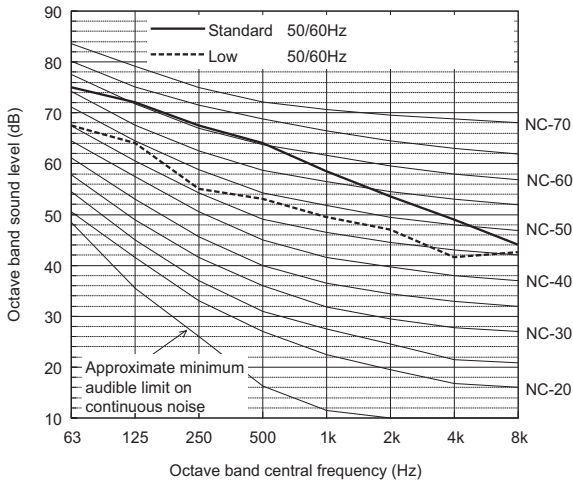

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	75.0	72.0	67.5	64.0	58.5	53.5	49.0	44.0	65.5
Low noise mode	50/60Hz	67.5	64.0	55.0	53.0	49.5	47.0	41.5	42.5	56.0

When Low noise mode is set the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Sound level of PURY-EP850YSLM-A(-BS)

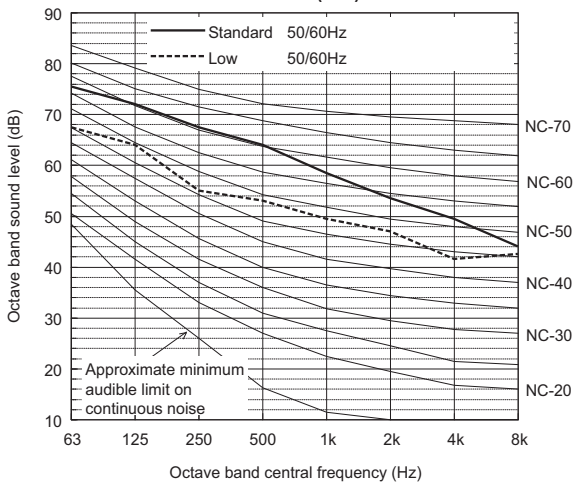

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard	50/60Hz	75.5	72.0	67.5	64.0	58.5	53.5	49.5	44.0	65.5
Low noise mode	50/60Hz	67.5	64.0	55.0	53.0	49.5	47.0	41.5	42.5	56.0

When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

- ♦ Depending on the operation conditions, the unit generates noise caused by valve actuation, refrigerant flow, and pressure changes when operating normally. Please consider to avoid location where quietness is required. For BC controller, it is recommended to be installed in places such as ceilings of corridor, rest rooms and plant rooms.