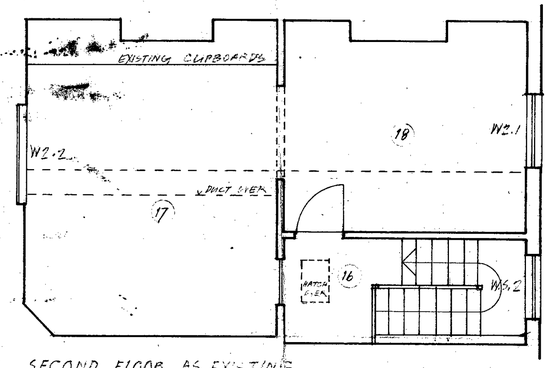

SECOND FLOOR AS EXISTING

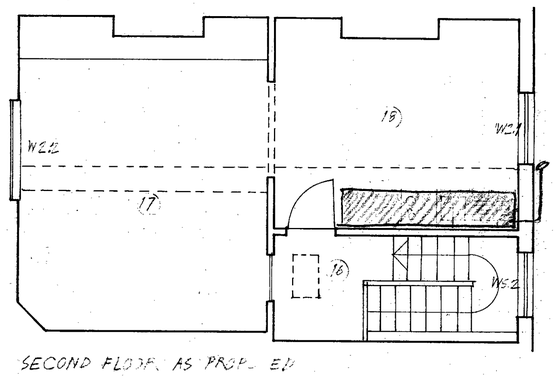

SECOND FLOOR AS PROPOSED

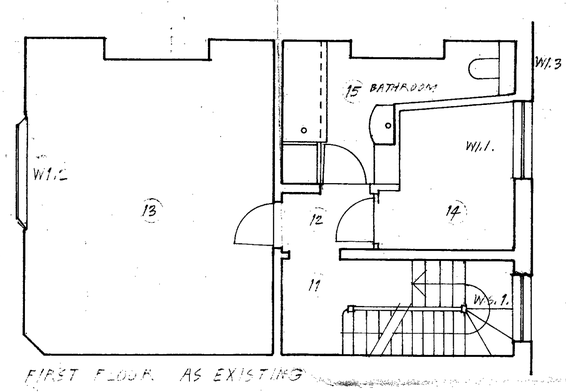

FIRST FLOOR AS EXISTING

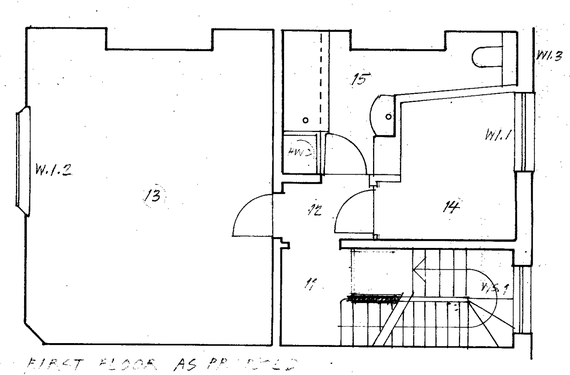

FIRST FLOOR AS PROPOSED

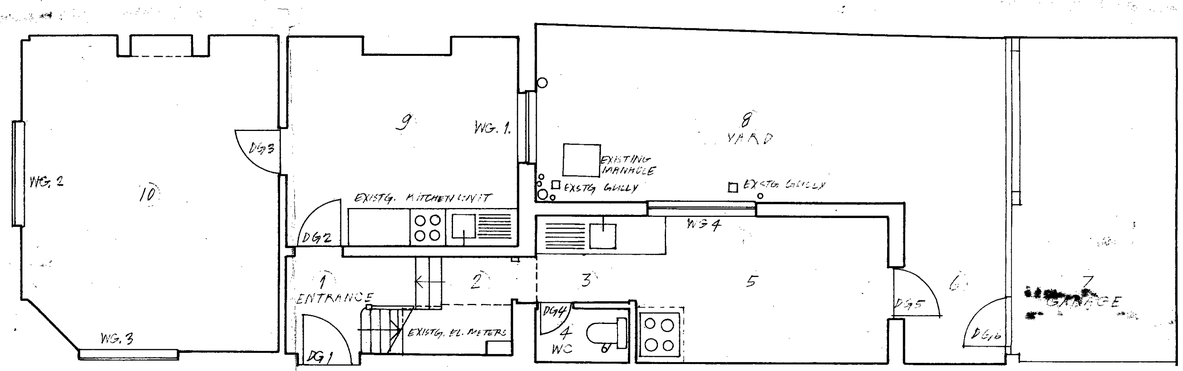

GROUNDFLOOR AS EXISTING

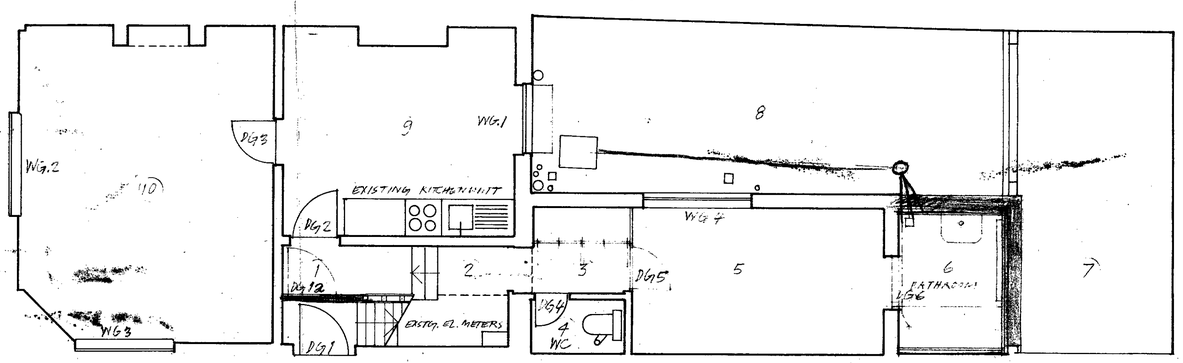

GROUNDFLOOR AS PROPOSED

PROPOSED WORK :

SPACE 11°

18 KITCHEN — FIT NEW KITCHEN UNIT SIMILAR TO THE EXISTING IN N° 9 AND CONNECT SINK WASTE VIA NEW WASTE PIPE TO MATCH EXISTING TO MANHOLE IN YARD (N° 8)

ELECTRICS: PROVIDE AND FIX NEW POWER OUTLETS TO KITCHEN APPARATUS

OWNER W2.1 : REPAIR BOTTOM RH CORNER OF SASH FRAME -

19 CARPENTER — FIT NEW INFILL PARTITION CONSISTING OF APPROX 50/50mm TREATED SW STUD WALL PARTITIONING AT CRS 600 mm CENTRES, IN BETWEEN TREAD SURFACE AND SOFFIT OF THE STAIRS LEADING FROM LEVELS 1 & 2. STUD WALL TO BE LINED EITHER SIDE WITH ½" PLASTERBD. SUPPLY AND FIX NEW DOOR WITH GLAZED INFILL PANEL AT POSITION SHOWN

15 PLUMBER : TERMINATE HW SUPPLY TO GROUND FLOOR FITTINGS. ADJUST HWC TO SUPPLY HW TO FIRST FLOOR AS EXISTING AND NEW KITCHEN UNIT AT SECOND FLOOR

LONDON BOROUGH OF CAMDEN
PLANS APPROVED
DISAPPROVED
- 6 AUG 1974
ON BEHALF OF THE COUNCIL

GTP/E2/12/15/18879.

1 CARPENTER — FIT NEW INFILL PARTITION SIMILAR AS IN SPACE 19. FORM DOOR OPENING AND FIX STANDARD SIZE FLUSH DOOR DG 1 IN POSITION SHOWN. DG 1 SUPPLY AND FIX SEALMASTER RESILIENT SEAL PROVIDE DOOR TYPE .....

3 PLUMBER — TAKE OUT EXISTING KITCHEN SINK UNIT. SEAL EXISTING PLUMBING. FIX PARTITION WALL DOOR TO SEPERATE 3 FROM 5 POSITION AS SHOWN.

CARPENTER — FIX WARDROBE UNIT AS SHOWN. (DOOR TYPE TO BE A MONOLITE SURFACED HARDWIT DETAILED SPECIFICATION)

6 PLUMBER — CONSTRUCT NEW BATHROOM CONSISTING THE FOLLOWING: NEW BRICK WALL TO REPLACE WALL DIVIDING EXISTG. 6 & 7. TIE IN BRICK WALL TO EXISTING WALLS. SCREED & TILE FLOOR.

ROOF — FLAT ROOF OF BUILT UP FELT WITH EXPOSED AGGREGATE ON WOODWOOL SLAB ON 100 x 200 JOISTS AT 450 CENTRES. PLASTERED PLASTERBOARD CEILING

ELECTR. — RECESSED LIGHT FITTING

6 BUILDER — INTERNAL WALLS BRICK LINED WITH PLASTERBOARD ON BLOCK, INFRA RED HEATING CONTROL. CONNECT ALL FITTINGS TO EXISTING VIA NEW MAINS.

9 BUILDER — FORM NEW OPENING IN EXISTING WINDOW. TAKE OUT BRICKWORK BELOW CILL TO FORM DOOR OPENING. SUPPLY AND FIX FRENCH WINDOW TO MATCH EXISTING.

5 CARPENTER — TAKE UP FLOOR BOARDS (REMOVE IN 15 ?) MAKE GOOD OPENING OVER ON GROUND FLOOR. POSITION.

PLUMBER — CONNECT HW SUPPLY TO SHOWER AS SPECIFICATION SHEET.

49 NO. X LEVERTON STREET NW5 - MAY 1974

DOWN ELDER DIP ARCH RIBA 169 SUSSEX GARDENS W2 [redacted] 3333