Areaview 13 Prince Albert Rd. Support to Vault wall below front Portico

SK Vlt Arch WII.3-8-15

NOT TO SCALE

DO NOT SCALE
INDICATIVE DETAILING -ENLARGED FOR CLARITY

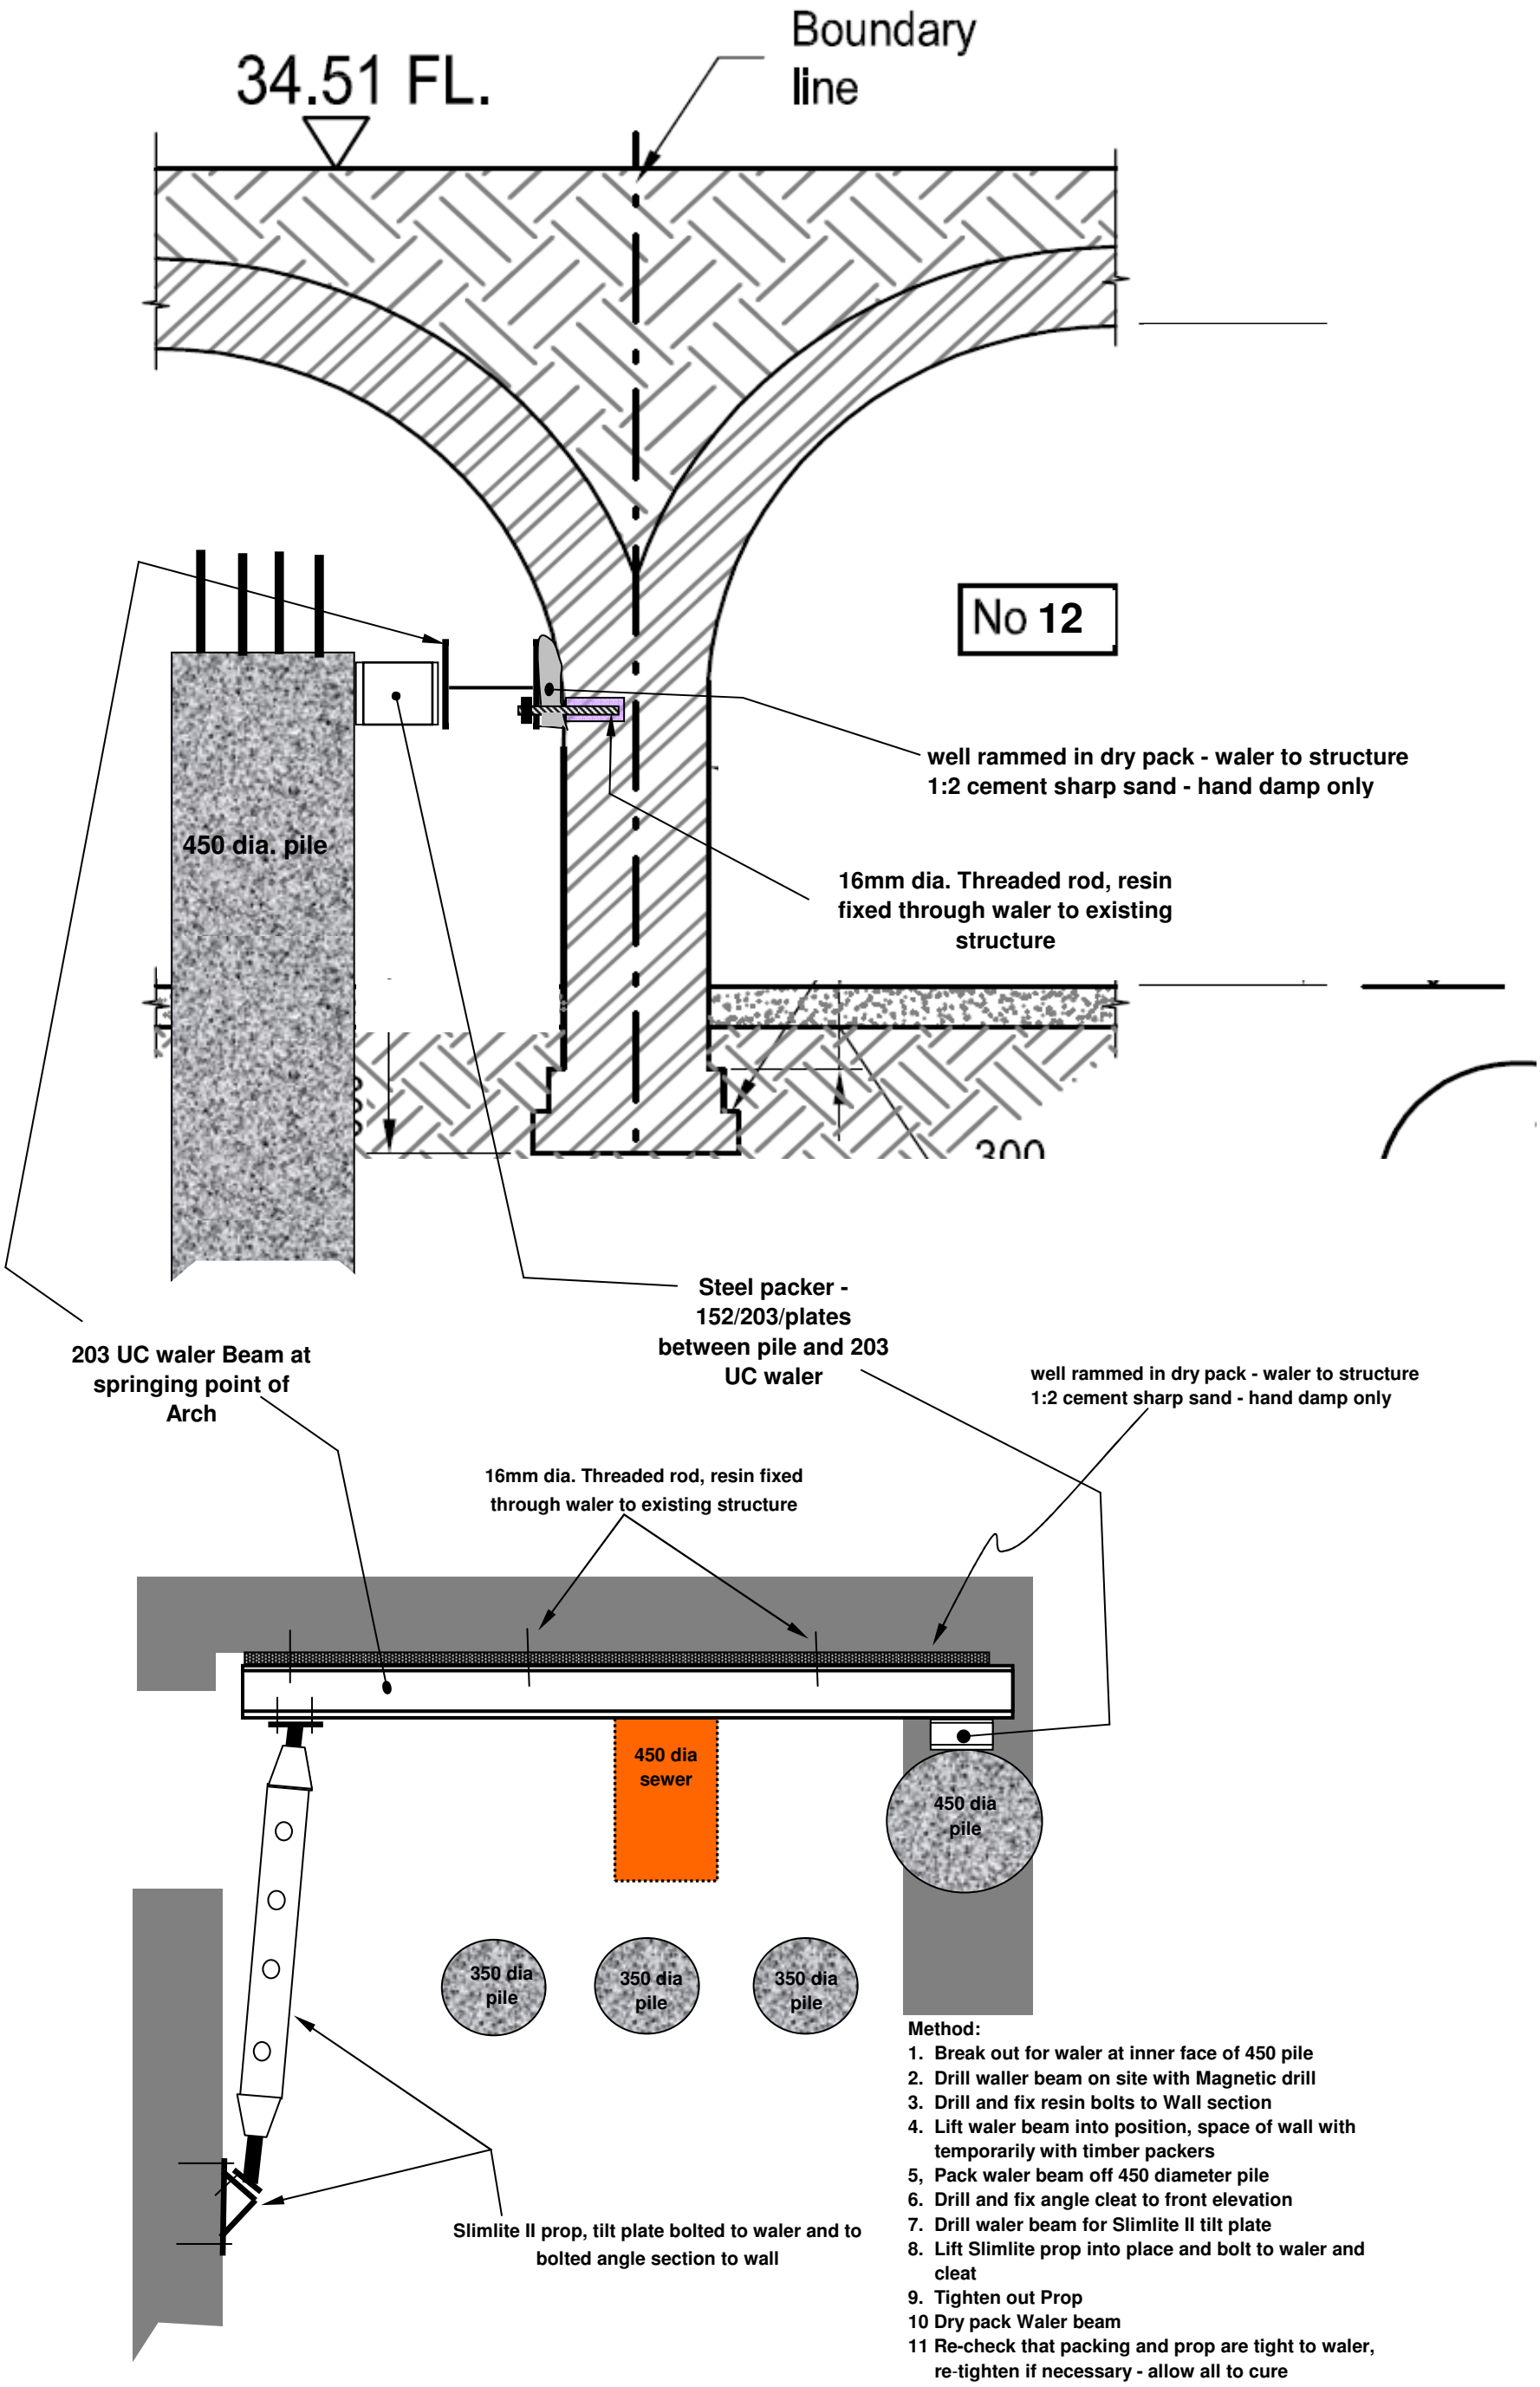

Method:

1. Break out for waler at inner face of 450 pile
2. Drill waller beam on site with Magnetic drill
3. Drill and fix resin bolts to Wall section
4. Lift waler beam into position, space of wall with temporarily with timber packers
5, Pack waler beam off 450 diameter pile
6. Drill and fix angle cleat to front elevation
7. Drill waler beam for Slimlite II tilt plate
8. Lift Slimlite prop into place and bolt to waler and cleat
9. Tighten out Prop
10 Dry pack Waler beam
11 Re-check that packing and prop are tight to waler, re-tighten if necessary - allow all to cure