



AAC Swiftpack® NITROSORB® - Guide to Filter Testing & Replacement

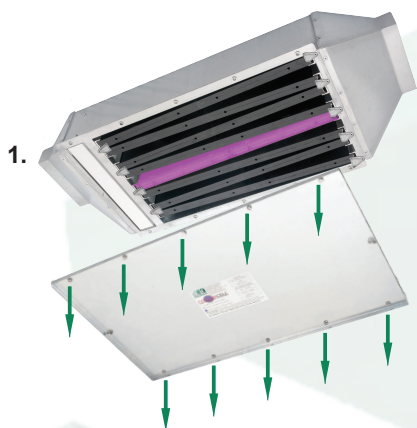

Step 1: Remove the access panel from the unit by undoing the series of screws retaining the panel in place.

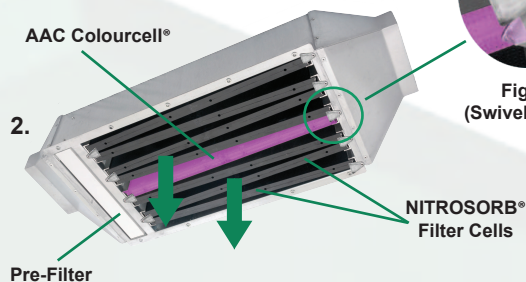


Step 2: Withdraw the NITROSORB® Filters individually from the unit by moving the retaining swivel catch to one side (Fig. A).

Two checks are available to assess the Media condition:

- 1). The AAC Colourcell®
- 2). Using a Media sample to carry out a Residual Capacity Test* (RCT) in the laboratory.

* PLEASE SEE OVERLEAF FOR FURTHER INFORMATION

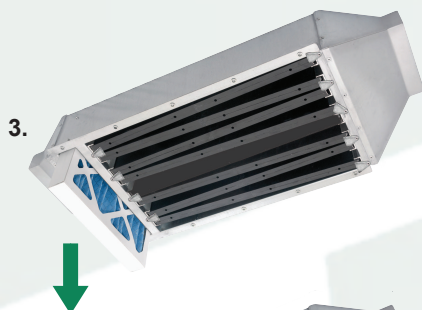

Step 3: Remove the Pre-Filter, and replace with a new Filter every 6 - 12 months.



Step 4: After the Filters have been removed, re-install the replacement NITROSORB® Filter Cells into the unit and move the swivel catch to retain them in place.






Step 5: Replace the access panel with the securing screws.

AAC Swiftpack® NITROSORB® - Guide to Filter Testing & Replacement

AAC Colourcell®: Media Life Chart



-  Media in new/ good condition
-  Media in use with some useful life
-  Media fully spent. No life remaining

* The Residual Capacity Test (RCT)

The AAC Colourcell® changes colour as the Media is used up. The Starting Colour is White, gradually changing to a Bright Pink when fully spent, and indicating a change of NITROSORB® Media may be required. This can be qualified with an RCT test that AAC Eurovent can conduct by receiving a NITROSORB® Filter Cell from the unit.

Additional Notes:

- The AAC NITROSORB® Filter Cell Media should last between 2-5 years.
- Replacement NITROSORB® Filters can be supplied as a complete set.

OR

- If the existing Filters are sent to AAC Eurovent Ltd and received in good condition, we will empty and re-fill those Filters, including safe disposal of the spent Media, and return them to you
- A replacement Pre-Filter can be supplied, which should be replaced at between 6 - 12 month intervals.
- Please pack all Filter Cells well to prevent them from being damaged in transit. All Cells should be sent to AAC Eurovent Ltd with a pre-supplied Special Delivery label. This will be posted to you on receipt and payment of your order.
- The turn-around time for Filters being serviced with new Media inside them is between 5 - 10 working days.

**For pricing on replacement spares please contact the AAC Eurovent
Sales office on 08444 77 4884**