


All drawings are viewed from the outside

The opening sash symbol (or arrow head) points to the hinge position

ITEM 3 - Second Floor Rear Elevation Office

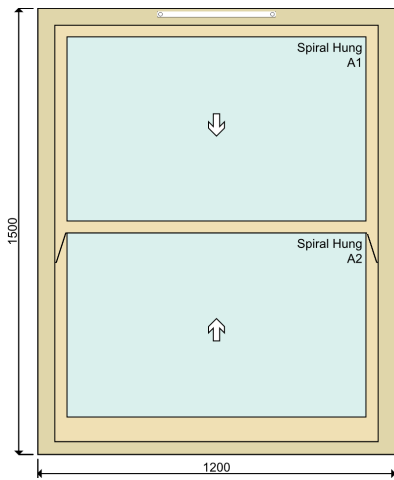

Item Weight: 61.2 Kg

Supply & Install a complete new Traditional Timber sash window in Engineered Redwood with Red Grandis Hardwood cill

Moulding

Ovolo

Sash Horn

Top: Yes, Bottom: No horn

Double Glazing - Top

4mm Planitherm Total Plus Clear - Argon Filled, White Warm Edge spacer -

4mm Float Clear

Double Glazing - Bottom

4mm Planitherm Total Plus Clear Toughened - Argon Filled, White Warm

Edge spacer - 4mm Float Clear Toughened

Paint / Finish

Internal: RAL 9016 Traffic White, External: RAL 9016 Traffic White, Cill: RAL 9016 Traffic White

Ironmongery

2 x Angel Restrictor (Timber), 2 x Fitch Locks, 2 x Lift Hook (Timber) in Polished Chrome and 1 x Trickle Vent Concealed In Frame 4600 in White

Trickle Vent Concealed In Frame 4600



Angel Restrictor (Timber)



Fitch Locks




Lift Hook (Timber)



All drawings are viewed from the outside

The opening sash symbol (or arrow head) points to the hinge position

ITEM 4 - First Floor Rear Elevation Stairwell

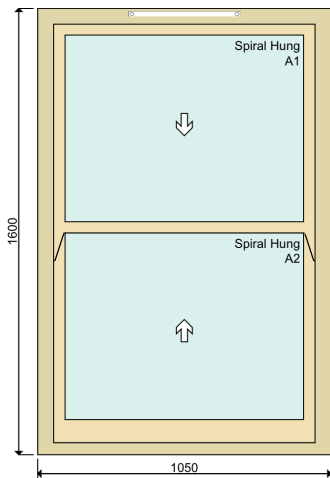

Supply & Install a complete new Traditional Timber sash window in Engineered Redwood with Red Grandis Hardwood cill

Moulding

Ovolo

Sash Horn

Top: Yes, Bottom: No horn

Double Glazing - Top

4mm Planitherm Total Plus Clear - Argon Filled, White Warm Edge spacer - 4mm Float Clear

Double Glazing - Bottom

4mm Planitherm Total Plus Clear Toughened - Argon Filled, White Warm Edge spacer - 4mm Float Clear Toughened

Paint / Finish

Internal: RAL 9016 Traffic White, External: RAL 9016 Traffic White, Cill: RAL 9016 Traffic White

Ironmongery

2 x Angel Restrictor (Timber), 2 x Fitch Locks, 2 x Lift Hook (Timber) in Polished Chrome and 1 x Trickle Vent Concealed In Frame 4600 in White

Item Weight: 57.6 Kg

Trickle Vent Concealed In Frame 4600



Angel Restrictor (Timber)



Fitch Locks




Lift Hook (Timber)



All drawings are viewed from the outside

The opening sash symbol (or arrow head) points to the hinge position

ITEM 7 - First Floor Rear Elevation Bedroom 3

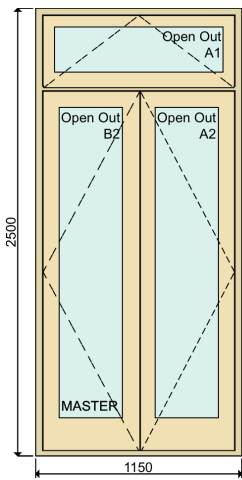

Item Weight: 94.8 Kg

Supply & Install a complete new Traditional Timber French door in Engineered Redwood with Red Grandis Hardwood cill

Moulding

Ovolo

Double Glazing - Fanlight

4mm Planitherm Total Plus Clear Toughened - Argon Filled, White Warm
Edge spacer - 4mm Float Clear Toughened

Double Glazing - Door Leaf

4mm Planitherm Total Plus Clear Toughened - Argon Filled, White Warm
Edge spacer - 4mm Float Clear Toughened

Paint / Finish

Internal: RAL 9016 Traffic White, External: RAL 9016 Traffic White, Cill: RAL 9016 Traffic White

Ironmongery

1 x Balmoral Window Handle, 1 x Cremona Espagnolette Bolt, 2 x Straight Surface Shoot Bolt in Polished Chrome and 1 x Trickle Vent Concealed In Frame 4600 in White

Notes

Cut out the existing window - chop out brickwork and dispose of all waste - install the new door then trim back to the liners - door and fan light are to be site coupled - door to be made with slim styles and include Cremona bolt and surface mounted shoot bolts

Cremona Espagnolette Bolt



Trickle Vent Concealed In Frame 4600



Straight Surface Shoot Bolt



Balmoral Window Handle

