



## Option 1 (Plexineon mounted with Clip)

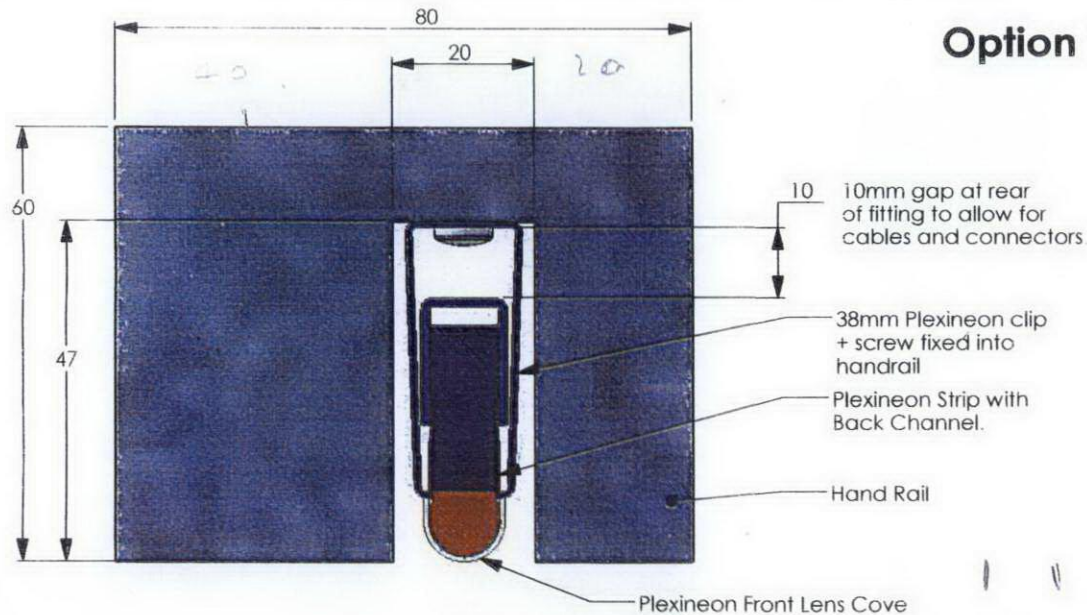

This method is preferable, as this utilises the standard Plexineon mount clip. If ever required the Plexineon can easily be removed, and re-mounted.

An optional Lens cover would be needed to attach a colour filter, if non-standard colour is required.

## Option 2 (Plexineon mounted with Silicone)

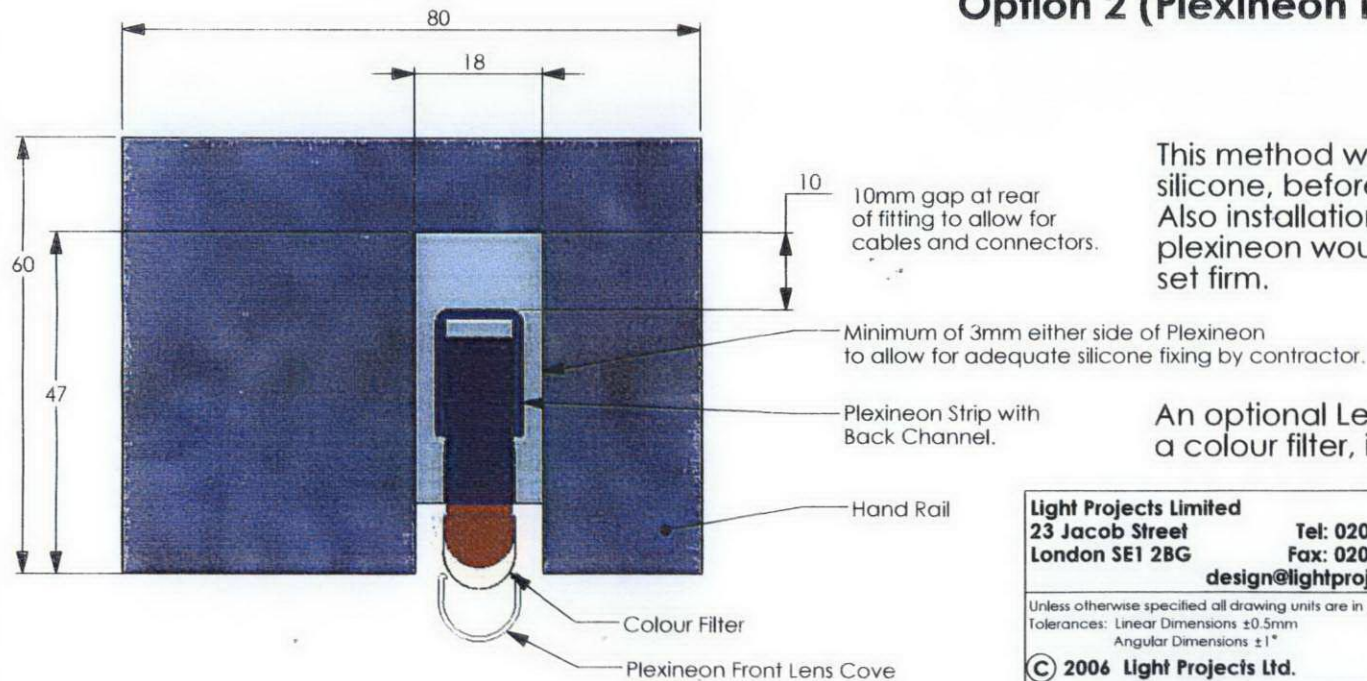

This method would require a sharp knife to remove the silicone, before Plexineon can be removed if ever required. Also installation is more complicated than option 1, as the plexineon would need to be supported fully until silicon is set firm.

An optional Lens cover would be needed to attach a colour filter, if non-standard colour is required.

**Light Projects Limited**  
23 Jacob Street  
London SE1 2BG  
Tel: 020 7231 8282  
Fax: 020 7237 4342  
design@lightprojects.co.uk

Unless otherwise specified all drawing units are in mm  
Tolerances: Linear Dimensions  $\pm 0.5\text{mm}$   
Angular Dimensions  $\pm 1^\circ$

© 2006 Light Projects Ltd.

This drawing is the copyright of Light Projects Ltd and may not be reproduced in whole or part without written permission

Project Ref.	P12774		
Project Name	Ted Baker London		
Material	Plexineon Light Strip		
Finish	-		
Drawing Name	Plexineon Mounted in Hand Rail Options		
Drawn By	SL	Date	23-06-06
Sheet	1 of 1	Scale	1:1
Drawing No.	42935-00-C0	Rev.	-

SCALE 1:1 @ A3.

